



RCA RCT6272W23 Display Replacement

In this guide, you will learn how to replace...

Written By: Ross Pennala



INTRODUCTION

In this guide, you will learn how to replace the display screen on your RCA RCT6272W23 tablet.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Soldering Iron](#) (1)


[Spudger](#) (1)

Step 1 — Case




- Use a Phillips #00 screwdriver to remove both 4.1 mm screws at the top of the device which hold it together.

Step 2

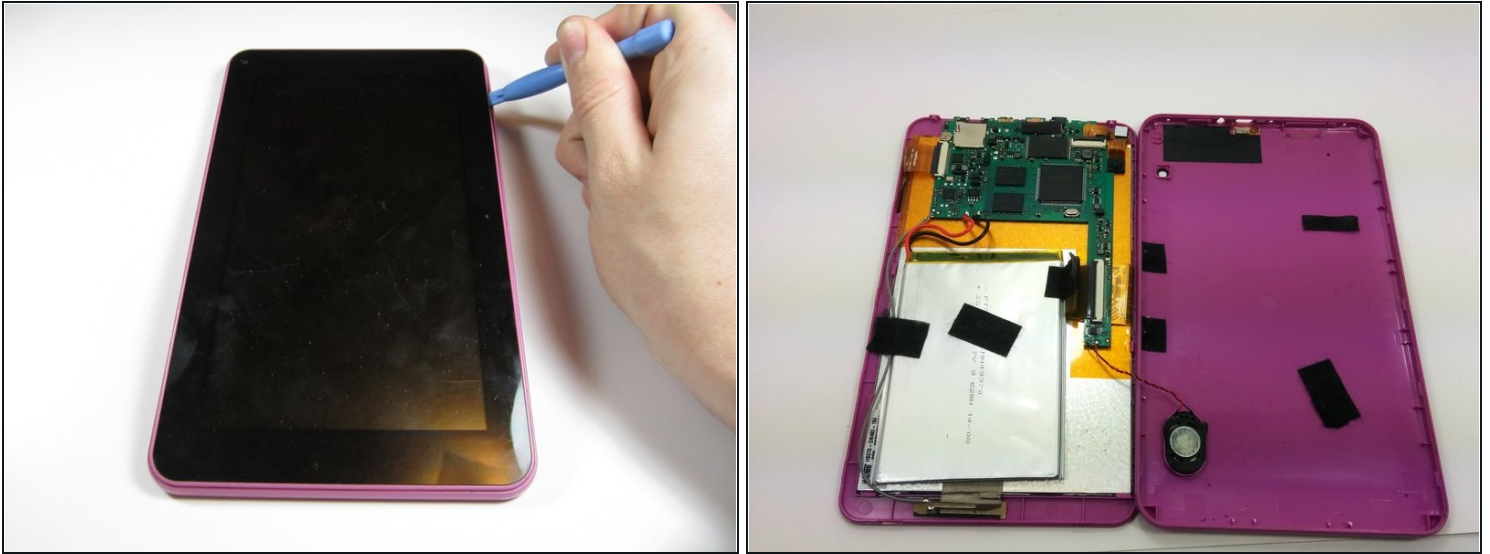


- Press the plastic opening tool into the space between the front and back portions of the case.
- Run it along the perimeter of the device to unhook the plastic tabs.
- Gently pull both sides apart.
⚠ The speaker is connected to the back cover, so be careful when separating.

Step 3 — Motherboard

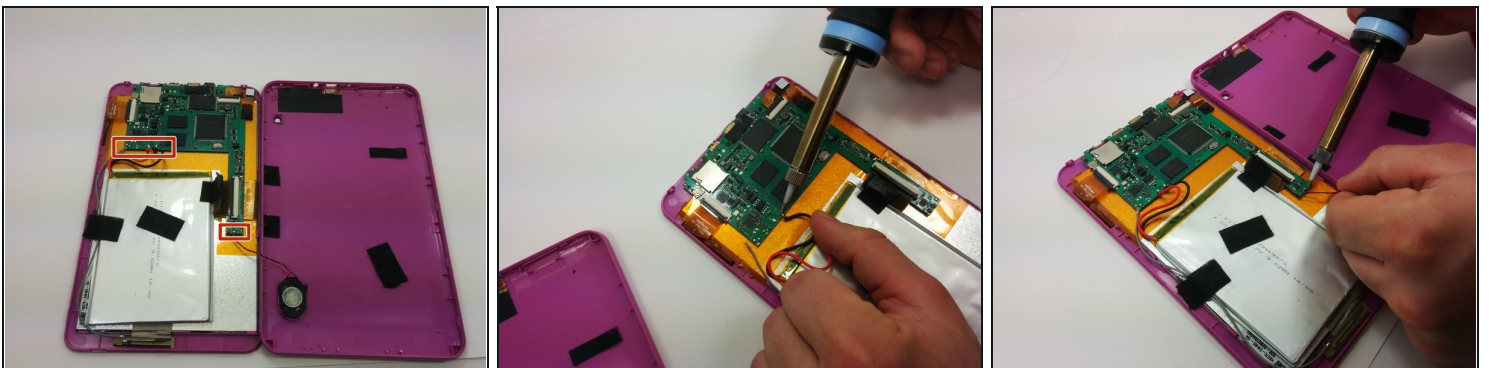

- Use a soldering iron to remove the soldered connections on the motherboard
⚠ For your safety and to ensure a correct repair, be sure to exercise caution when using the soldering iron.
- ① For more information about soldering, check out this [guide](#).

Step 4

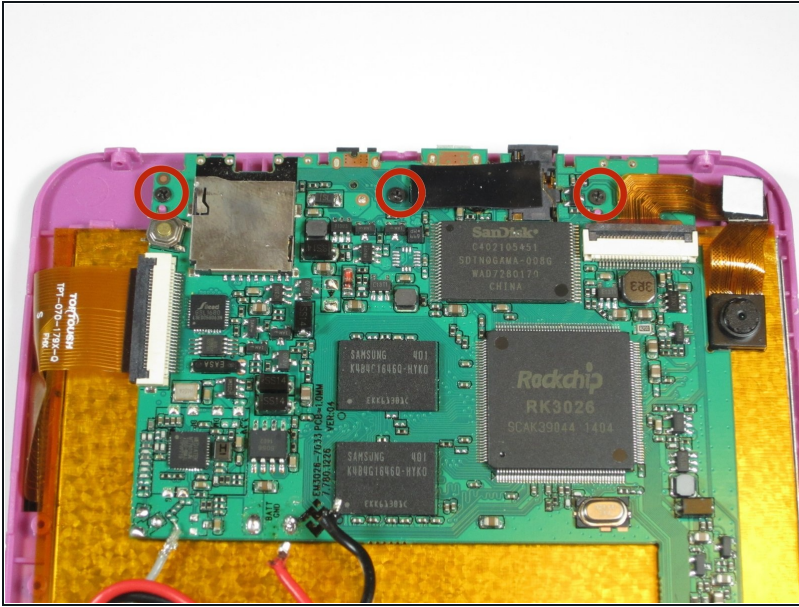


- Use a philips #00 screwdriver to unscrew the three 4.064mm screws which attach the motherboard to the front of the device.

Step 5




- Use your fingers to pop the three black tabs up to release the flat plastic data transfer cables.

Step 6

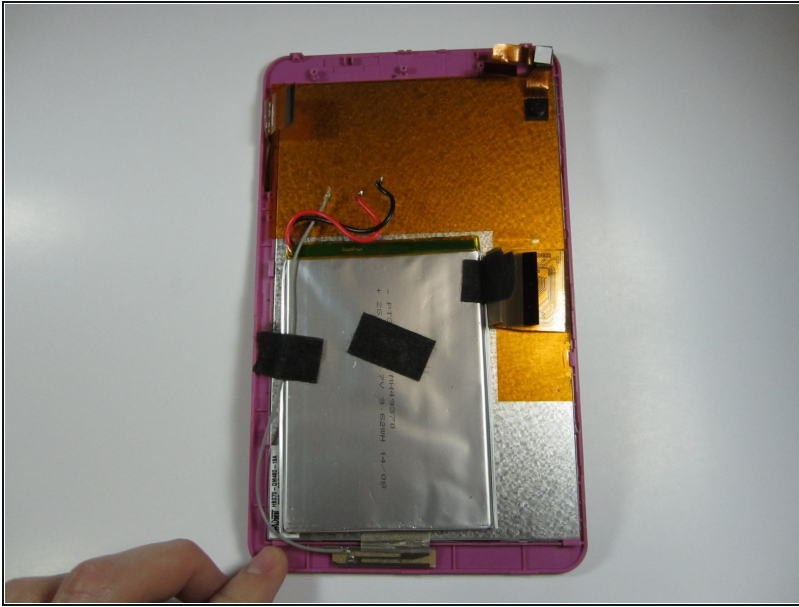


- Pull up the motherboard from the rest of the body.

Step 7 — Display

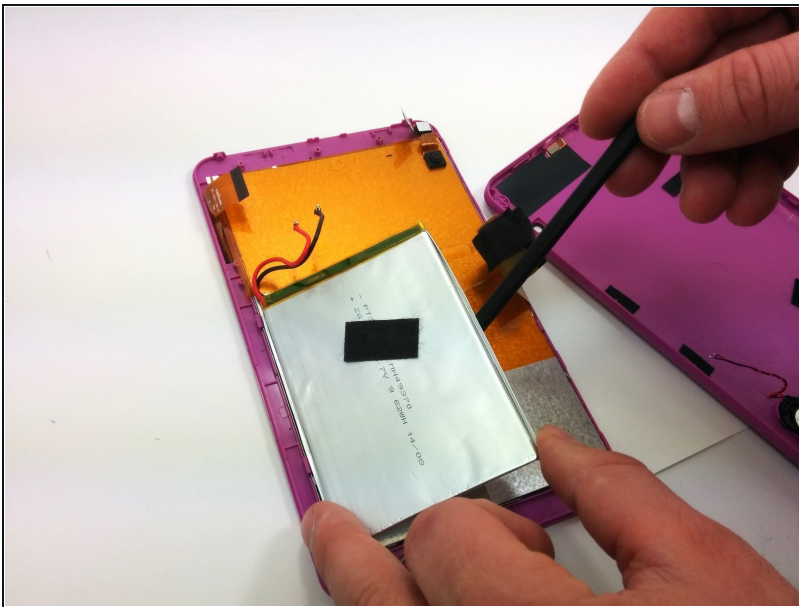

- Using a plastic opening tool, pry the battery off of the rest of the body.
- ① The battery is attached to the display with double sided tape. It may be best to have a new strip of double sided tape to reattach the battery.

Step 8

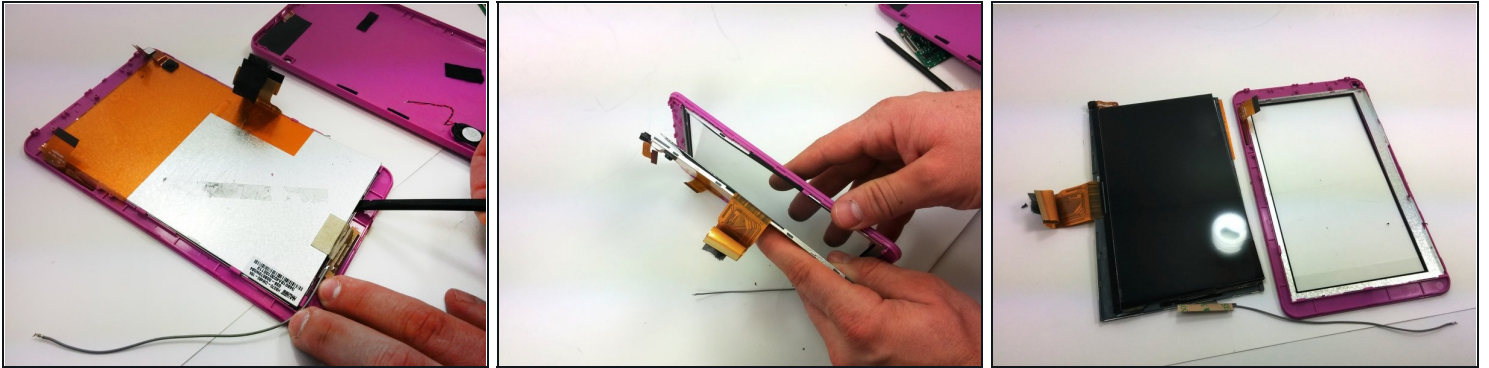

- Using a spudger, separate the display surface from the front cover.
⚠ Be careful not to break the tabs that hold the display screen in place.
 - ① A second spudger may be necessary to help hold the position of the display screen.
-

To reassemble your device, follow these instructions in reverse order.