


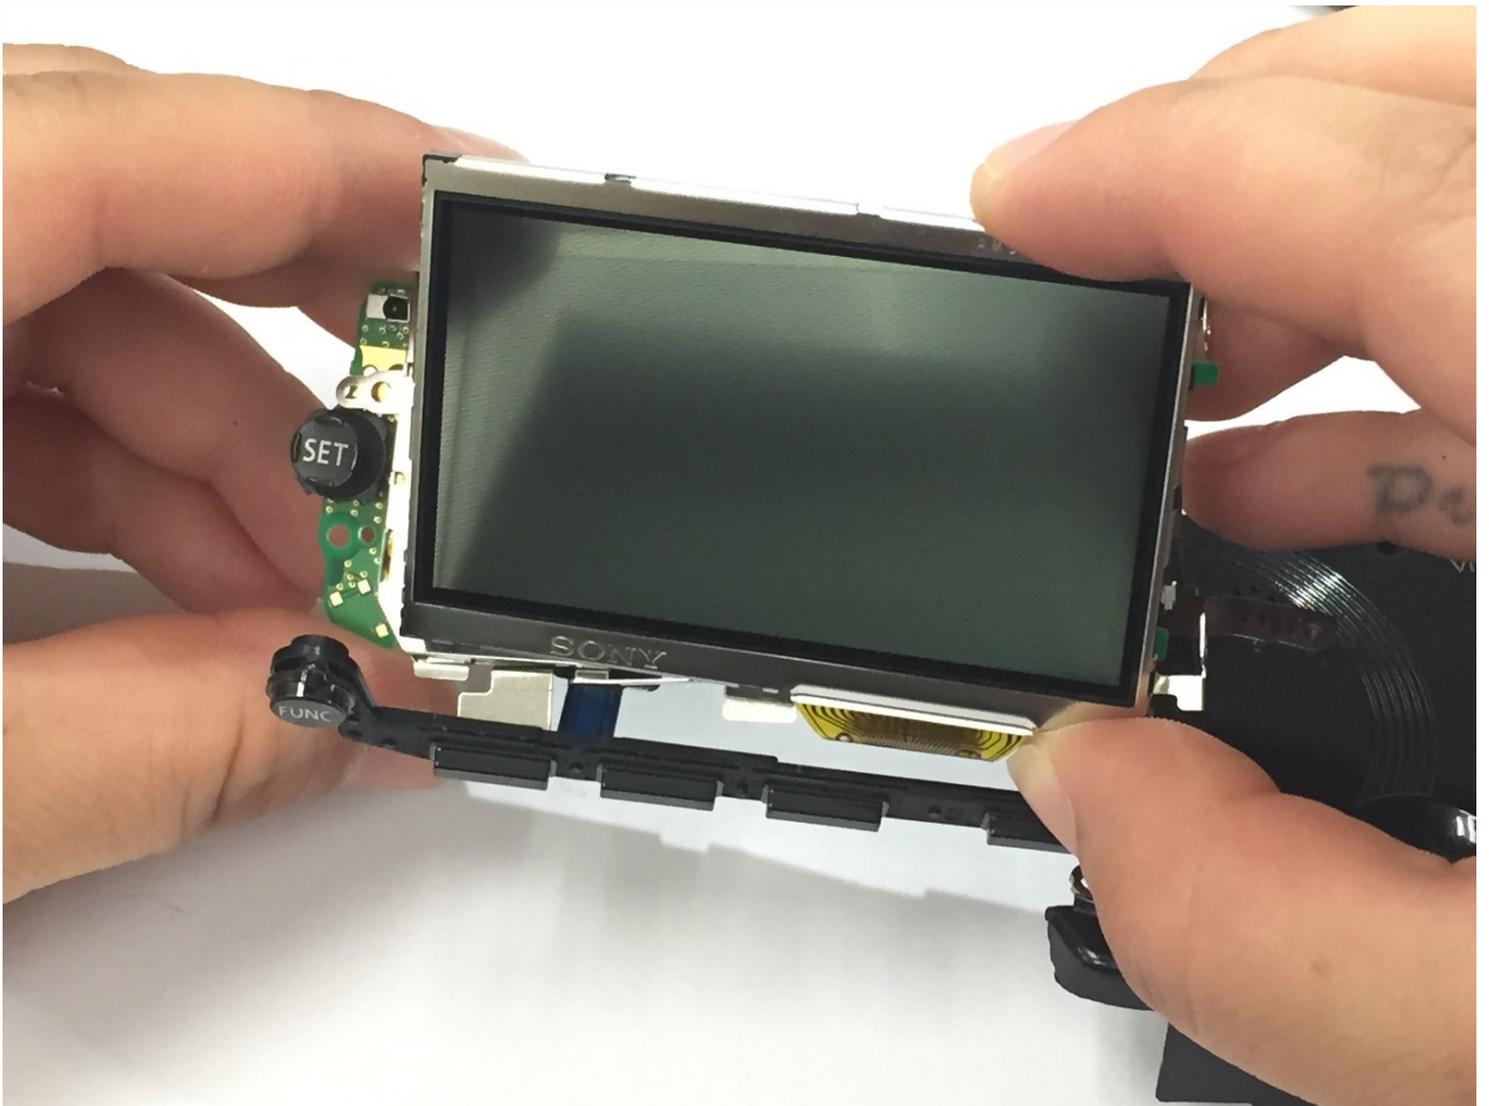

Canon Vixia HF S10 Camcorder LCD Screen Replacement

This guide will show you how to properly...

Written By: Karina



INTRODUCTION

This guide will show you how to properly disassemble the camera in order to safely remove and replace the LCD screen of your Canon Vixia HF S10 camcorder.

The LCD screen of the camera displays the settings of the lens, as well as the photos and/or videos taken on it. If used long enough with high brightness, the screen may become discolored and leave a "burned in" image on it. You will know if you have screen burn if you see things like the camera ISO and shutter speed left on the screen when you use other features of the camera.

While following the guide make sure you are being careful, as breaking any wires or connections may prevent the screen or other parts of the camera from working. Also check to make sure the camera is fully powered off before starting.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Magnetic Project Mat](#) (1)

Step 1 — LCD Screen



- Turn the camcorder upside down and remove the three 3x4 mm Phillips screws securing the black plastic case.

Step 2




- Flip open the LCD screen.
- Remove the three 3x4 mm Phillips screws securing the black panel plastic case.
- From the inner corner in between the panel and the LCD screen, remove the two 2x2.5 mm Phillips screws and the 3x4 mm Phillips screw.

Step 3




- Using your fingers, remove the black plastic covering. Underneath the covering, you will find a screw hinge.
- Remove the 2x2.5 mm Phillips screw located at the top of the screw hinge.
- Using your fingers, remove the panel from the base of the camcorder.

Step 4

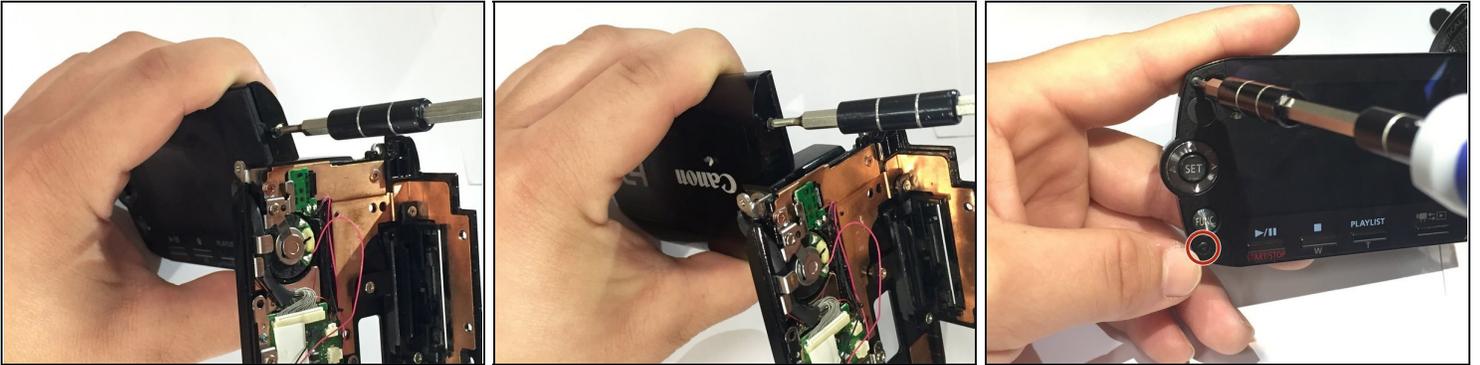


- Remove the 2x2.5 mm screw from the right side of the plastic case surrounding the LCD screen.
- Flip over the plastic case and remove the 2x2.5 mm screw.
- Remove the two 2x2.5 mm screws from the front plastic case.

Step 5

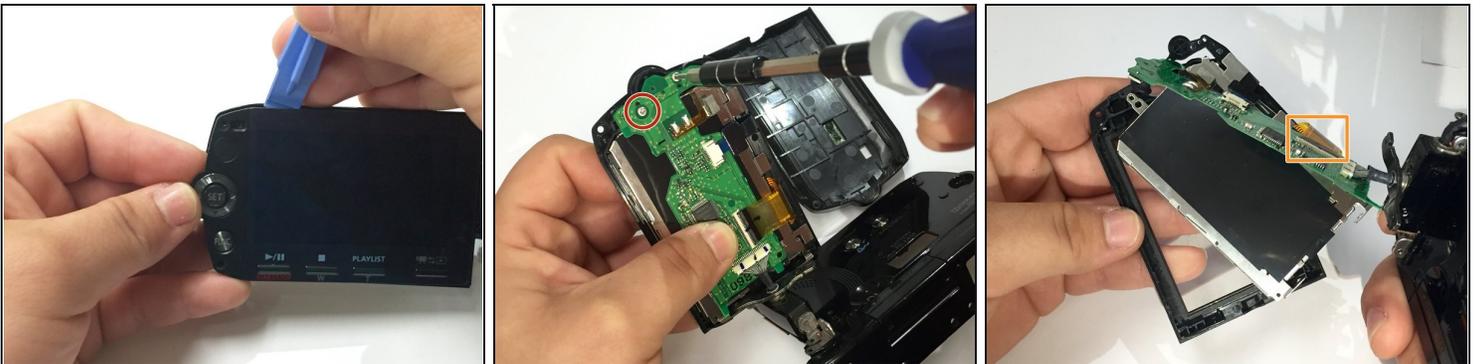

- Using a plastic opening tool, pry off the plastic case surrounding the LCD screen.
- Remove the two 1x2.5 mm screws from the motherboard on the back of the LCD screen.
- Gently pull off the motherboard from the LCD screen.
⚠ Be aware of the orange tab when separating the motherboard from the LCD screen.

Step 6

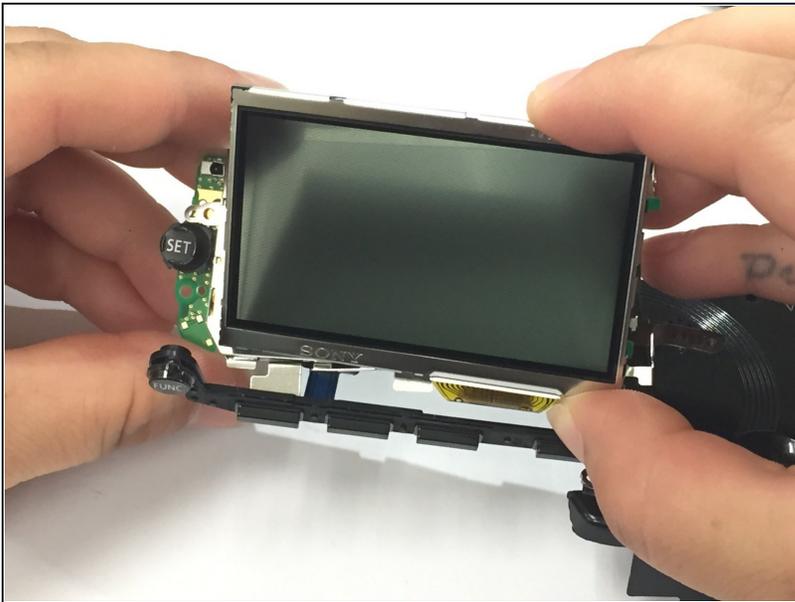

- Using your fingers, remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.