



HP Pavilion dv5000 RAM Cover Replacement

This guide will tell you how to remove the RAM...

Written By: Alex Kwok



INTRODUCTION

This guide will tell you how to remove the RAM Cover.



TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — RAM Cover



- Remove the two 5mm Phillips screws on the right side of the RAM cover.
- Lift the right side of the RAM cover, and remove it.

To reassemble your device, follow these instructions in reverse order.