



# JVC GR-D93U LCD Screen Replacement

This guide will show you how to take apart and replace the LCD screen.

Written By: Lindsay



## INTRODUCTION

The LCD Screen on the GR-D93U is where the viewer can see the video that is being recorded and is where the playback is displayed. It is important to have the screen and can be frustrating if the screen is cracked or won't display content. The process of replacing the screens involves unscrewing a lot of screws so have a place that you will be able to keep the screws.



### TOOLS:

- [Metal Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [JVC GR-D93U LCD Screen](#) (1)

## Step 1 — LCD Screen




- Unscrew 3 mm Phillips #0 screws around the LCD Screen. You will have to turn the screen to get the screws on the bottom of the screen.

## Step 2





- Pry apart the plastic casing around the screen using a flat spudger tool

## Step 3

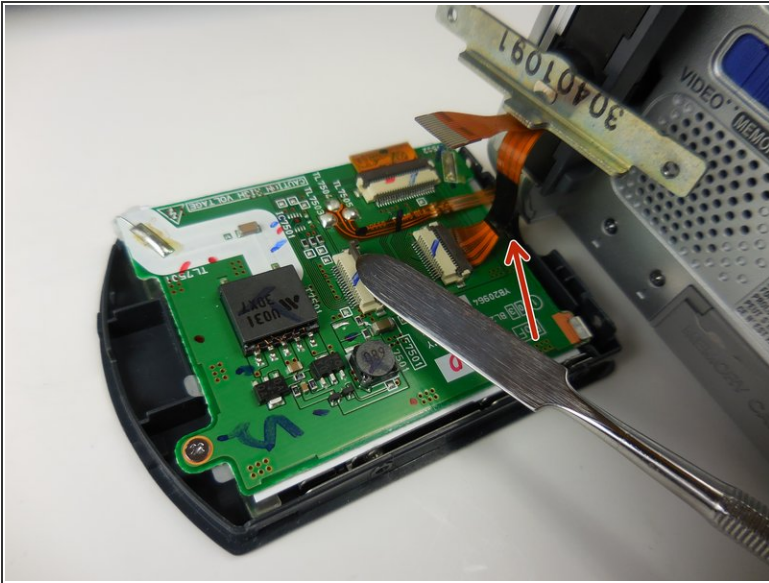

- Carefully remove the wires connected to the screen from the black box. Now you will be able to separate the screen from the camera.



## Step 4

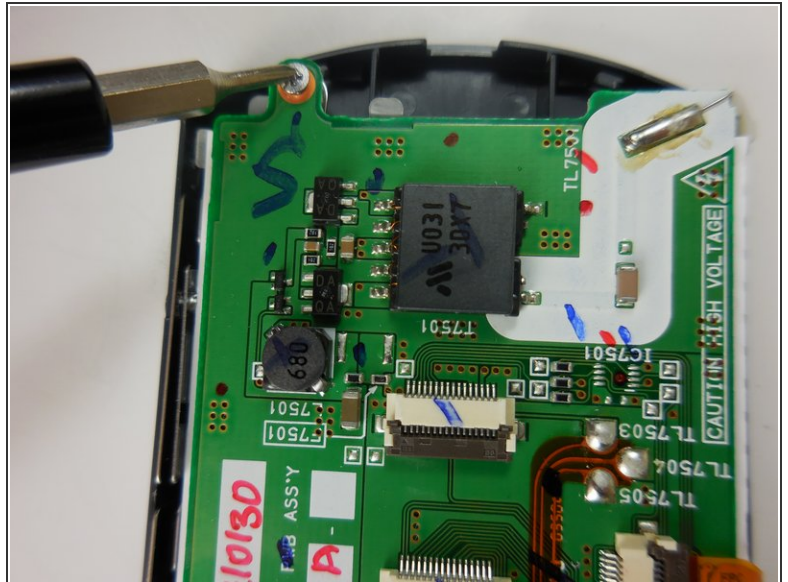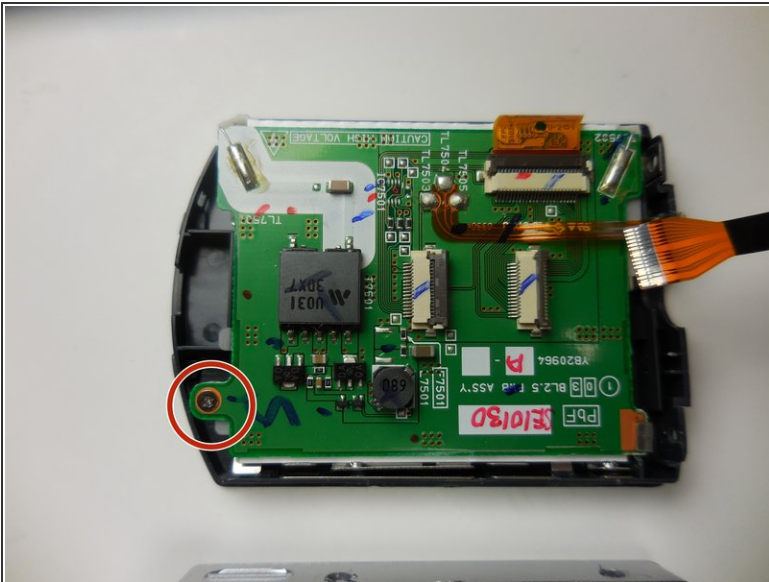

- Unscrew the 5 mm Phillips #0 screw that is connecting the screen to the plastic casing.



## Step 5

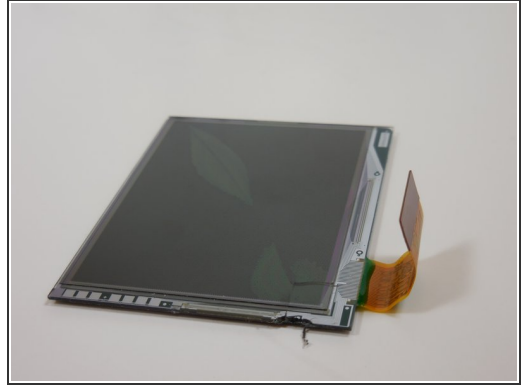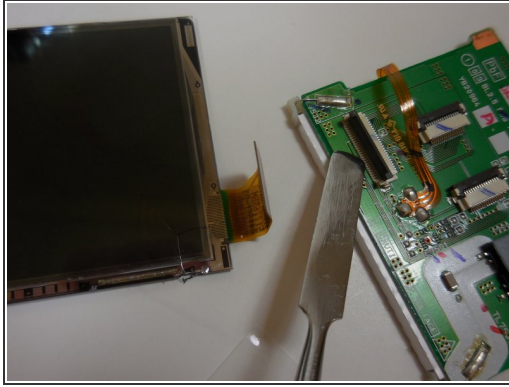

- You can now take out the screen to be replaced. Carefully remove cables from the data board.

To reassemble your device, follow these instructions in reverse order.