




# Lenovo ThinkPad T500 Speaker Replacement


Written By: nicO Gurney

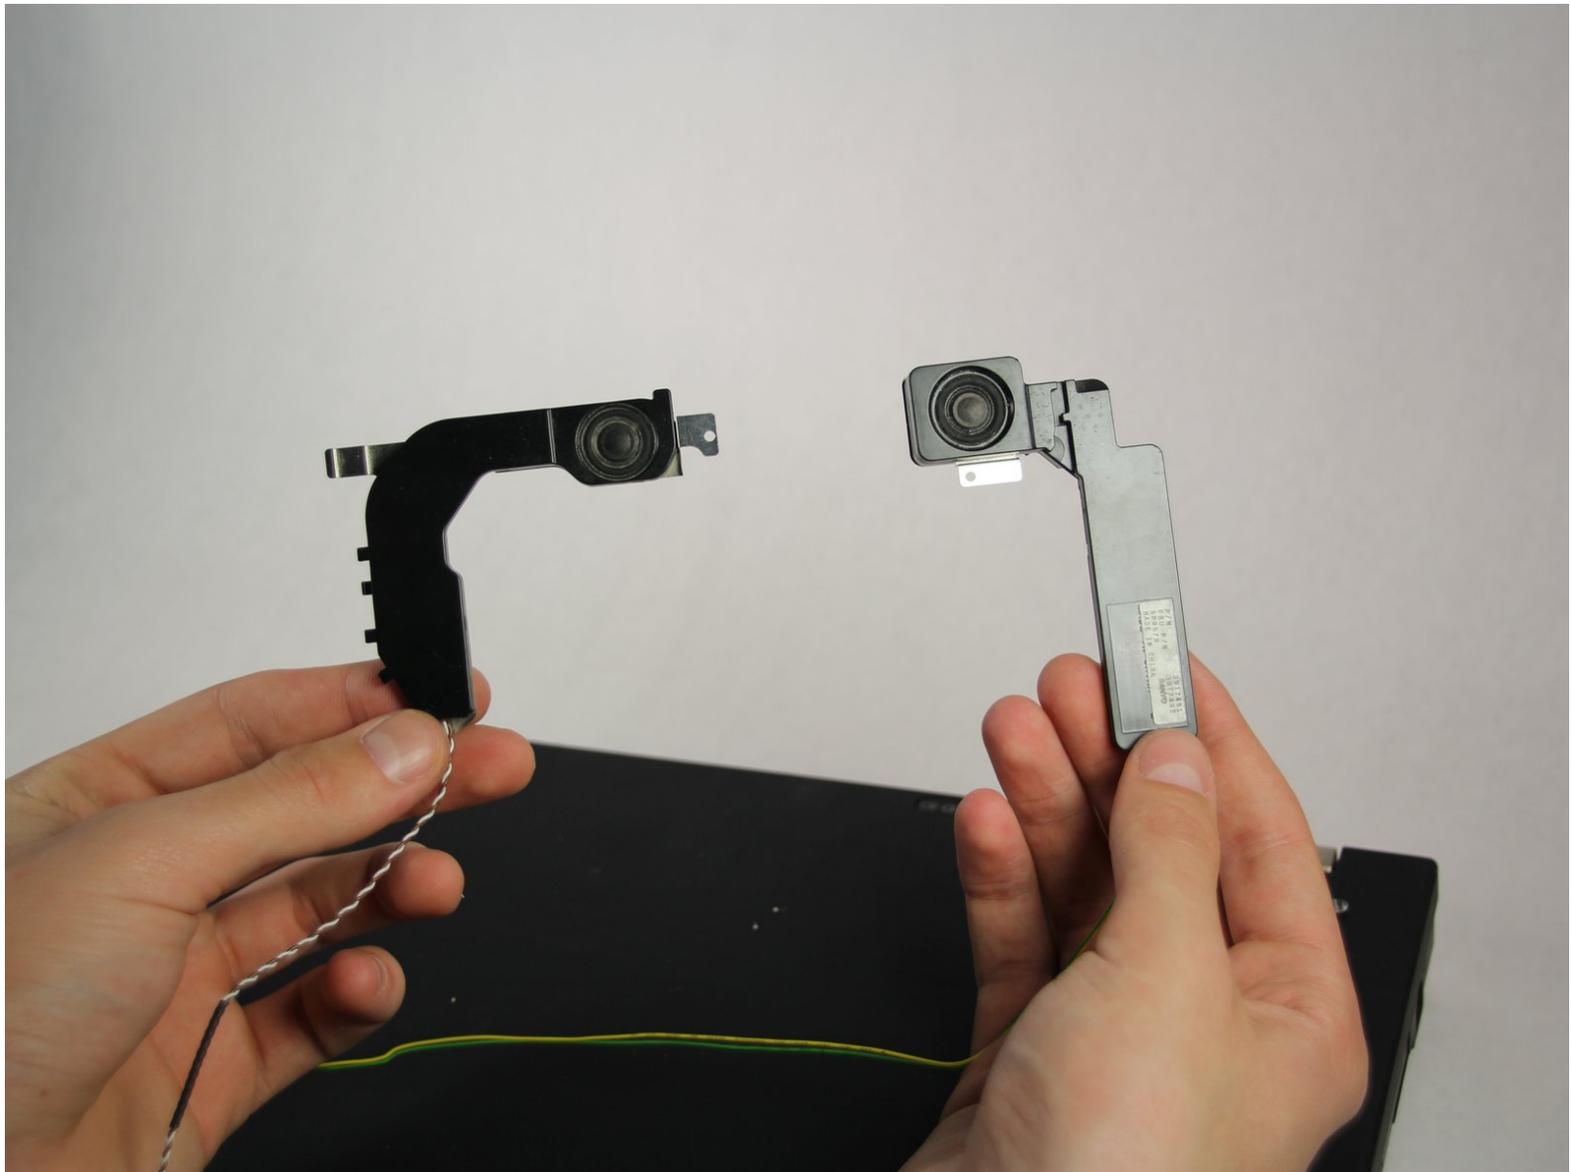

 **TOOLS:**


- Phillips #0 Screwdriver (1)
  - Spudger (1)
-

## Step 1 — Speaker

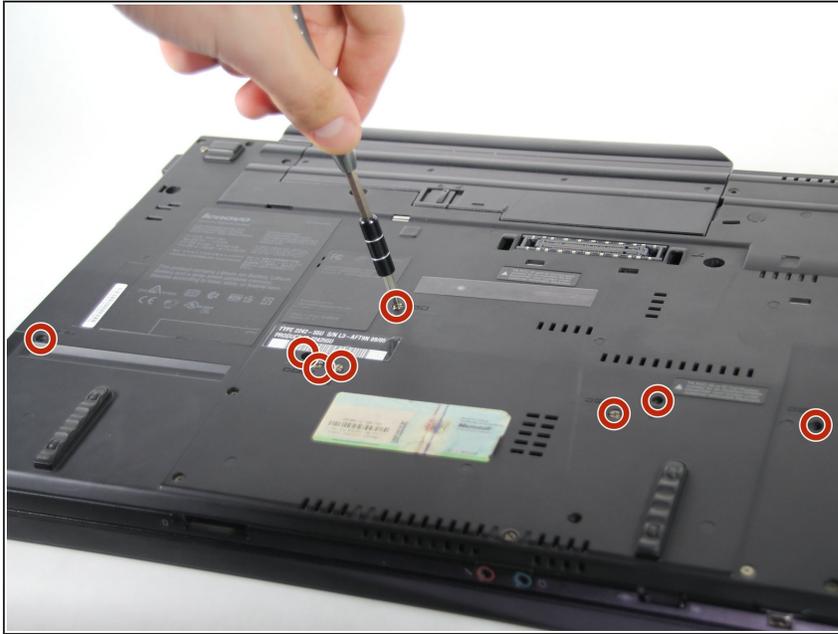


- Remove the eight 14mm screws using the Phillips #0 Screwdriver.

## Step 2

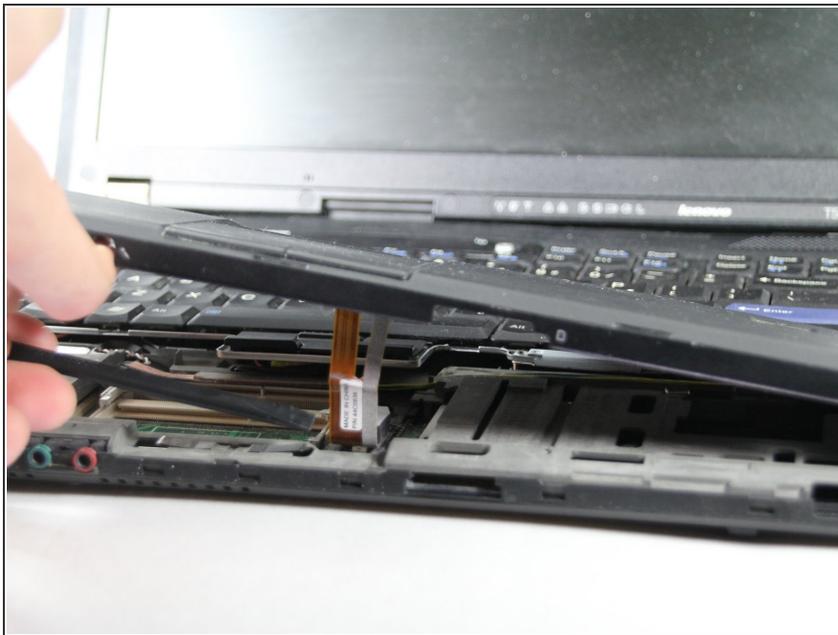

- Lift the palm rest panel up.
- ⚠ Be sure to lift the panel **slowly**; there is a ribbon cable attached to the bottom.

### Step 3

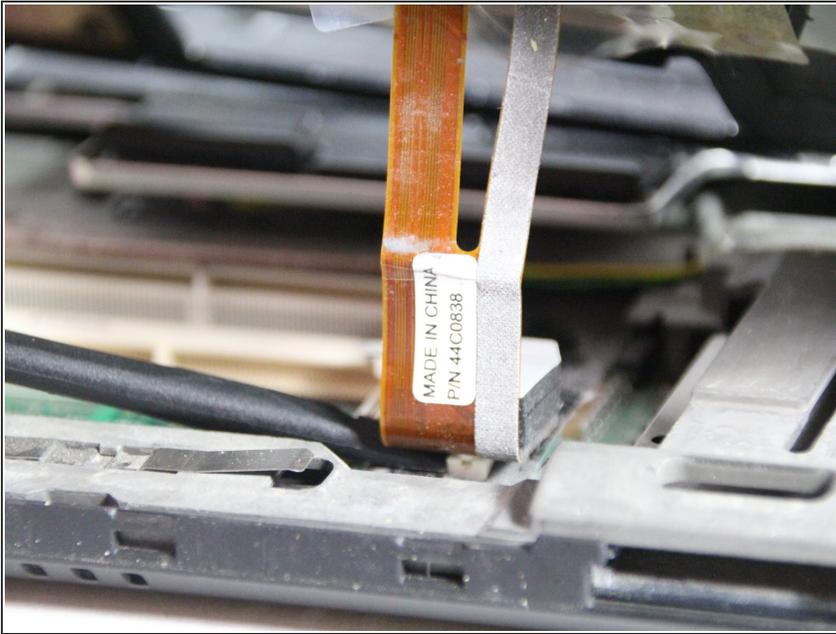

- Use the spudger to disconnect the ribbon cable.


### Step 4



- With the panel disconnected, lift the keyboard.


**⚠** As with the panel, lift the keyboard **slowly**; there is a ribbon cable attached to the bottom.

## Step 5

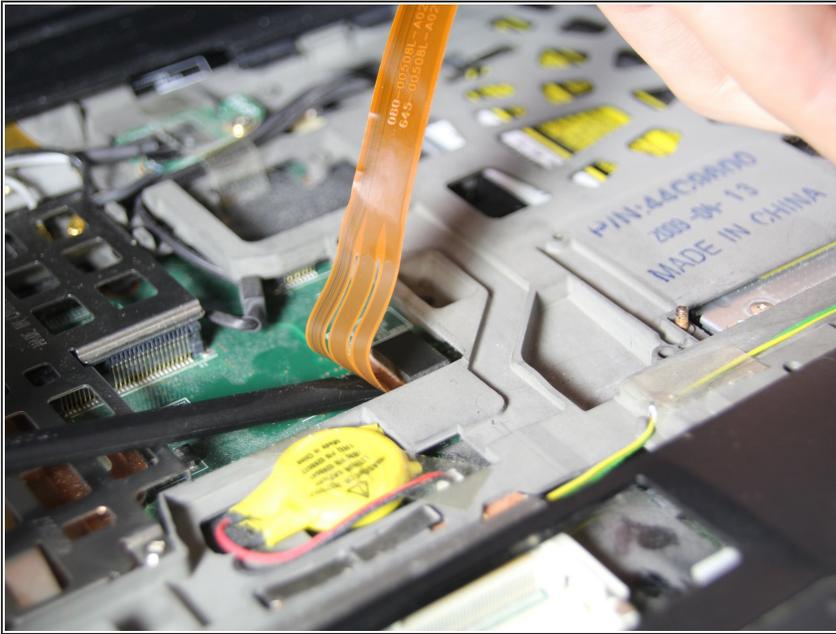

- Disconnect the ribbon cable with the spudger.

## Step 6

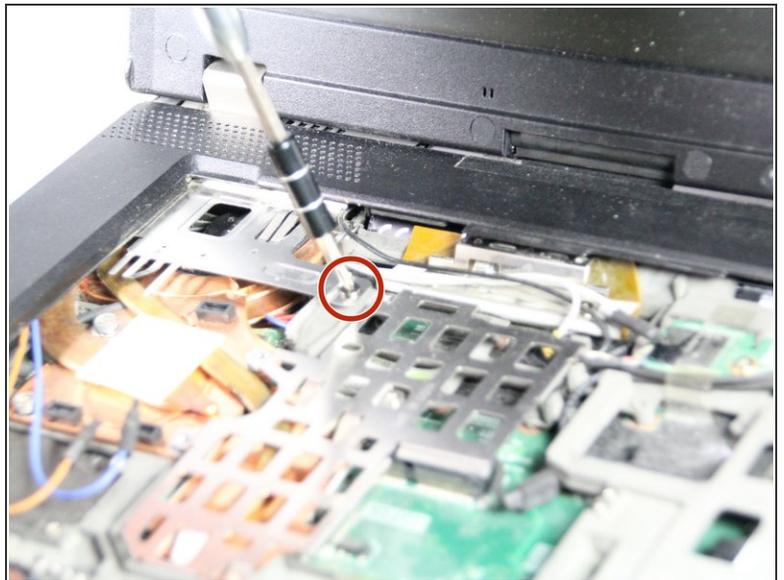

- Remove the keyboard and the panel.
- Using the Phillips #0 Screwdriver, remove the three 3 mm screws that are at the bottom sides and near the top-left of the speaker cover.
- Disconnect the orange and blue cables next to the left side of the speaker cover.


This document was generated on 2023-05-05 12:19:32 PM (MST).

## Step 7



- Remove the speaker cover by carefully pulling up and towards you.

## Step 8

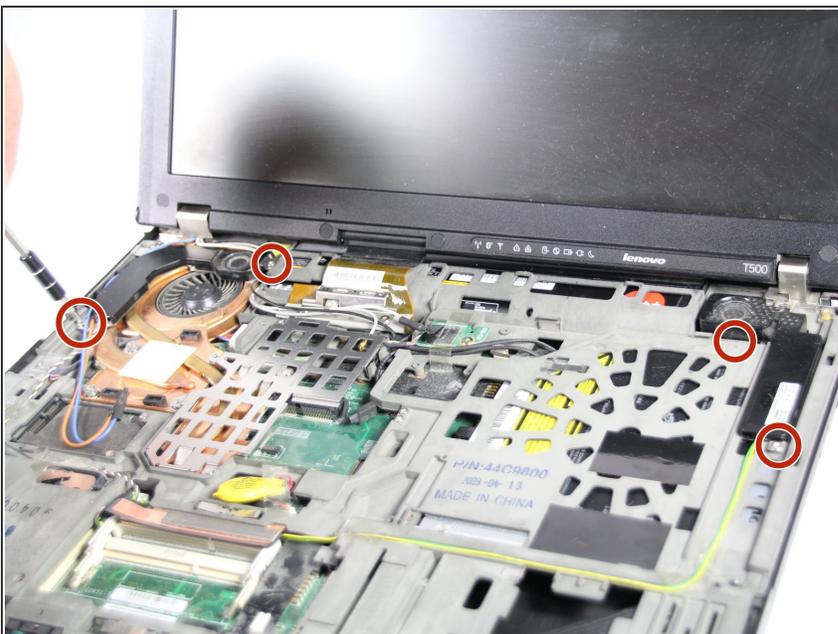


- Remove the four 3mm screws on the speakers with the Phillips #0 Screwdriver.

## Step 9




- Using the spudger, lift the tape over the right speaker's wires.
- ⓘ Although the right speaker is unscrewed, it can't be removed from the laptop yet!

## Step 10

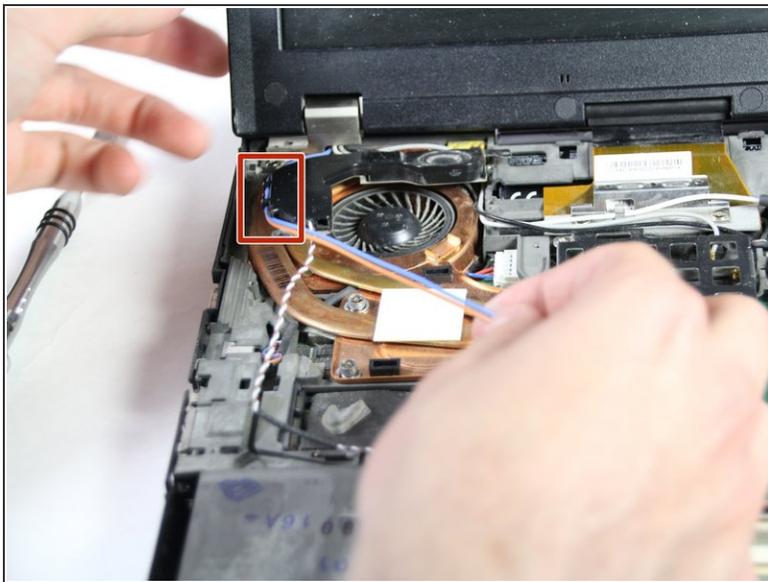

- Detach the blue and orange cables from the left speaker's clamps.

## Step 11

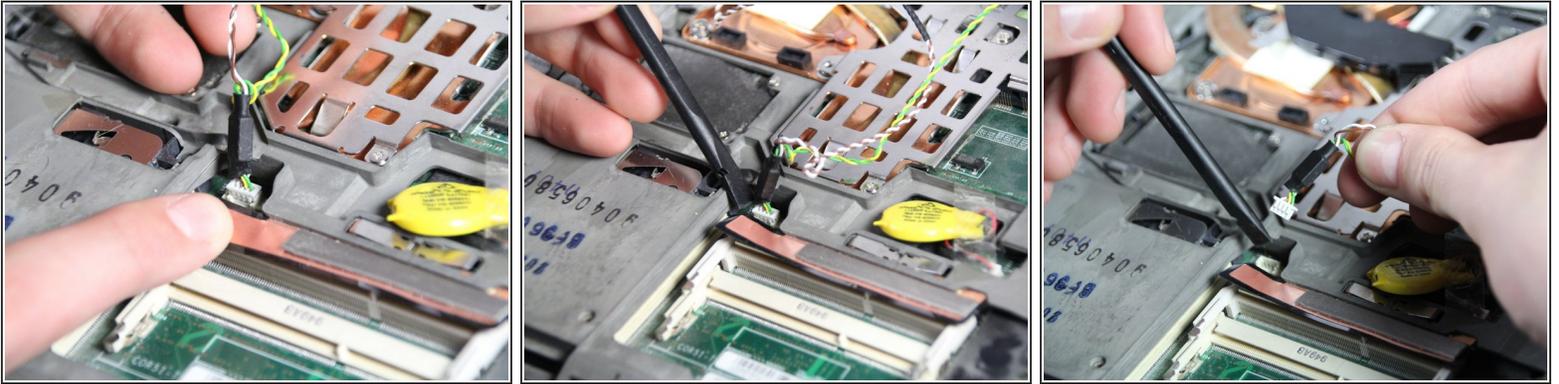

- Locate the plug in the middle of the laptop that connects both the left and right speakers.
- Use the spudger to unplug the speaker wires.

## Step 12



- Remove the speakers.

To reassemble your device, follow these instructions in reverse order.