



 **TOOLS:**

- Phillips #1 Screwdriver (1)
  - Spudger (1)
-

## Step 1 — Case



- Flip the toy over, so that the keypad is facing away from you.
- Remove two Phillips-head screws.
- Insert a plastic spudger (or 4!) into the marked holes, and push down and towards the edge to release each catch.
- ⓘ It's possible to release each catch one-at-a-time, but easier if you have 4 tools and do them simultaneously.
- ⚠ This requires quite a bit of force; be careful.

## Step 2



- Separate the two halves of the case to expose the inner PCB, speaker and battery holder.

To reassemble your device, follow these instructions in reverse order.