




Acer Aspire 5100 RAM Replacement

Upgrade or replace RAM.

Written By: Brad Rollinson

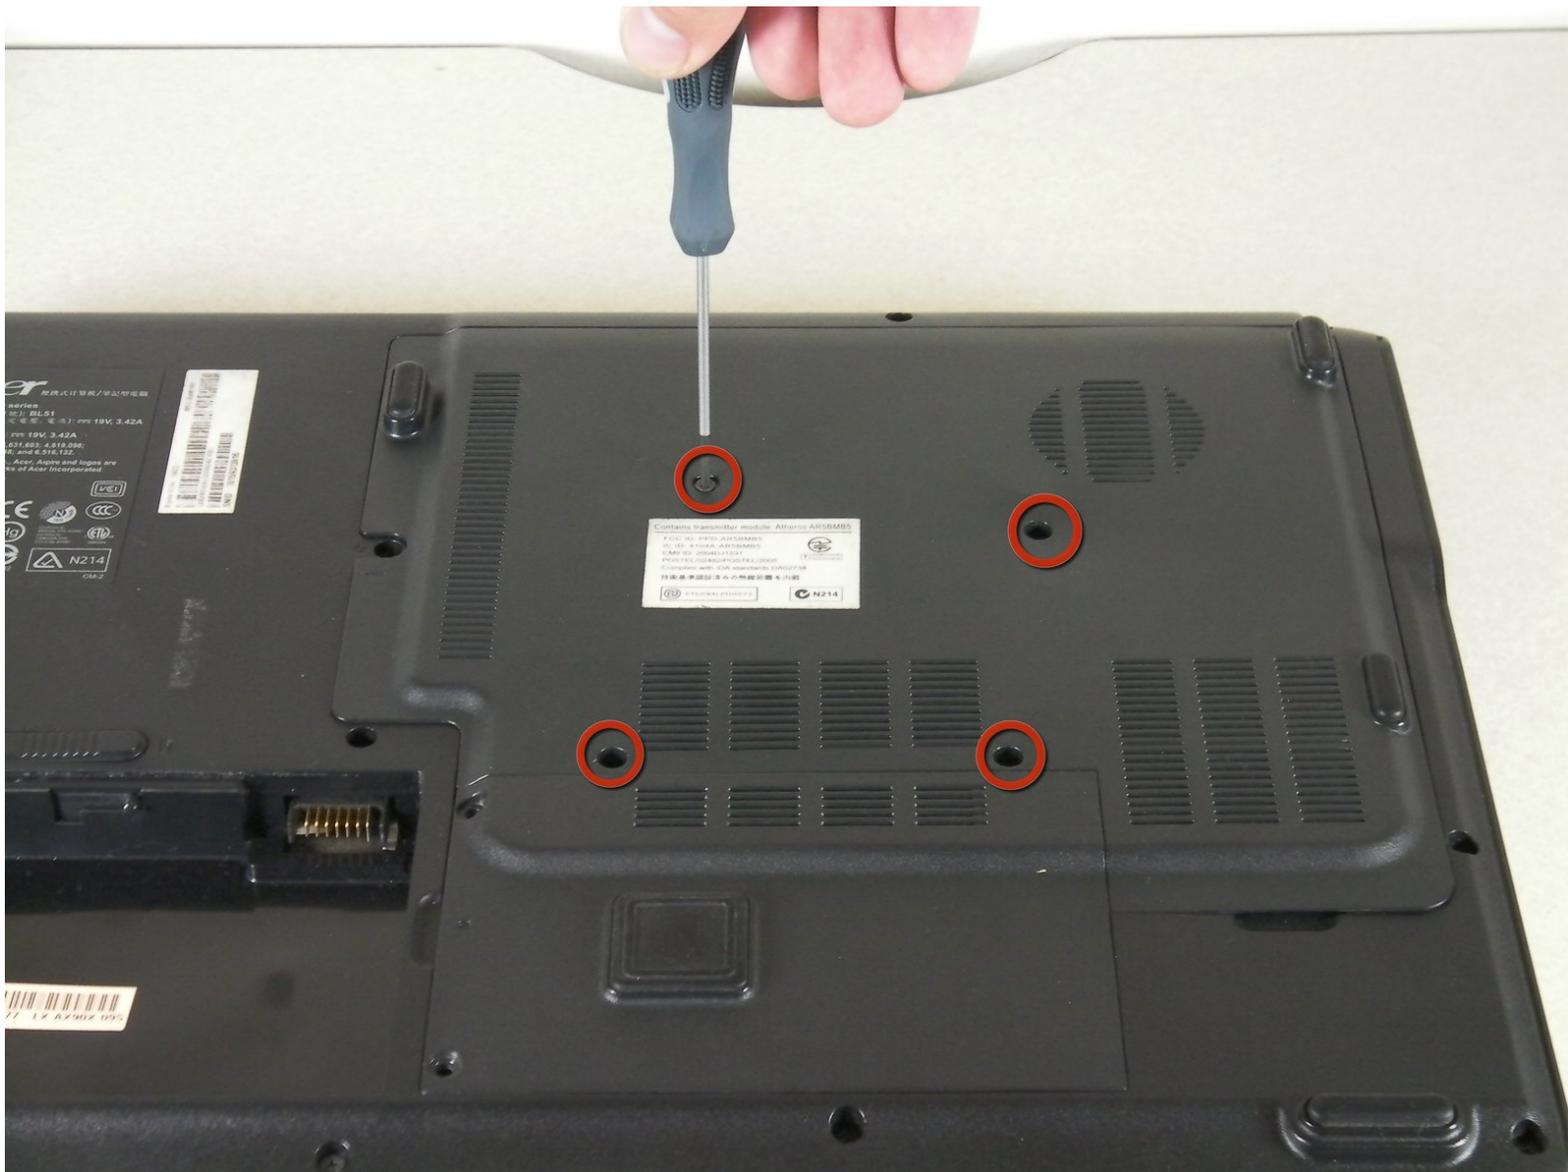

INTRODUCTION

Upgrade or replace RAM.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [PC2-5300 1 GB RAM Chip](#) (1)
- [PC2-5300 2 GB RAM Chip](#) (1)

Step 1 — RAM

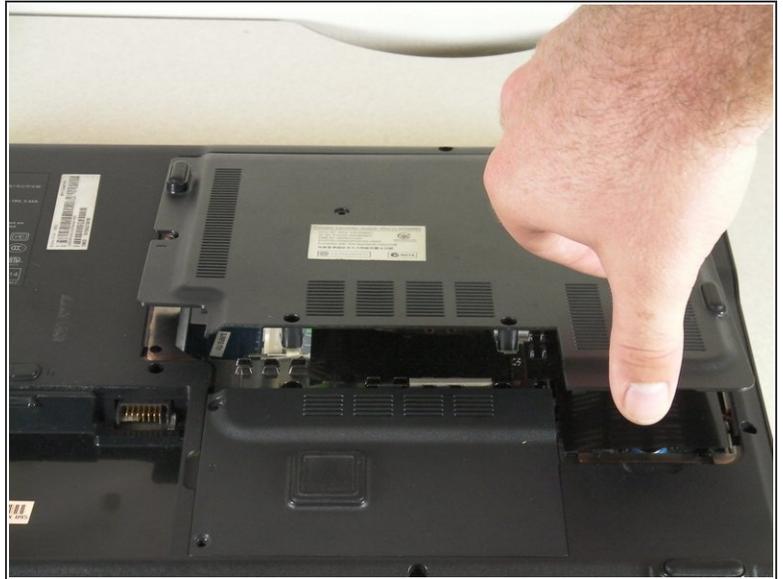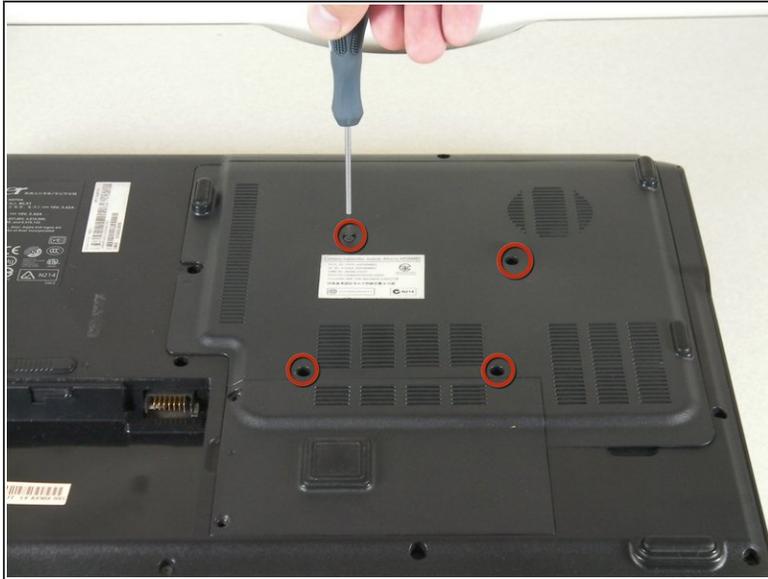

- Remove the screws on the large panel.
- Lift up the panel.

Step 2

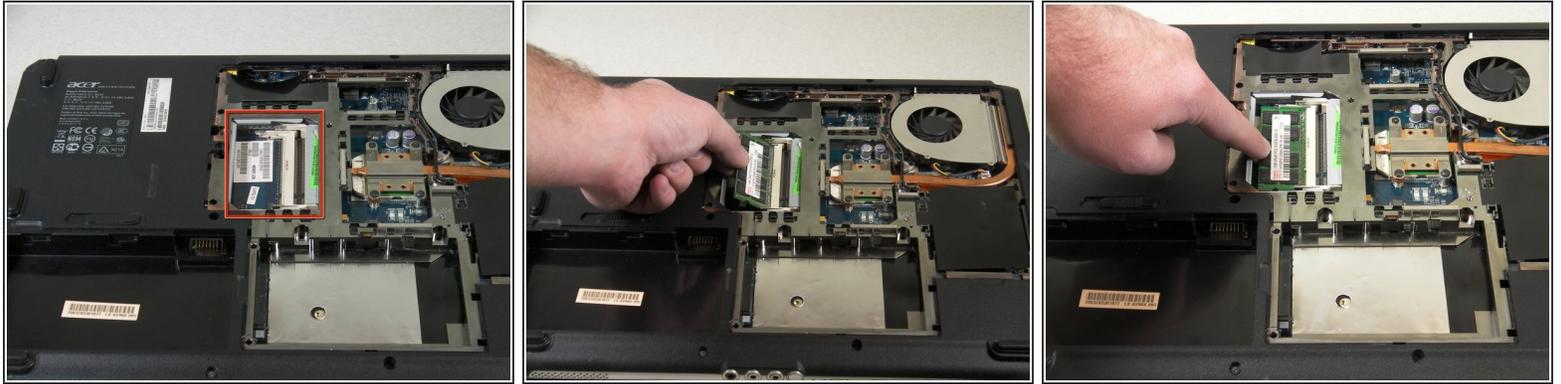

- The RAM slots are located in the corner opposite to the cooling fan.
- ⓘ To remove existing RAM cards: there are clips holding the sides of each card. Simultaneously spread both right and left clip and the card will pop upward. Then it can easily be pulled out.
- Slide in the RAM at a 45 degree angle.
- Press down on the RAM until it snaps into place.
- ⚠ A good amount of pressure is needed to snap it in place.
- ⓘ Install the RAM in the left (lower) slot before installing RAM in the right (upper) slot

To reassemble your device, follow these instructions in reverse order.