



Disassembling Toilet Pull Chain Spring Clasp

Disconnect the toilet pull chain from the lever arm in a gravity flush toilet.

Written By: Ron Davis



INTRODUCTION

Prereq-only guide for disconnecting the toilet chain spring clasp in a gravity flush toilet.

Step 1 — Disassembling Toilet Pull Chain Spring Clasp



- Squeeze open the spring clasp that connects the pull chain to the tank lever.
- Disconnect the spring clasp from the tank lever.

To reassemble your device, follow these instructions in reverse order.