



Disassembling RCA CC310 Left Cover

Remove the left cover of an RCA CC310 camcorder.

Written By: Ashley Katchadourian



INTRODUCTION

This guide will instruct you to take the left cover off of the camcorder.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Disassembling RCA CC310 Left Cover



- Remove the six 7.9mm Phillips #0 screws on the back and bottom.
- Remove the one 3.8mm Phillips #0 screw on the bottom.
- Remove the two 7.5mm Phillips #0 screws on the back and bottom.

Step 2

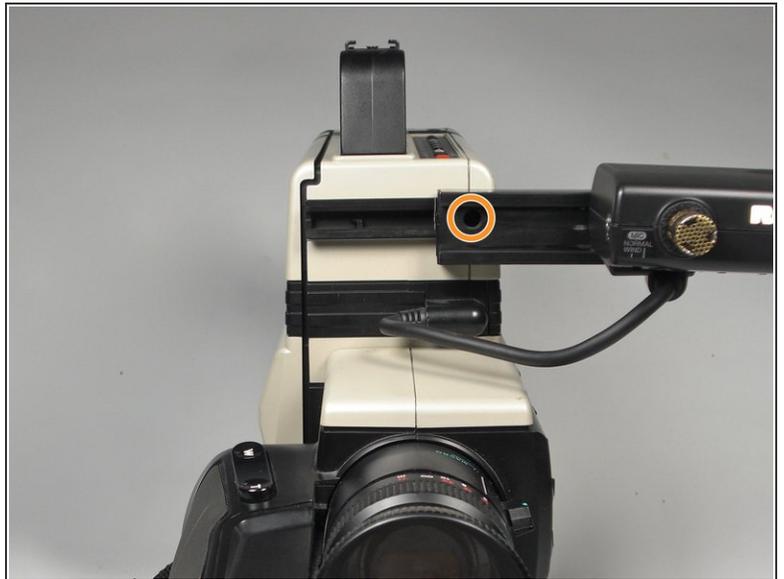


- Remove 5.8mm Phillips #1 screw from the side button panel.
- Slide the viewfinder all the way to the right and remove the 7.9mm Phillips #0 screw.

Step 3



- Pry along the seam on the top side near the buttons with a spudger.

Step 4

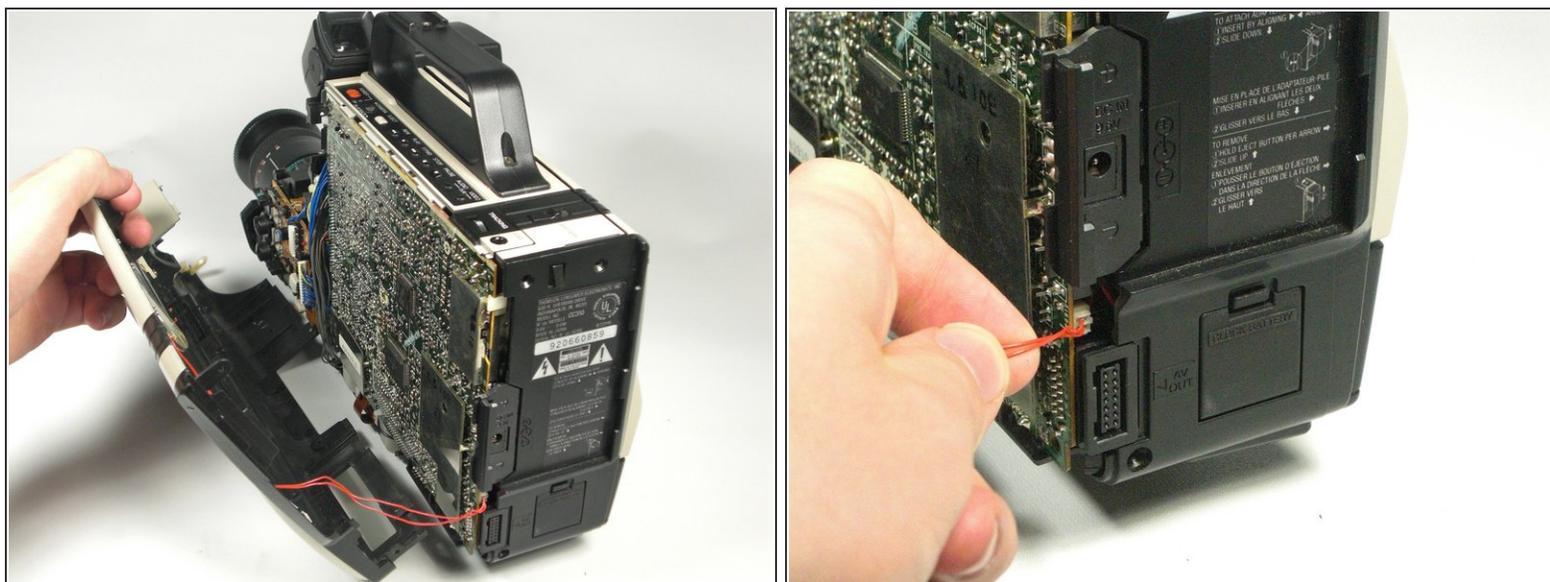

- Pull the left panel away from the rest of the camcorder.
- Unplug the red speaker cable located at the rear of the device.

 Be careful to not pull too hard. The speaker cable is still connected to the panel and it can rip.

To reassemble your device, follow these instructions in reverse order.