




# Canon Powershot SD790 IS Release Button Replacement

Removing Release Button



Written By: Stanley

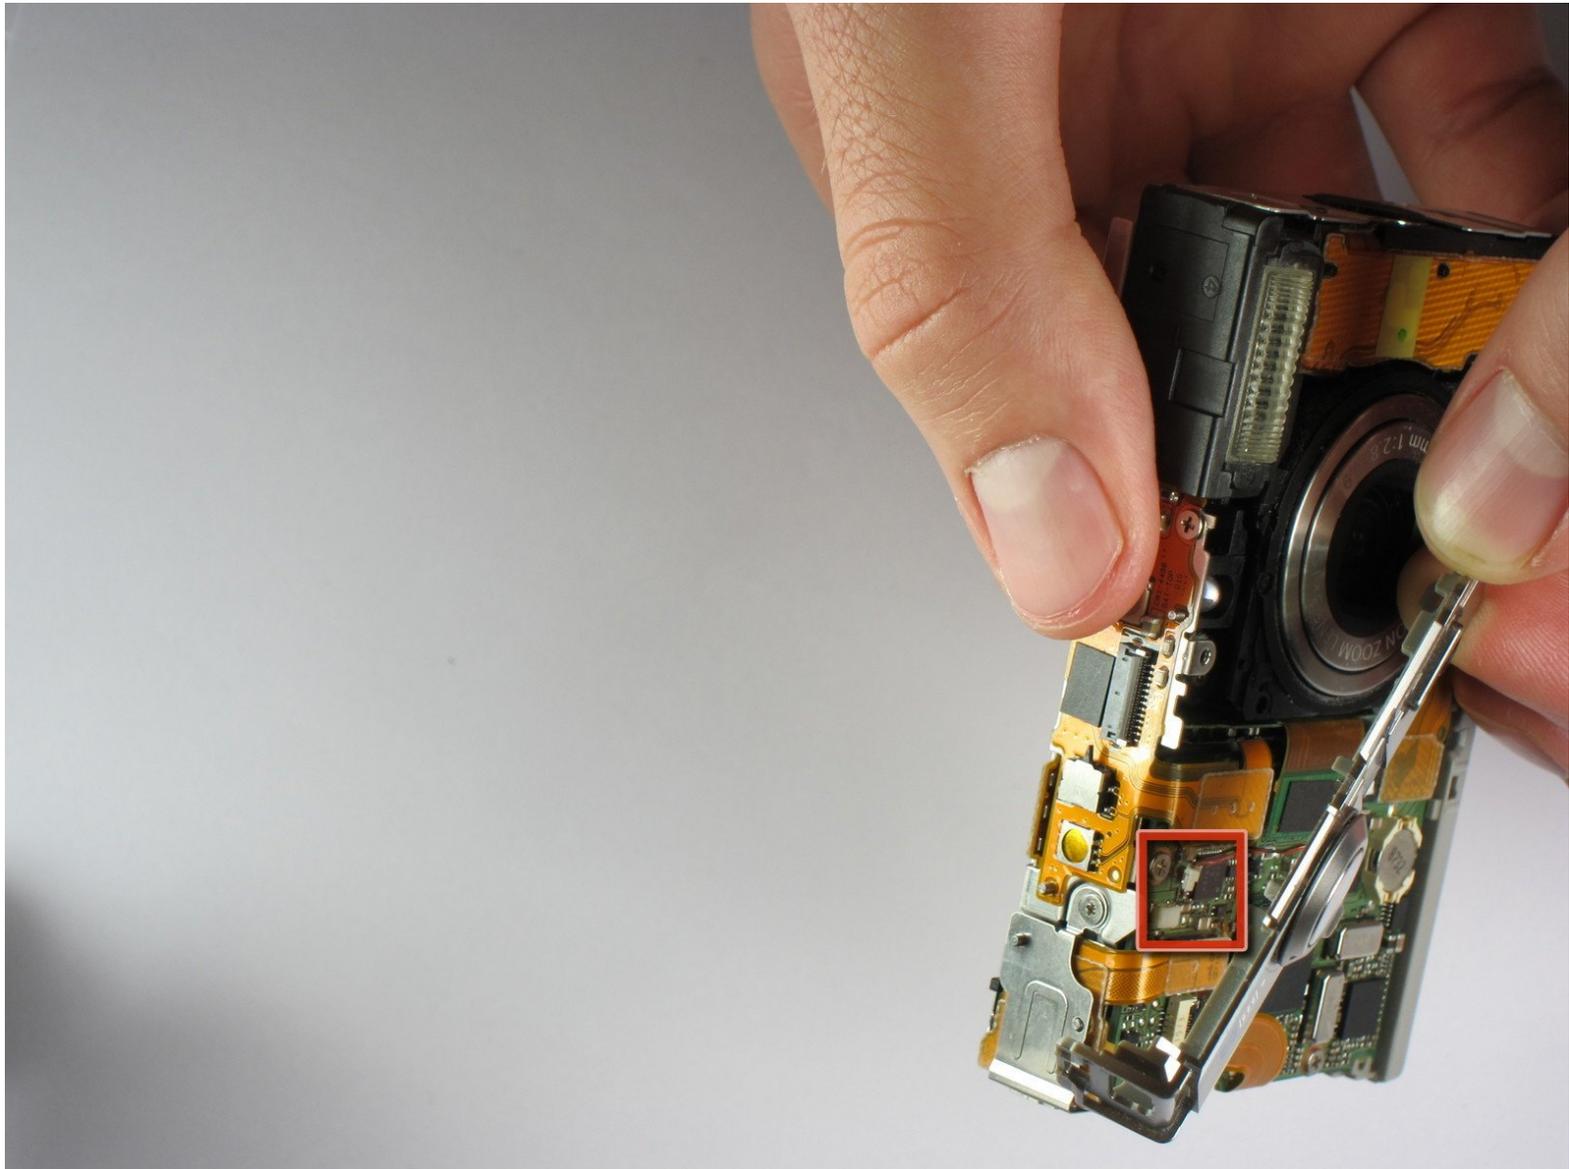

## INTRODUCTION

Take off outer cover, detach cable, and remove Release Button.

## Step 1 — Release Button

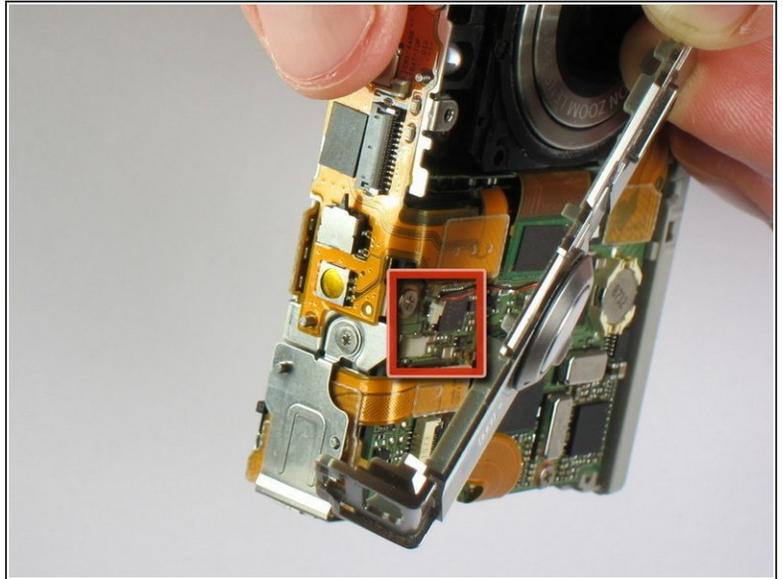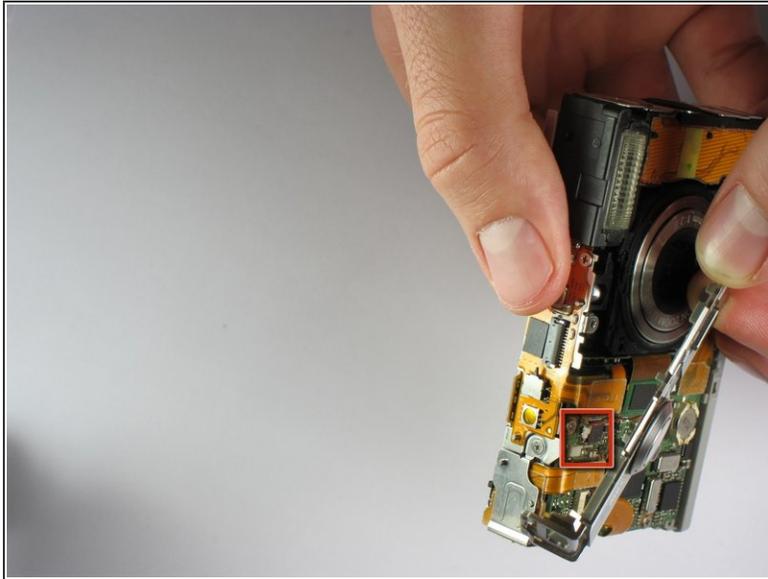

- Squeeze the sides of the plastic connector while gently detaching the cable. Your shutter release button is now removed and can be replaced.
- The shutter release button assembly should only be attached by a small red and black wire, with a plastic connector at the end.

To reassemble your device, follow these instructions in reverse order.