


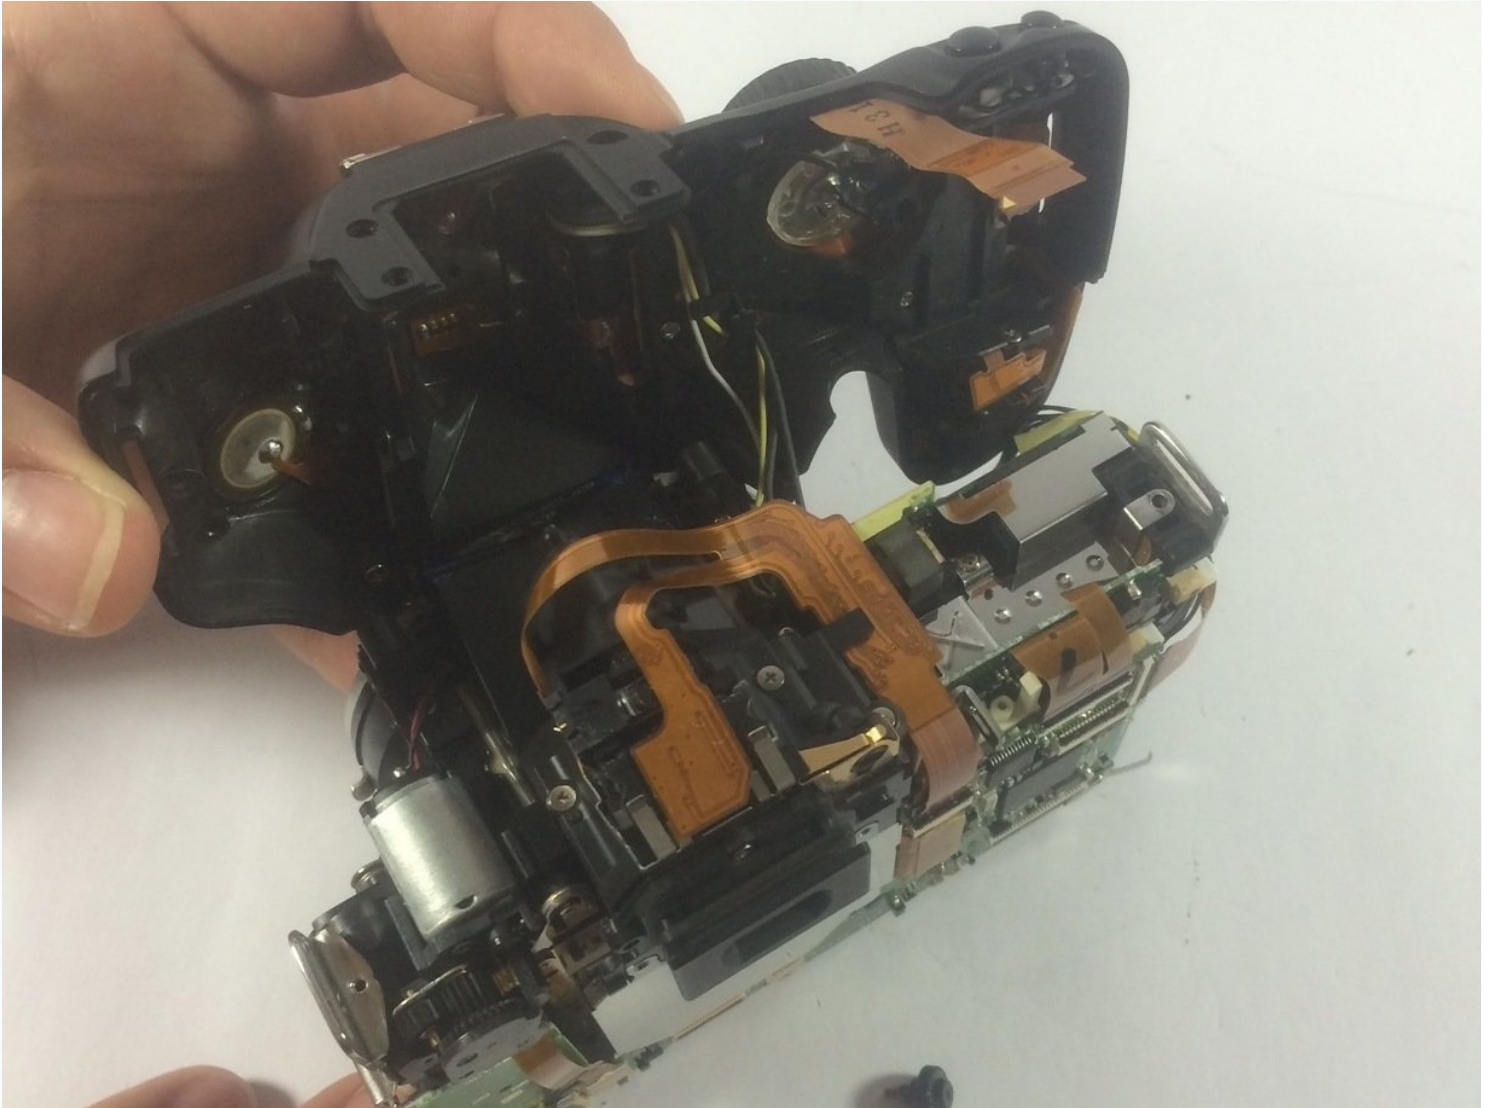

Disassembling Canon EOS Rebel XS Top Panel

Use this guide to remove the top panel of the...

Written By: Daniel Bussone



INTRODUCTION

Use this guide to remove the top panel of the camera.

TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)


Tweezers (1)

Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

Step 2

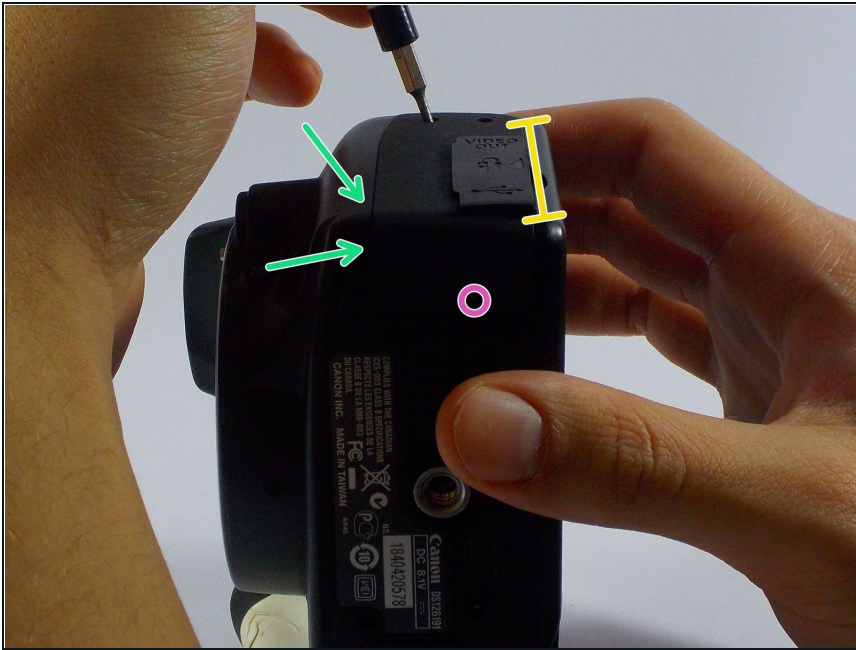

- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

Step 3 — Disassembling Canon EOS Rebel XS Front Cover



- Remove three medium length screws from the bottom of the camera

Step 4




- Remove the two medium length screws on the front panel of the camera above the lens mount.
- Once you done, you may use the Spudger to panel from non-grip side.
- ① If you start on the grip side, it will be more challenging to loosen the panel.

Step 5 — Back Cover




- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use [tweezers](#) to lift the panel.

Step 6

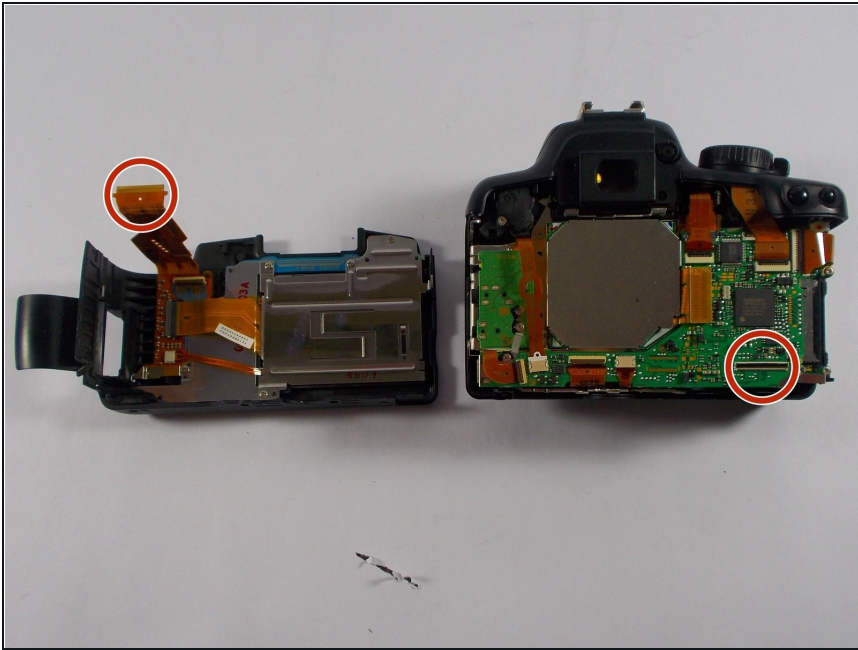


- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

Step 7 — Top Panel

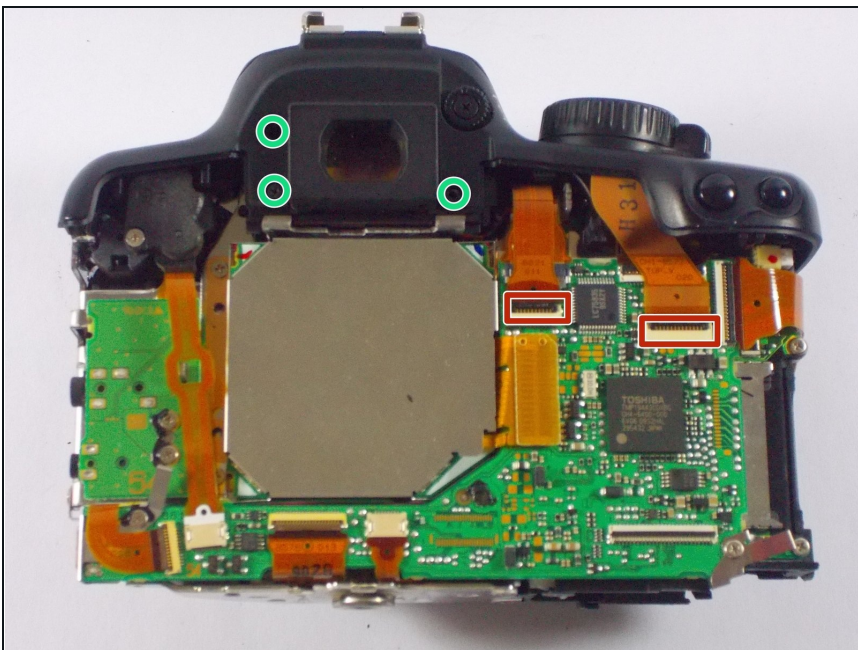

- Remove the following ribbons with the [tweezers](#) by gently pulling on them.
- Remove the three black screws, near the eye piece, using the Phillips Screwdriver.


Step 8

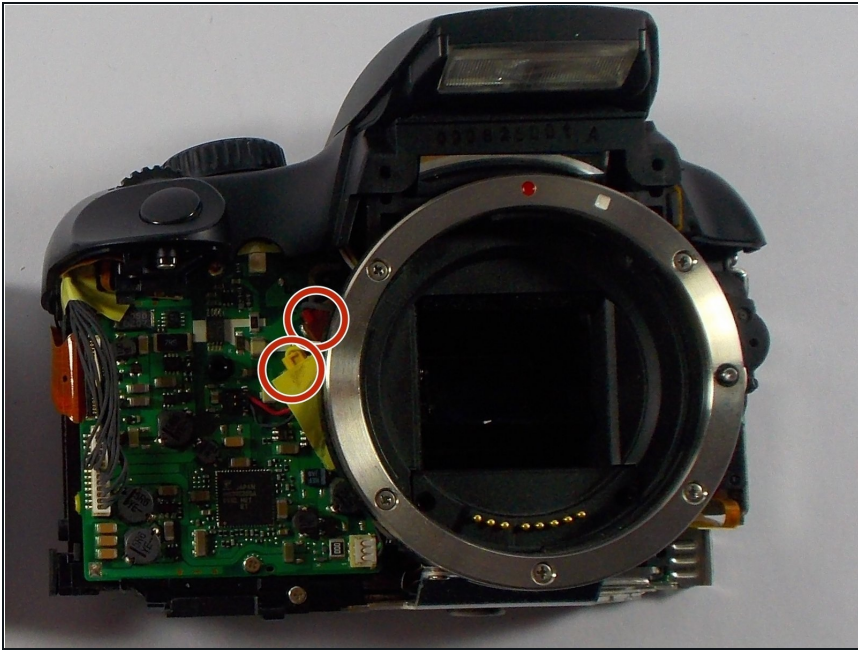

- Remove the cable heads attached on the front side of the camera next to the lens mount.

⚠ Be gentle when pulling wires loose, use the tweezers to remove the wires.

Step 9

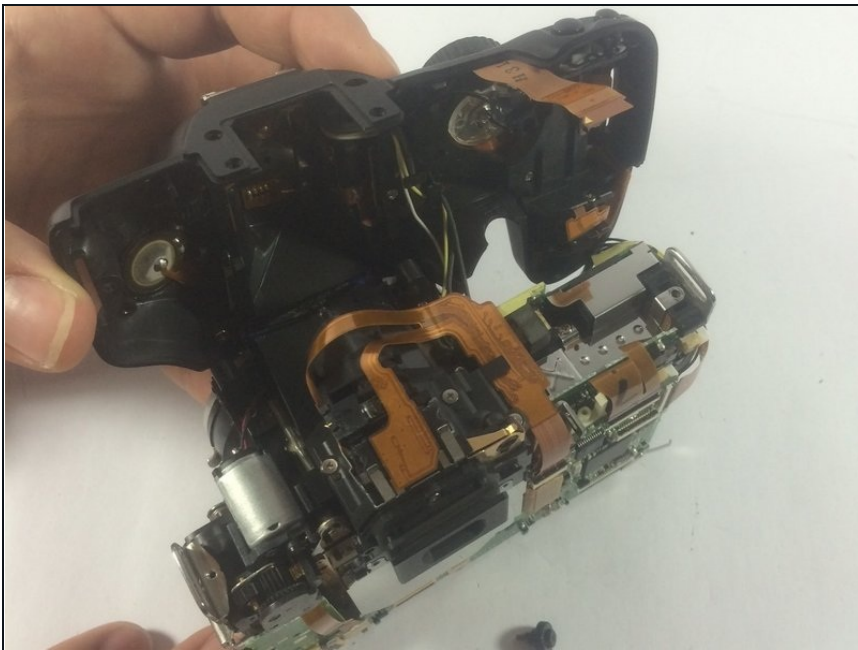

- You can use your fingers to pull the top panel of the camera.

To reassemble your device, follow these instructions in reverse order.

