




# Canon PowerShot SD1100 IS Function Buttons Replacement

This guide will allow you to replace the function buttons from your Canon PowerShot SD1100 IS.

Written By: Wyatt Chan

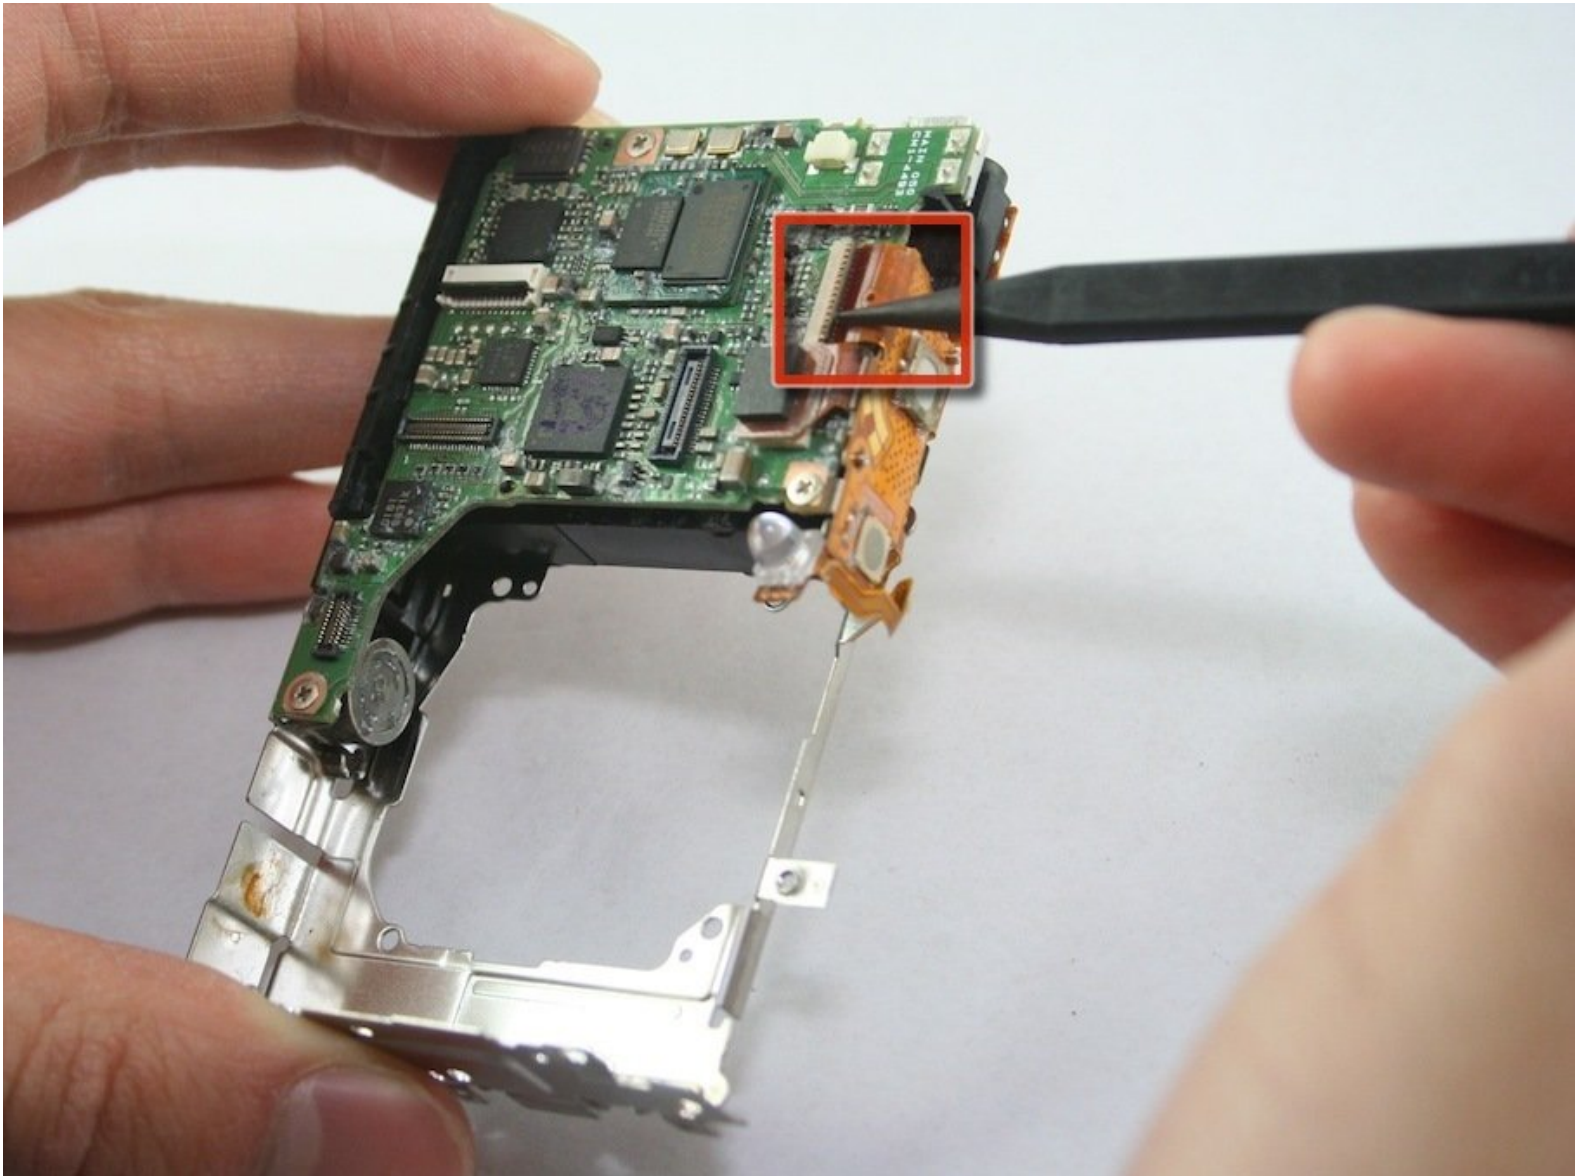

---

## INTRODUCTION

This guide should be used if our guide, "Cleaning Function Buttons", doesn't fix your function buttons.

---

### **TOOLS:**


- [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Front and Rear Cover





- Remove wrist strap and battery.

## Step 2

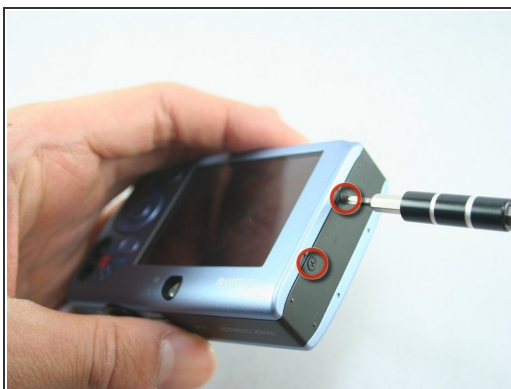

- Remove 2 screws from each side of the camera (4 total, 0.102 in).
  - Remove 2 screws from the bottom on the camera (0.138 in).
- ⚠ Do not mix the 4 side screws with the 2 bottoms ones; they are different sizes.

## Step 3

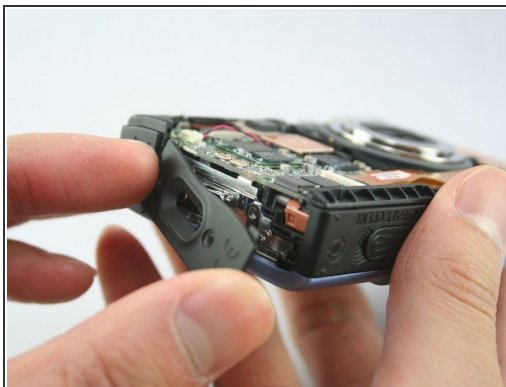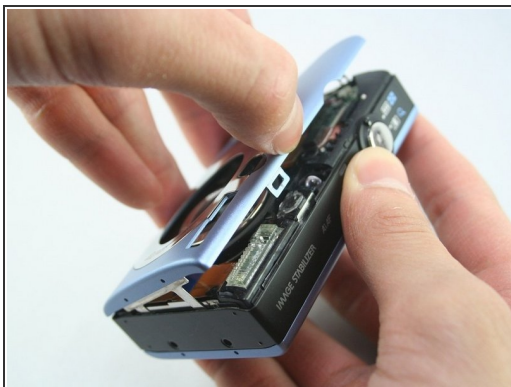


- Gently pull off the front cover.
- ⓘ The plate on the side should come off.
- Gently pull off the back cover.

## Step 4




- The cases should now be removed.

## Step 5 — Top Button Assembly

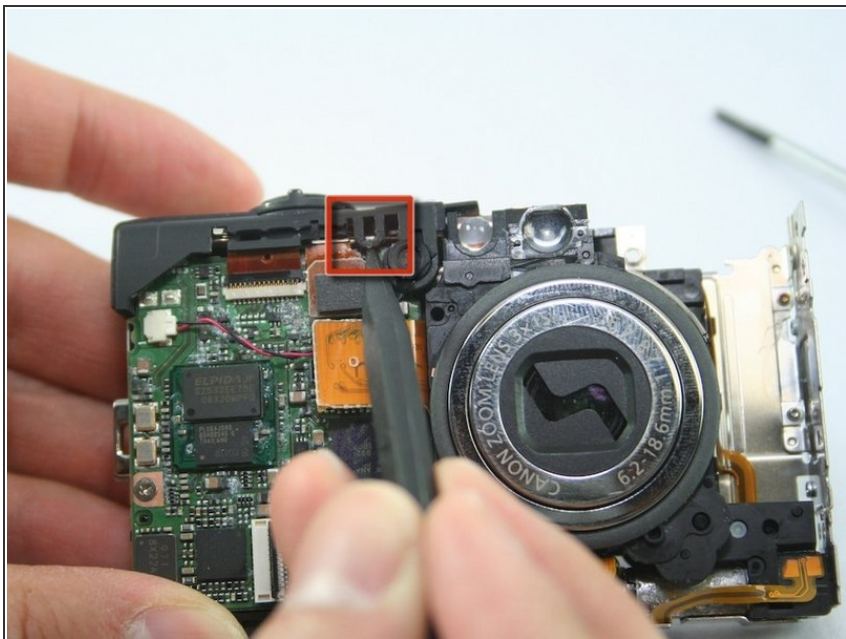


- Use the spudger to disconnect the black tab.

## Step 6

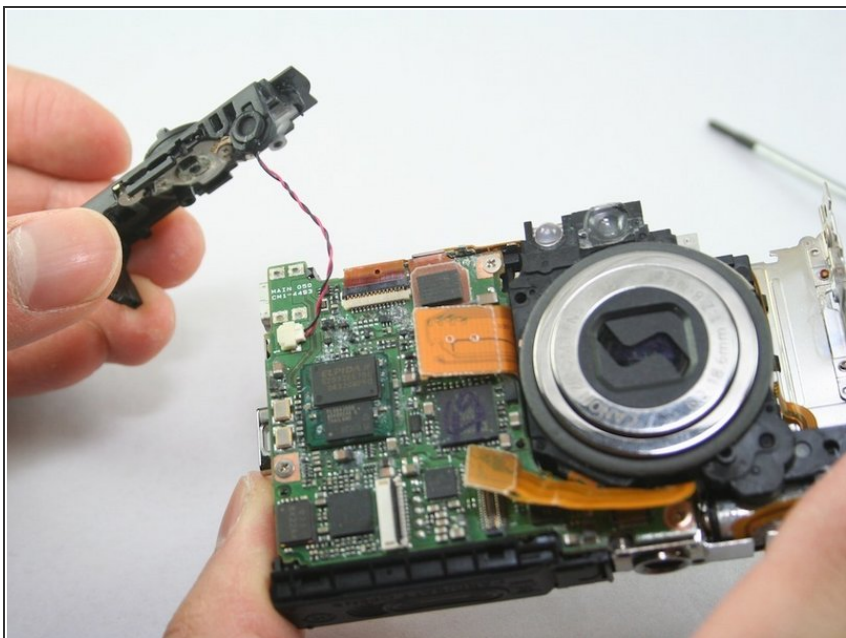

- Gently pull off the shutter button assembly.

## Step 7

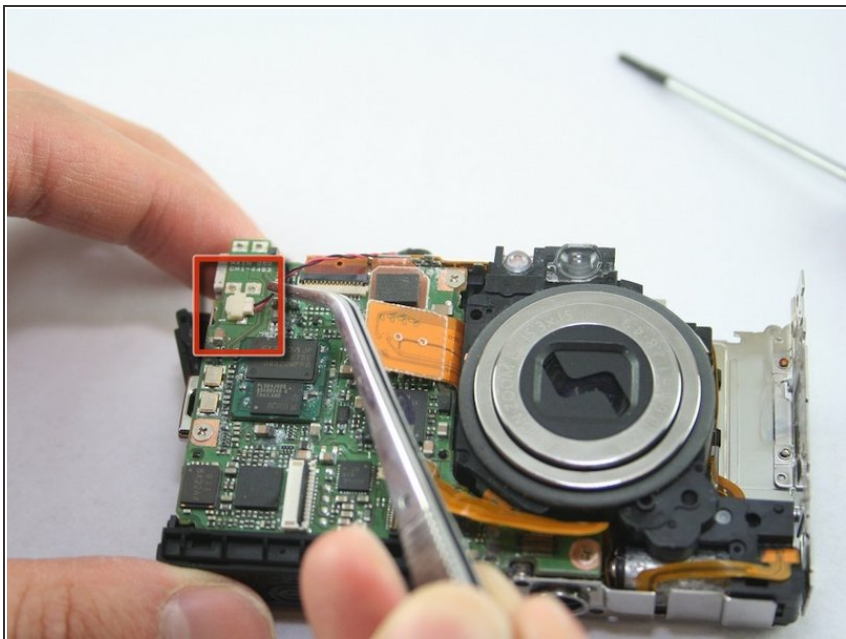


- Use the tweezers to disconnect the microphone cable.

## Step 8





- The shutter button assembly should now be removed.

## Step 9 — Function Buttons

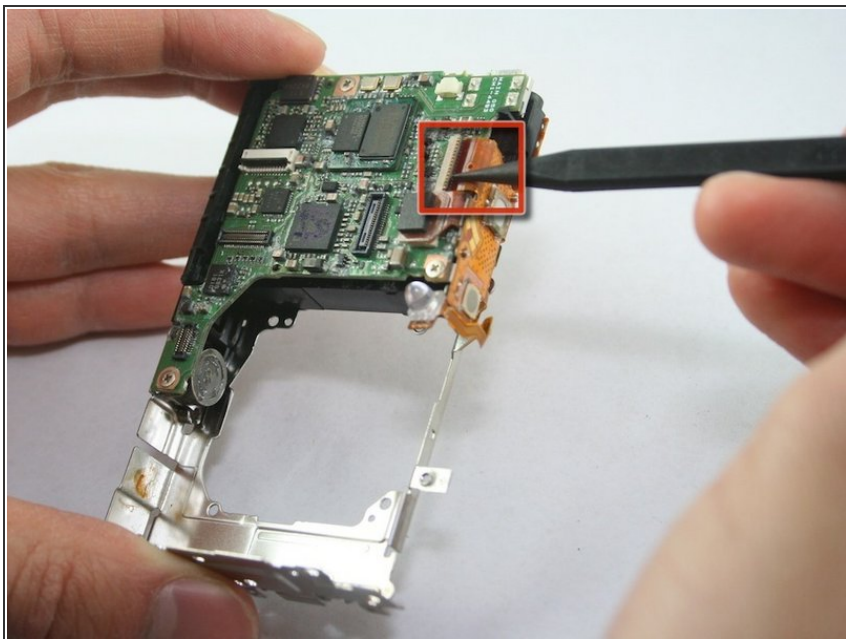


- With the spudger, flip up the black tab on the main ribbon.

## Step 10

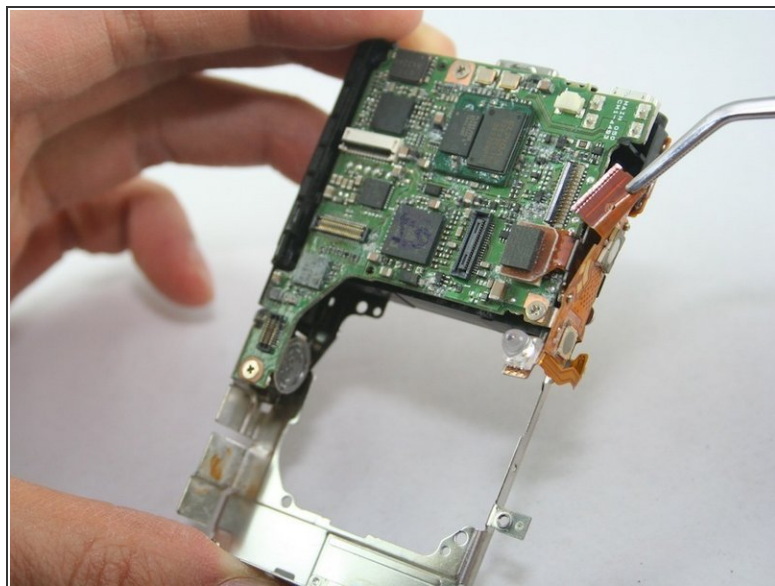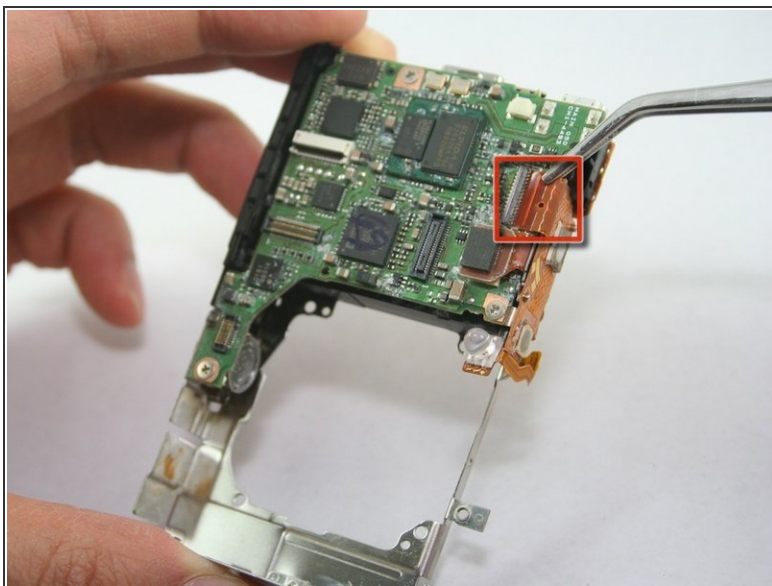


- Gently pull straight out on the ribbon to disconnect it from the logic board.

## Step 11

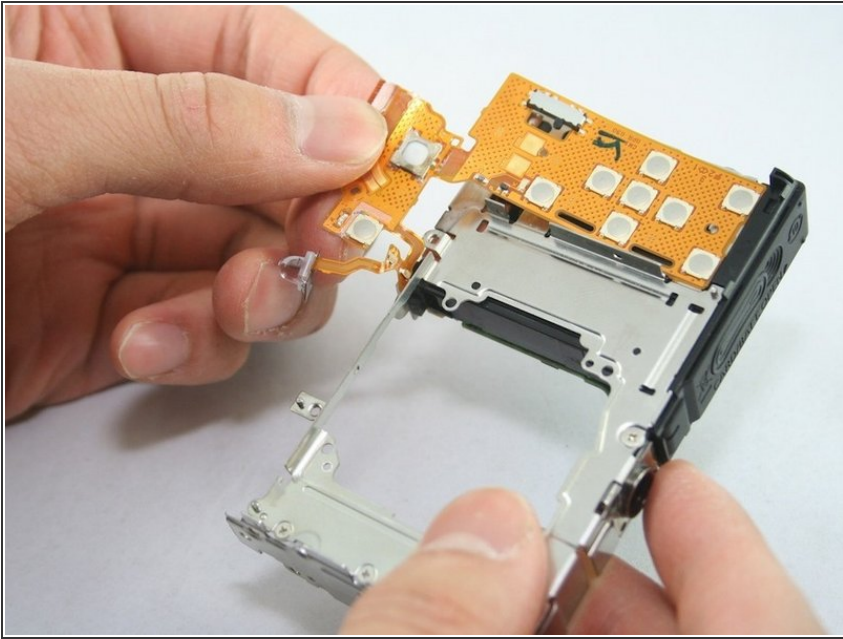

- By hand, gently unfold the function button board and lift it off the frame.

## Step 12

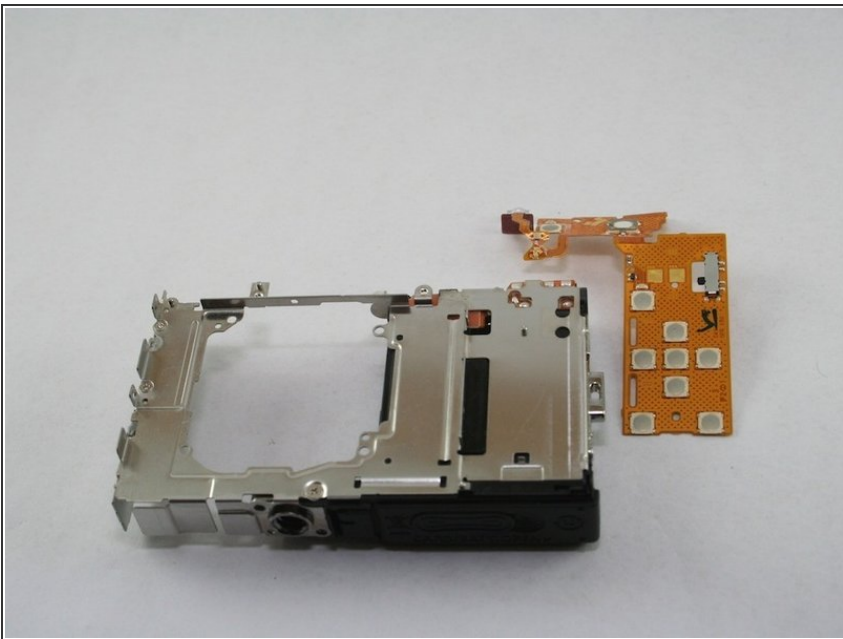

- Congratulations! The function button board can now be replaced.

To reassemble your device, follow these instructions in reverse order.