




Canon EOS Rebel XS Strap Loops Replacement

Use this guide to remove the two metal neck strap loops.

Written By: Daniel Bussone

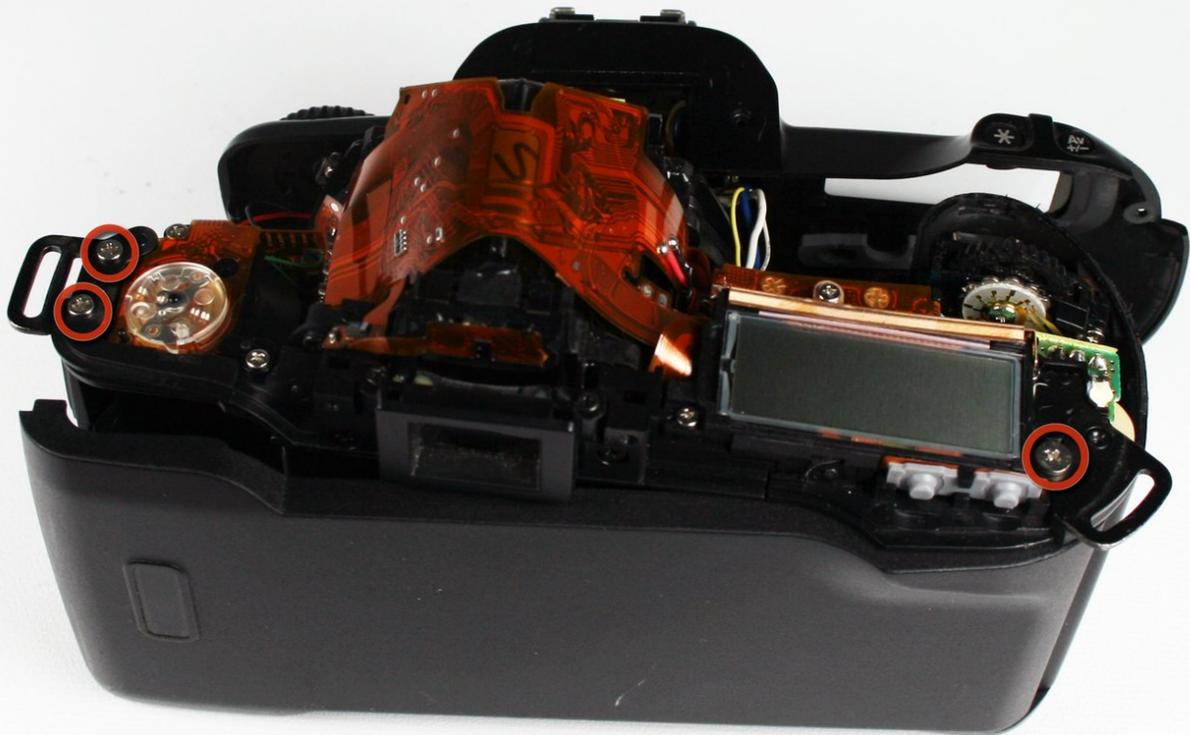

INTRODUCTION

Use this guide to remove the two metal neck strap loops.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

Step 2

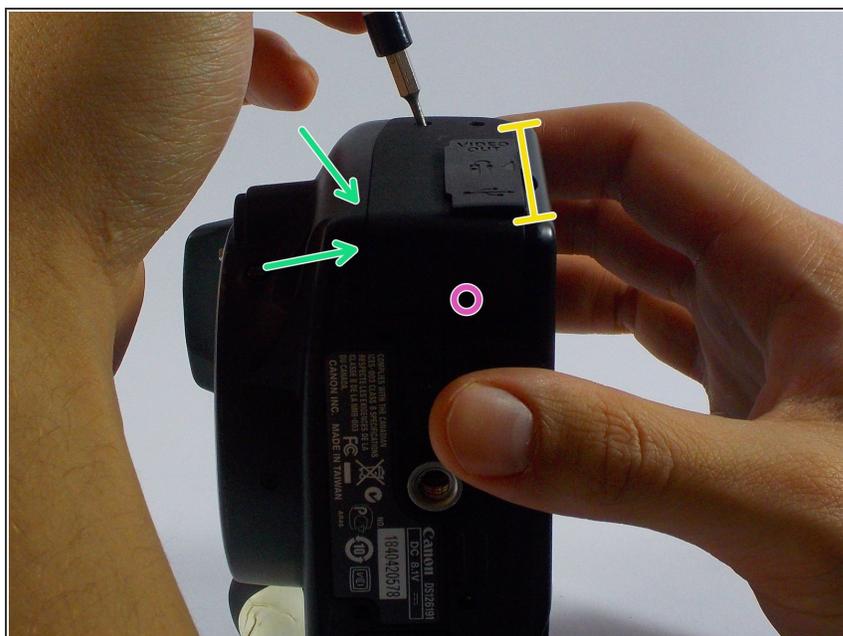

- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

Step 3 — Disassembling Canon EOS Rebel XS Front Cover



- Remove three medium length screws from the bottom of the camera

Step 4




- Remove the two medium length screws on the front panel of the camera above the lens mount.
- Once you done, you may use the Spudger to panel from non-grip side.
- ⓘ If you start on the grip side, it will be more challenging to loosen the panel.

Step 5 — Back Cover



- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

Step 6

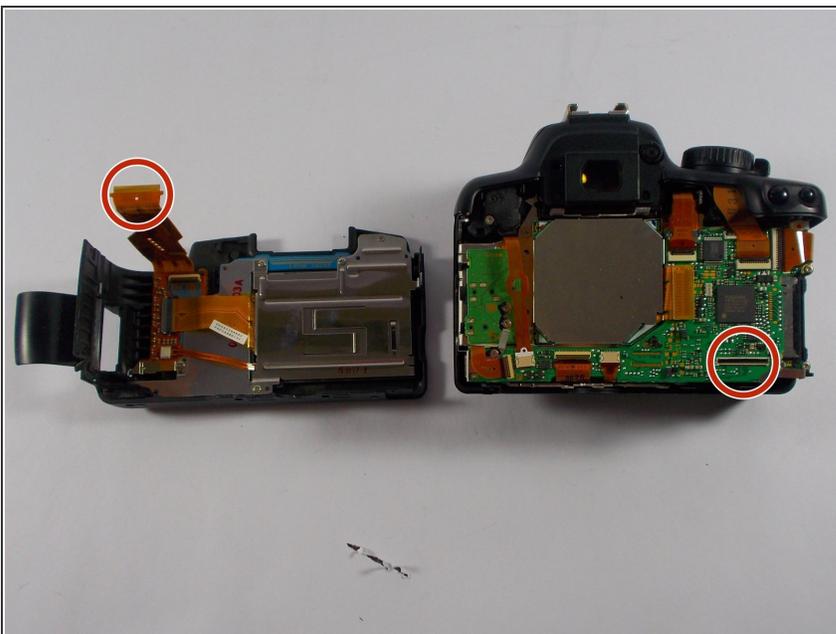

- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

Step 7 — Grip



- Remove the two 4.5mm (.18in) long black screws from the camera grip using a #00 Phillips screwdriver.

Step 8



- Use your fingertip to pry off the external shutter port cover.

Step 9



- Remove the two 5mm (.20in) long silver screws securing the grip to the camera using a #00 Phillips screwdriver.

Step 10



- Use the spudger tool to carefully pry the grip from the rest of the camera.

Step 11




- Once the grip is loose, use your fingers to remove it from the camera.

Step 12 — Eyepiece




- Grasp the eyepiece with your fingers and slide upwards to remove it.

Step 13 — Top Panel

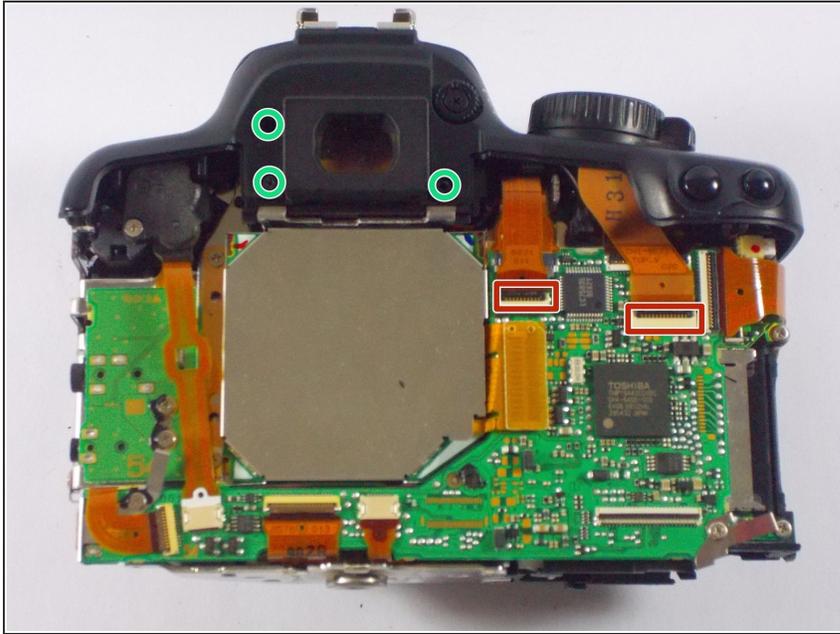


- Remove the following ribbons with the tweezers by gently pulling on them.
- Remove the three black screws, near the eye piece, using the Phillips Screwdriver.

Step 14

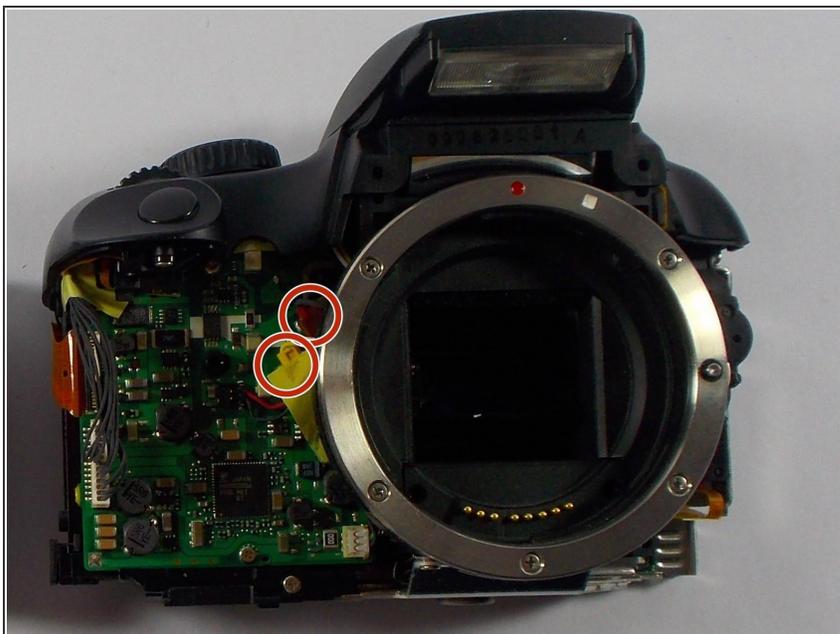


- Remove the cable heads attached on the front side of the camera next to the lens mount.
- ⚠ Be gentle when pulling wires loose, use the tweezers to remove the wires.

Step 15

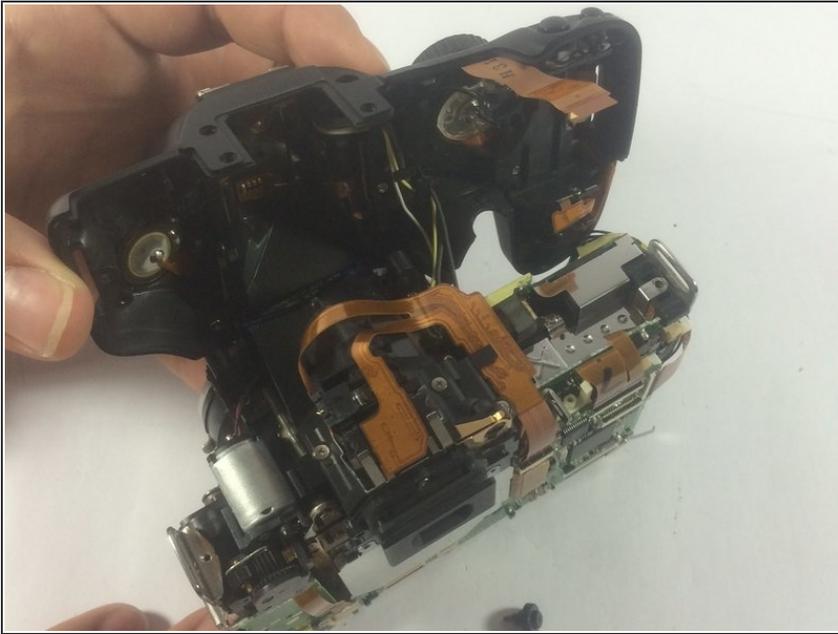


- You can use your fingers to pull the top panel of the camera.

Step 16 — Strap Loops

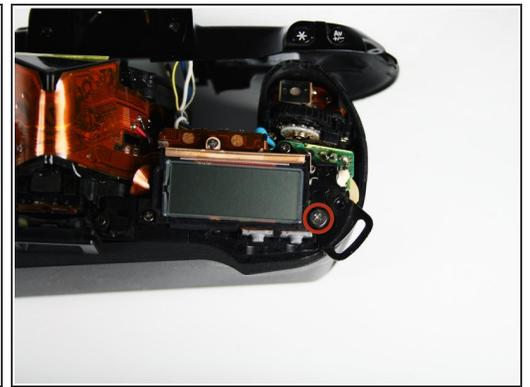

- Remove the two 5.0mm (.20in) silver screws from the first loop hole using a #00 Phillips screwdriver (Picture Two).
- Remove the 6.8mm (.27in) wide head silver screw from the second loop hole using a #00 Phillips screwdriver (Picture Three).

Step 17

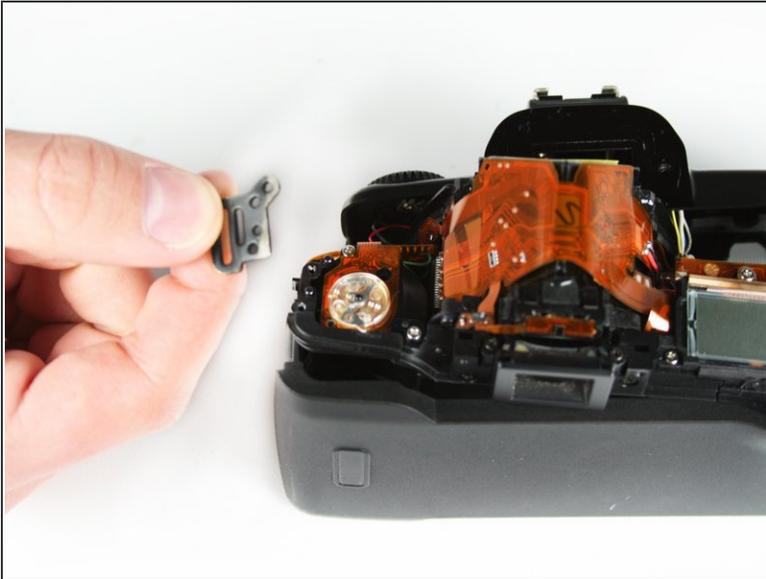

- Use your fingers to remove the loop holes.

To reassemble your device, follow these instructions in reverse order.