



# Sony Cyber-shot DSC-HX300 Battery Replacement

This guide will show how to remove the battery and replace the battery if there seems to be an error with the camera.

Written By: Elizabeth Surface



# INTRODUCTION

If the battery is not holding charge like it used to, then it may be time to replace it.

## Step 1 — Battery



- ⚠ Make sure the camera is powered off
- Turn the camera upside down. This is a view of the bottom of the camera.

## Step 2



- Push battery cover away from the camera.

### Step 3



- Push the blue tab that secures the battery. The battery will then spring out.

### Step 4



- Remove the battery.

To reassemble your device, follow these instructions in reverse order. Make sure to not skip a step as it will not work correctly if there was an error in reassembling the camera.

This document was generated on 2020-11-28 04:37:27 AM (MST).

