




Sony Vaio Tap 11 Motherboard Replacement

The motherboard is where the magic happens. It...

Written By: Alexander Bridges

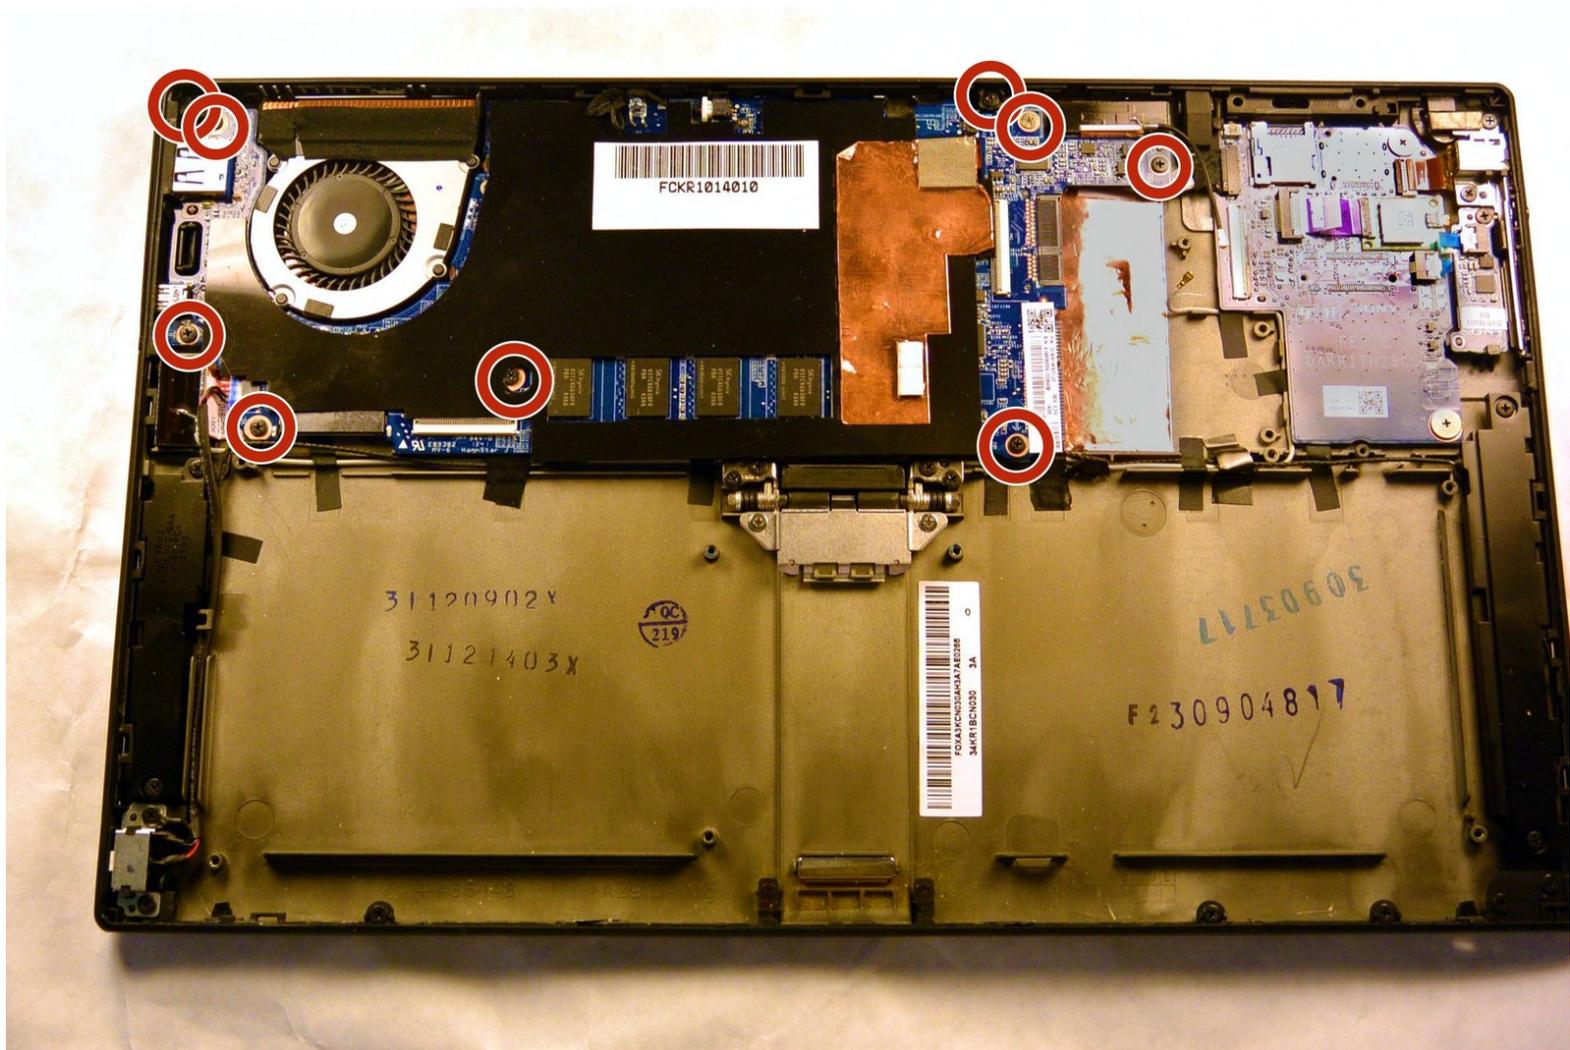

INTRODUCTION

The motherboard is where the magic happens. It is home to the CPU, the RAM and everything that's needed for those components to work, including fans and power delivery. If you've spilled a beverage onto your device or left it out in the rain, a motherboard swap is likely needed due to the sensitivity of the components. This is the hardest guide for this device since there are many screws and cables connected to this component.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Suction Handle](#) (1)
-

Step 1 — Screen Assembly




- Begin by opening the HDMI/USB port cover on the left edge.
- Remove the three #000 headed, 3 mm long screws located underneath the port cover.

Step 2



- Locate and open the Micro SD slot on the top side of the device.
- Remove the two screws located beneath the cover.

Step 3

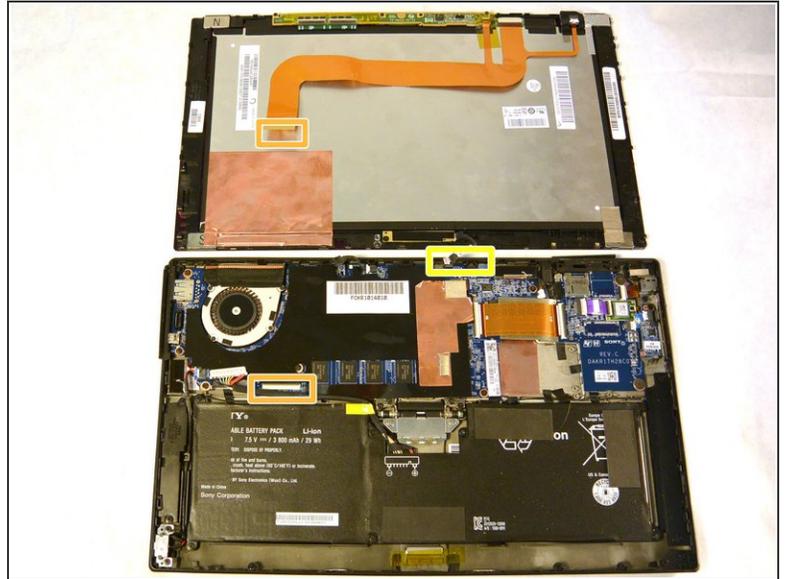


- Attach the suction cup to the top right area of the screen.
- Pull to separate the screen from the rest of the device.

⚠ Be aware of the front camera cable that is still connected to the rest of the device.


- Detach the display ribbon cable.

Step 4 — Battery

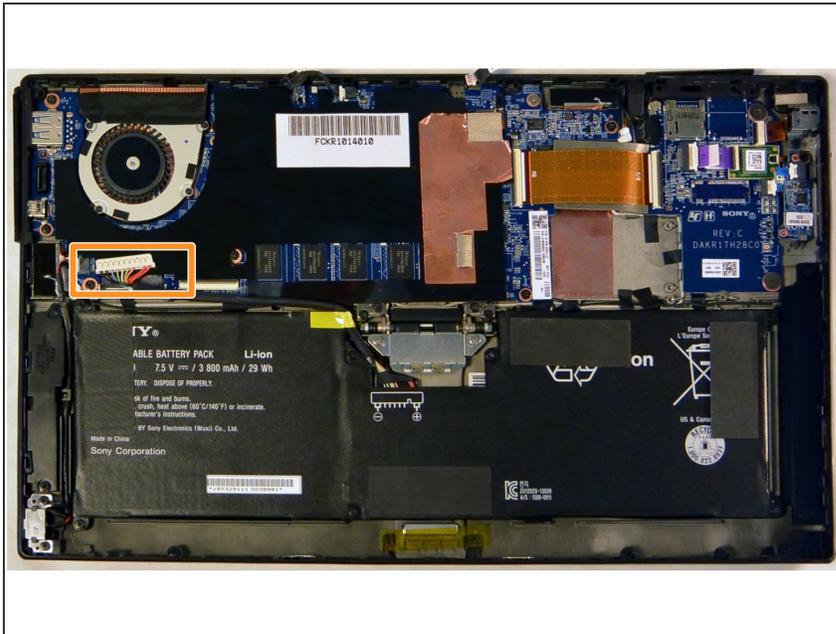


- Disconnect the battery from the motherboard by pulling out the cable below the fan.

Step 5

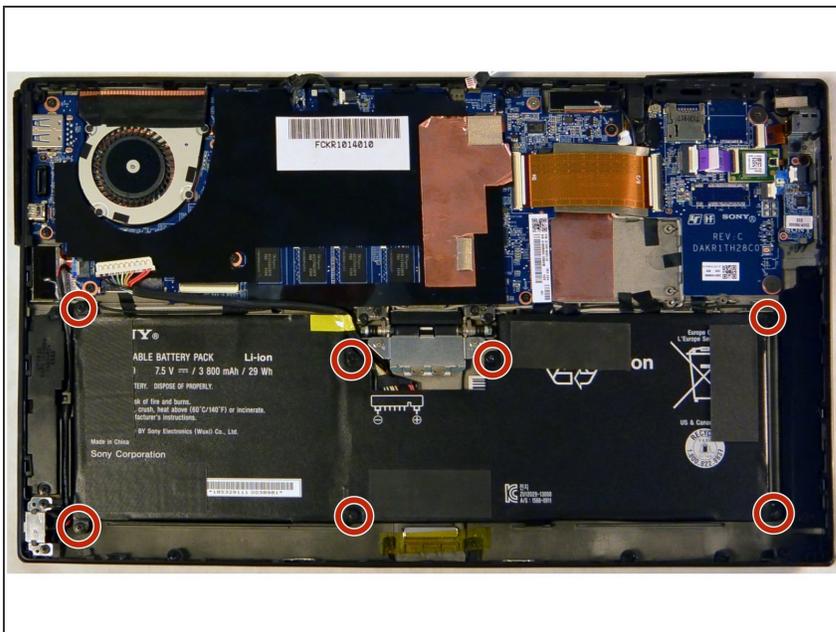


- Remove the seven 3 mm Phillips #000 screws that hold the battery in place.
- Carefully remove the battery from the back assembly.

Step 6 — Motherboard

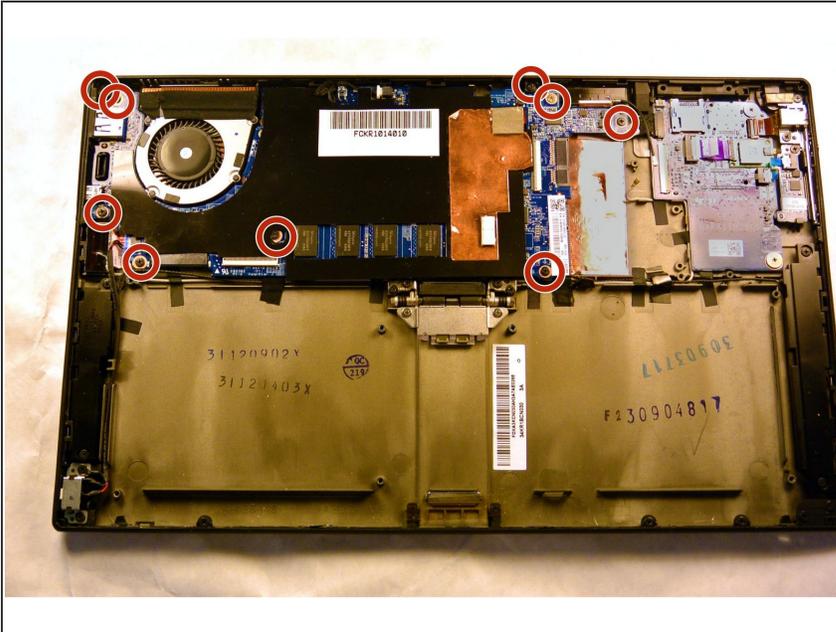


- Remove the nine 3 mm Phillips #000 screws holding in the motherboard.

Step 7

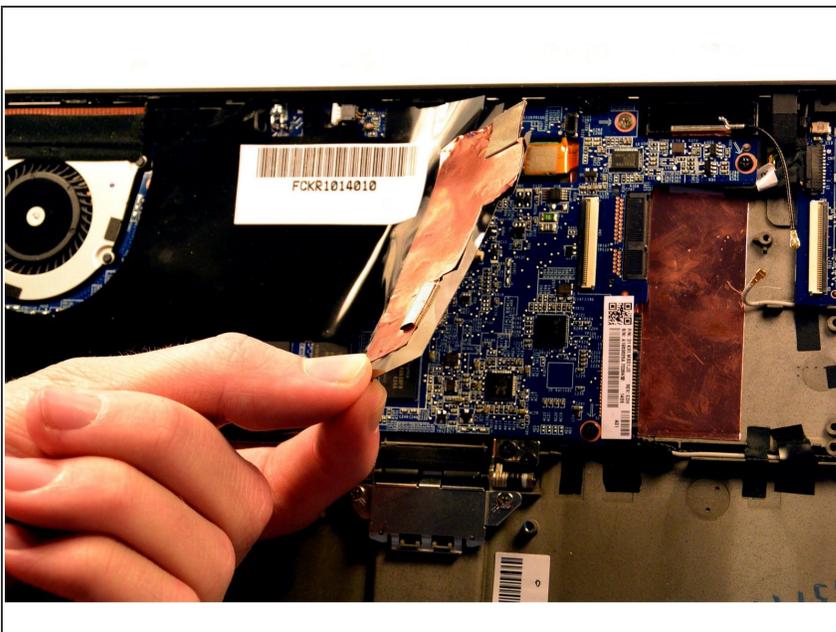

- Remove the black plastic dust shield by gently pulling it up.
- ⓘ You'll want to keep the sticky side up so you can replace it when reassembling. This part also functions as a shield for the sensitive camera component!



Step 8

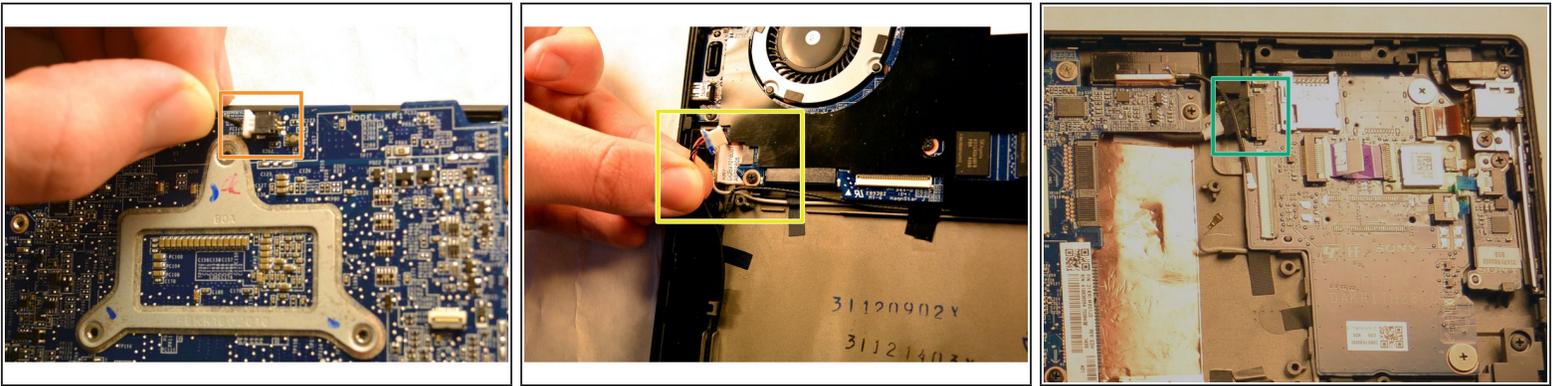

i Before removing the motherboard, there are a few cables to disconnect.

- Disconnect the cable connected to the top of the display.
- Disconnect the power jack connector on the left side of the screen.
- Disconnect the daughterboard connector located above and to the right of the WiFi chip slot.

Step 9

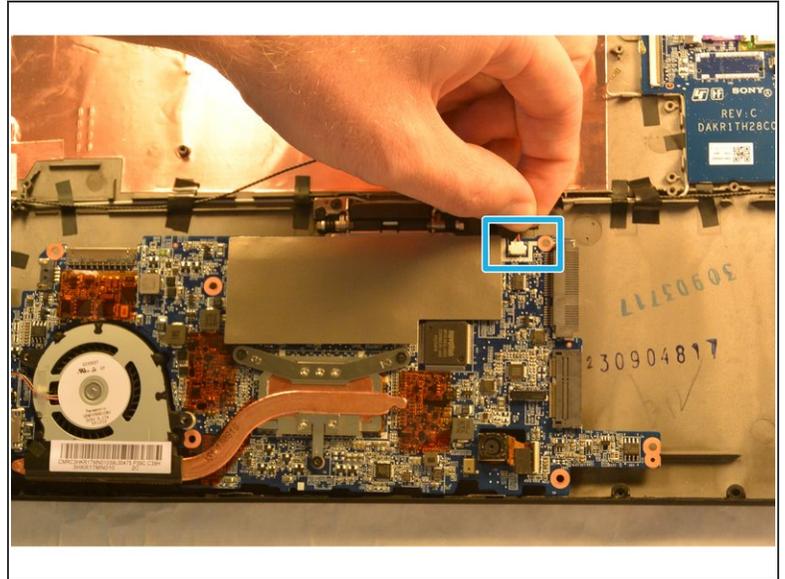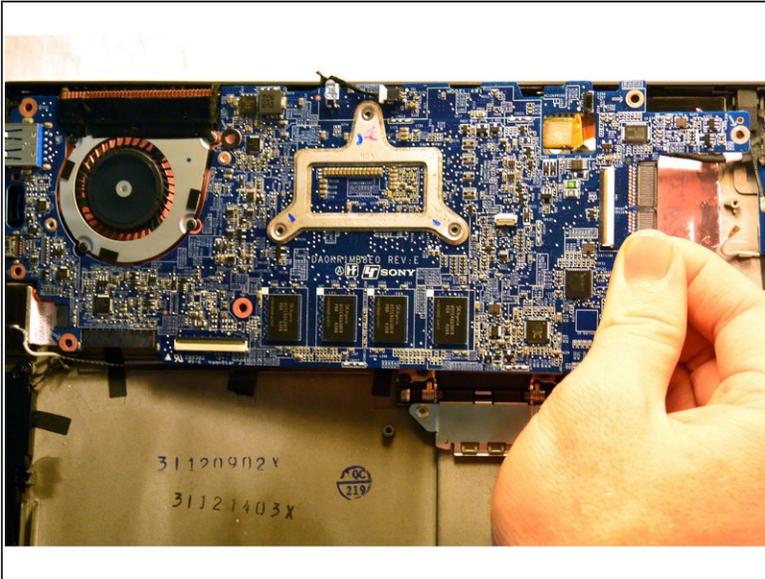

- Gently pull the motherboard out by pulling from the right side of the board and flip it so that the motherboard now sits where the battery was and the underside is now visible.

⚠ There is still one cable to remove!

- Remove the speaker connector located next to the SSD slot.
- You may now remove the motherboard from the device.

To reassemble your device, follow these instructions in reverse order.