



# ZTE Avail 2 Battery Replacement

Remove the battery from your ZTE Avail 2

Written By: Samantha Smith



## INTRODUCTION

Use this guide to replace your perishing battery.

After successfully removing the battery, and putting a new battery in, your device should now power on properly.

## Step 1 — Battery



 Before disassembling your ZTE Avail 2, be sure it is powered off.

- Remove the back cover using the notch at the bottom of the device.
- Pull the back cover from the front panel gently to remove it.

## Step 2



- Remove the battery by the notch in the back plate.
- Once you have removed the battery replace it with the new one.
- Carefully insert the new battery with the connectors aligned correctly.
- Gently push down on the battery until it clicks into place.

To reassemble your device, follow these instructions in reverse order.