



DigiLand DL801W Speaker Replacement

This guide will help you replace the speaker on the DigiLand DL801W.

Written By: Travis Mangum



INTRODUCTION

Complete all steps carefully making sure to follow the directions exactly. If you are finding that a step isn't going smoothly, take a breath, and start again. Always make sure that all screws that need to be removed were removed for easy replacement.

Note: Light soldering is required for successful repair of the speaker of the DigiLand DL801W.



TOOLS:


- [Soldering Workstation](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Speaker



- ❗ Before opening your DigiLand Tablet, ensure that the MicroSD card is removed.
- Hold the tablet in one hand (not your primary hand) so that the bottom edge of the tablet is facing you and the back of the tablet is facing up.
- Using a blue plastic opening tool, gently insert the tool between the back panel and the main body.
- Going around the edge of the tablet, gently pry open the back panel. As you go around, you will hear a click.

Step 2

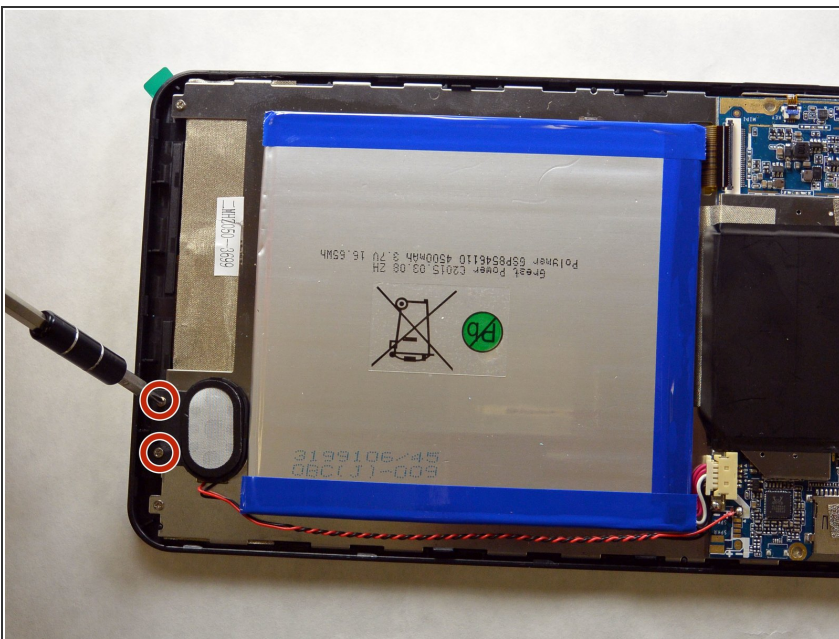

- Remove the two JIS #000 screws that hold the speaker bracket in place. Be sure to place the screws in a safe place to avoid losing them.
- Where the red and black wires connect to the motherboard, use a soldering iron to remove the defective speaker.

-
- ① Complete removal of the speaker from the motherboard is not necessary. It is just recommended that the bracket be removed to allow more room for battery removal.
-

To reassemble your device, follow these instructions in reverse order.