


Sony Xperia Z5 Teardown

This guides will show you how to disassemble Sony Xperia Z5.

Written By: Lenka

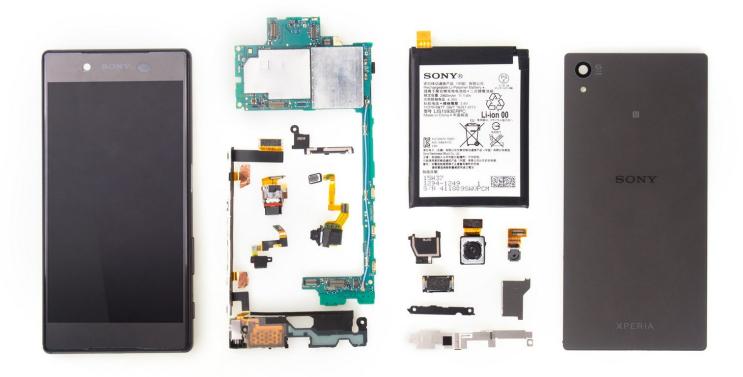

INTRODUCTION

This guides will show you how to disassemble Sony Xperia Z5.

[video: https://www.youtube.com/watch?v=VznyxLBDccU]



TOOLS:

- Heat Gun (1)
- Suction Handle (1)
- iFixit Opening Picks set of 6 (1)
- Phillips #1 Screwdriver (1)
- Spudger (1)
- Tweezers (1)

Step 1 — **Sony Xperia Z5 Teardown**





Remove SIM card tray.





- Heat the back cover to soften the adhesive.
- Place the suction cup and insert metal opening tool to open a gap from top side.







- Insert the guitar picks and slide it to cut the adhesive underneath.
- Remove back cover. The back cover is glass, so only use a sucker if you're experienced.
 otherwise use a small blade to lift off the back while the glue is soft.









- Release battery connector and pull off the adhesive tape underneath.
- Pry up battery.






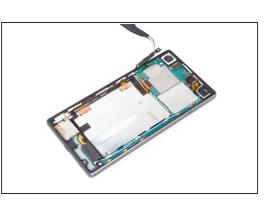

- Release rear camera connector, front camera connector, audio jack flex connector and main flex connector on the motherboard and remove the screws there.
- Take away the plastic bracket.

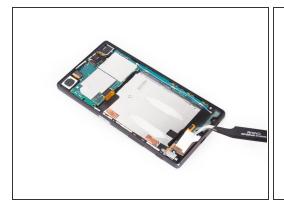




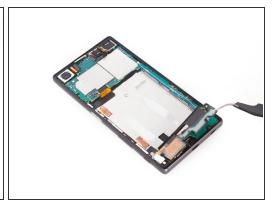


- Remove metal cover securing loudspeaker and twist off screws.
- Pry up and loosen the bottom side of main flex assembly.



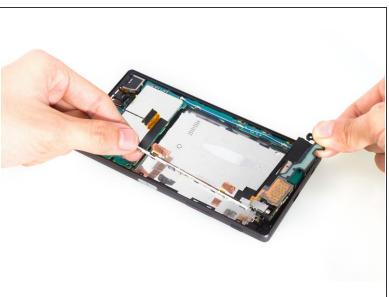


Remove main flex. (Attention: the fingerprint sensor connector is here, be careful to loosen it)

Step 8

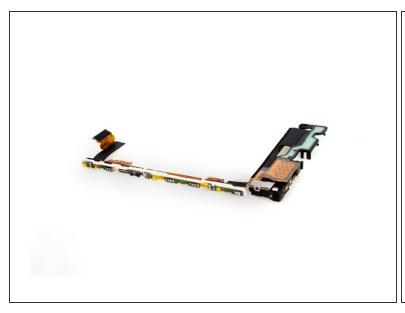




This is main flex assembly. (It comes with loudspeaker and vibration motor)

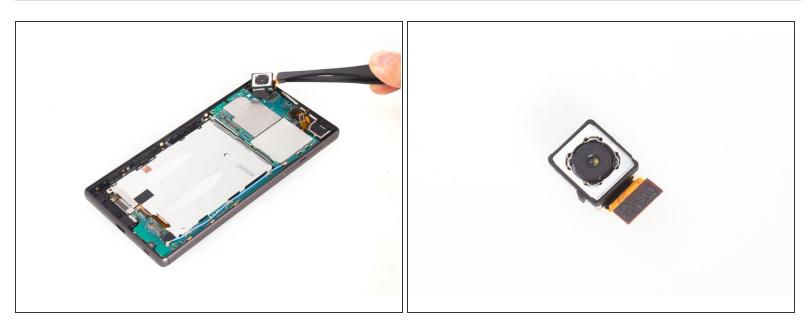

Remove rear camera.


Step 10

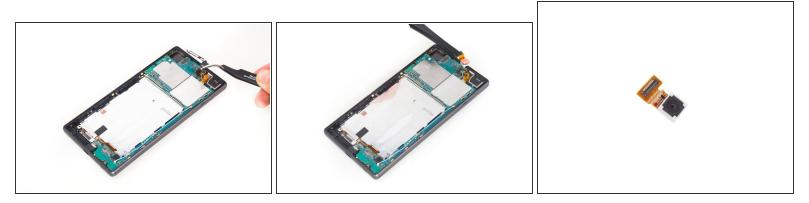

Remove that securing bracket, then remove front camera.





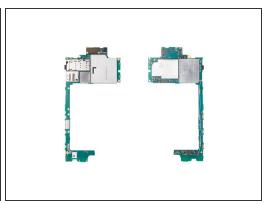

- Release connectors on the motherboard.
- Remove motherboard.







- Remover cover bracket on the audio jack.
- Cut adhesive at the top of the audio jack and noise canceling mic, then remove it.



 This is audio jack flex coming with noise canceling mic.


Step 14







• Cut the adhesive underneath the earpiece and remove the earpiece.

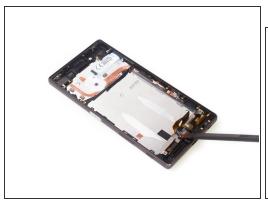






Push the charging port flex out of the slot and remove it.

Step 16





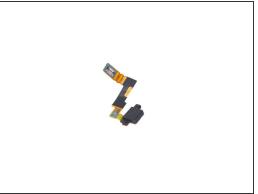

Remove the microphone.



Done.