



Sony Action Cam Mini HDR-AZ1 Protective Doors Replacement

This guide will show how to replace the doors that protect the charging port and SD card slot.

Written By: Mathieu LaFond



INTRODUCTION


Are the protective doors broken or faulty? This is a simple guide that will help you replace them.

Step 1 — Protective Doors



- Pull on the port door until it opens.

Step 2

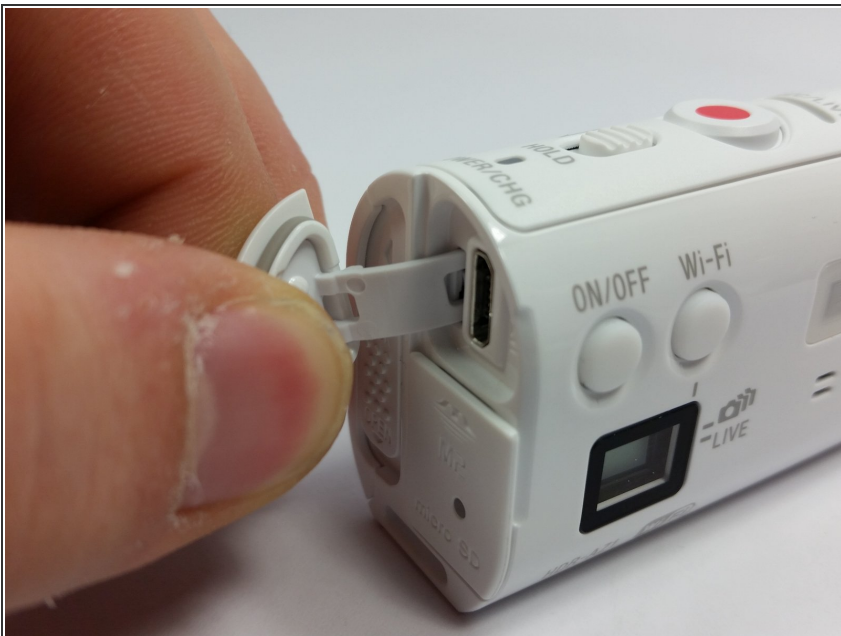

- Grasp the door and pull straight out. Don't worry, this will not break it.

Step 3



- The door should pop out.

To remove the SD card dust door, follow these exact steps. To reassemble your device, follow these instructions in reverse order.