



Disassembling Acer Iconia A1-830 Back Panel

Removing the the back panel of your Acer Iconia A1-830.

Written By: Matt Champagne



INTRODUCTION

Removing the back panel of your Acer Iconia A1-830 tablet gives you access to its inner components. Double check the position of your plastic opening tool before applying force, to make sure it doesn't slip out.



TOOLS:

 
 
- [iFixit Opening Tool](#) (1)
-

Step 1 — Disassembling Acer Iconia A1-830 Back Panel



- Prepare your working space. The ideal work space has a flat, level surface that is clean and well lit.
- Shut down your Acer Iconia A1-830.
- Remove any cables or exterior covers from your tablet.
- Place it on your work space, with the screen facing up.

Step 2

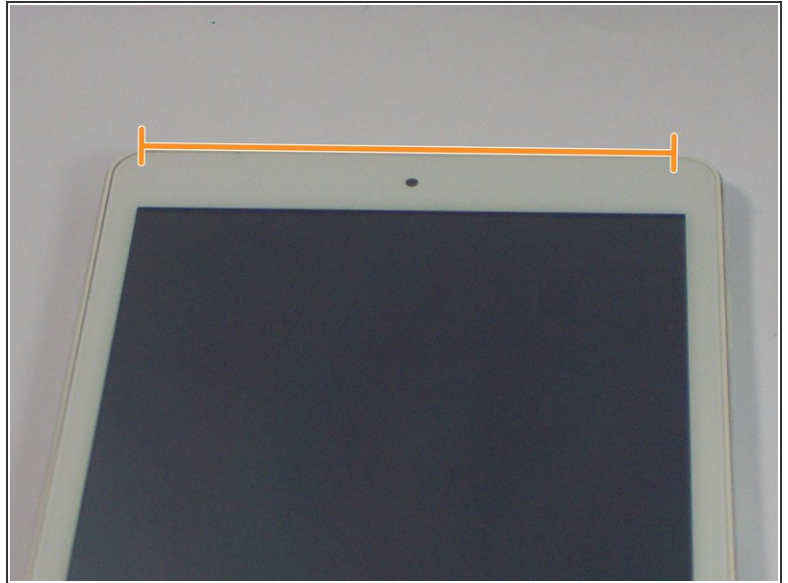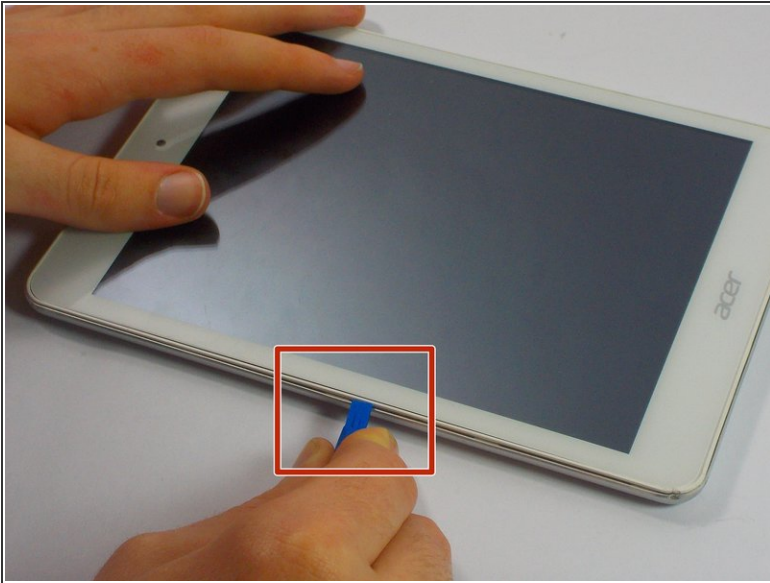

- Wedge the plastic opening tool into the tiny gap between the white plastic front bezel and the aluminum rear panel.
- Do not try to pry apart the top edge on the front side near the front-facing camera.

To reassemble your device, follow these instructions in reverse order.