




Sony Cyber-shot DSC-TX55 Back Case Replacement

This guide will help you successfully replace the back casing on your device.

Written By: Megan East

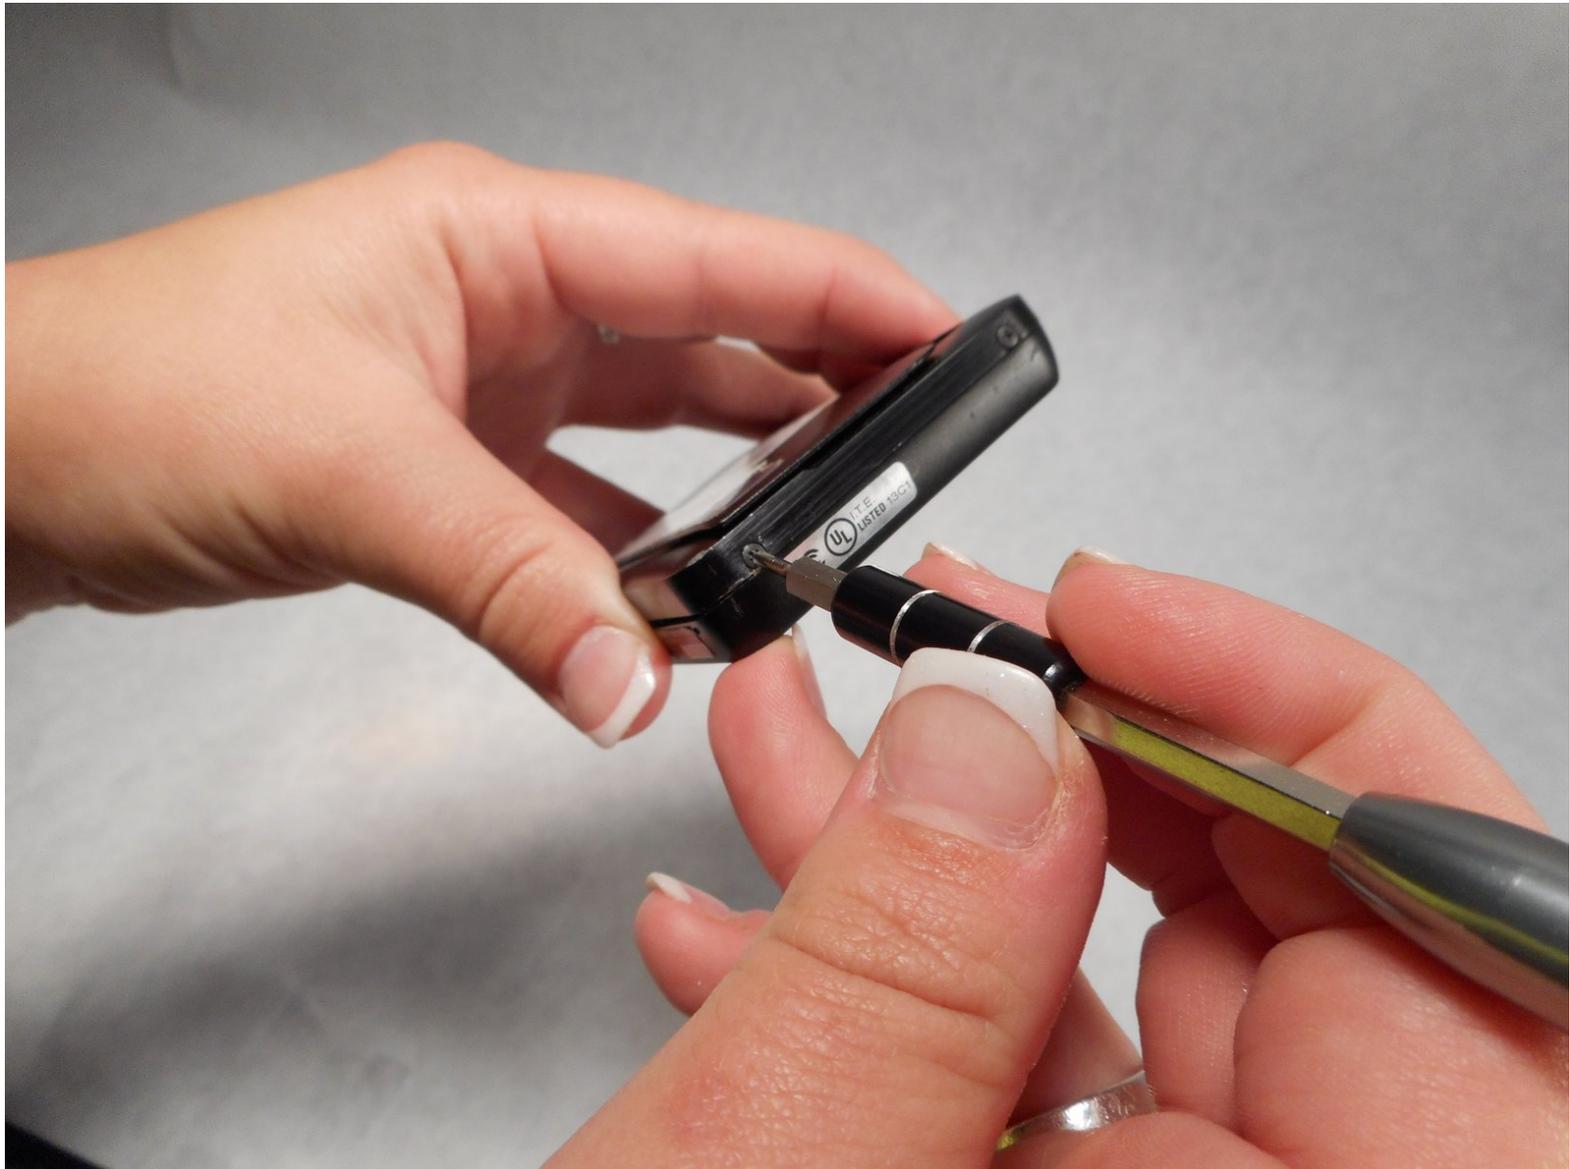

TOOLS:

- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Back Case



- Using your Phillips #00 screwdriver, remove all four 0.3 cm screws that are located on both ends, as well as the bottom of your Cyber-Shot

Step 2



- Using your right hand, gently pull back the back metal frame of your device.

Step 3



- The back case of the device is the metal frame.

To reassemble your device, follow these instructions in reverse order.