


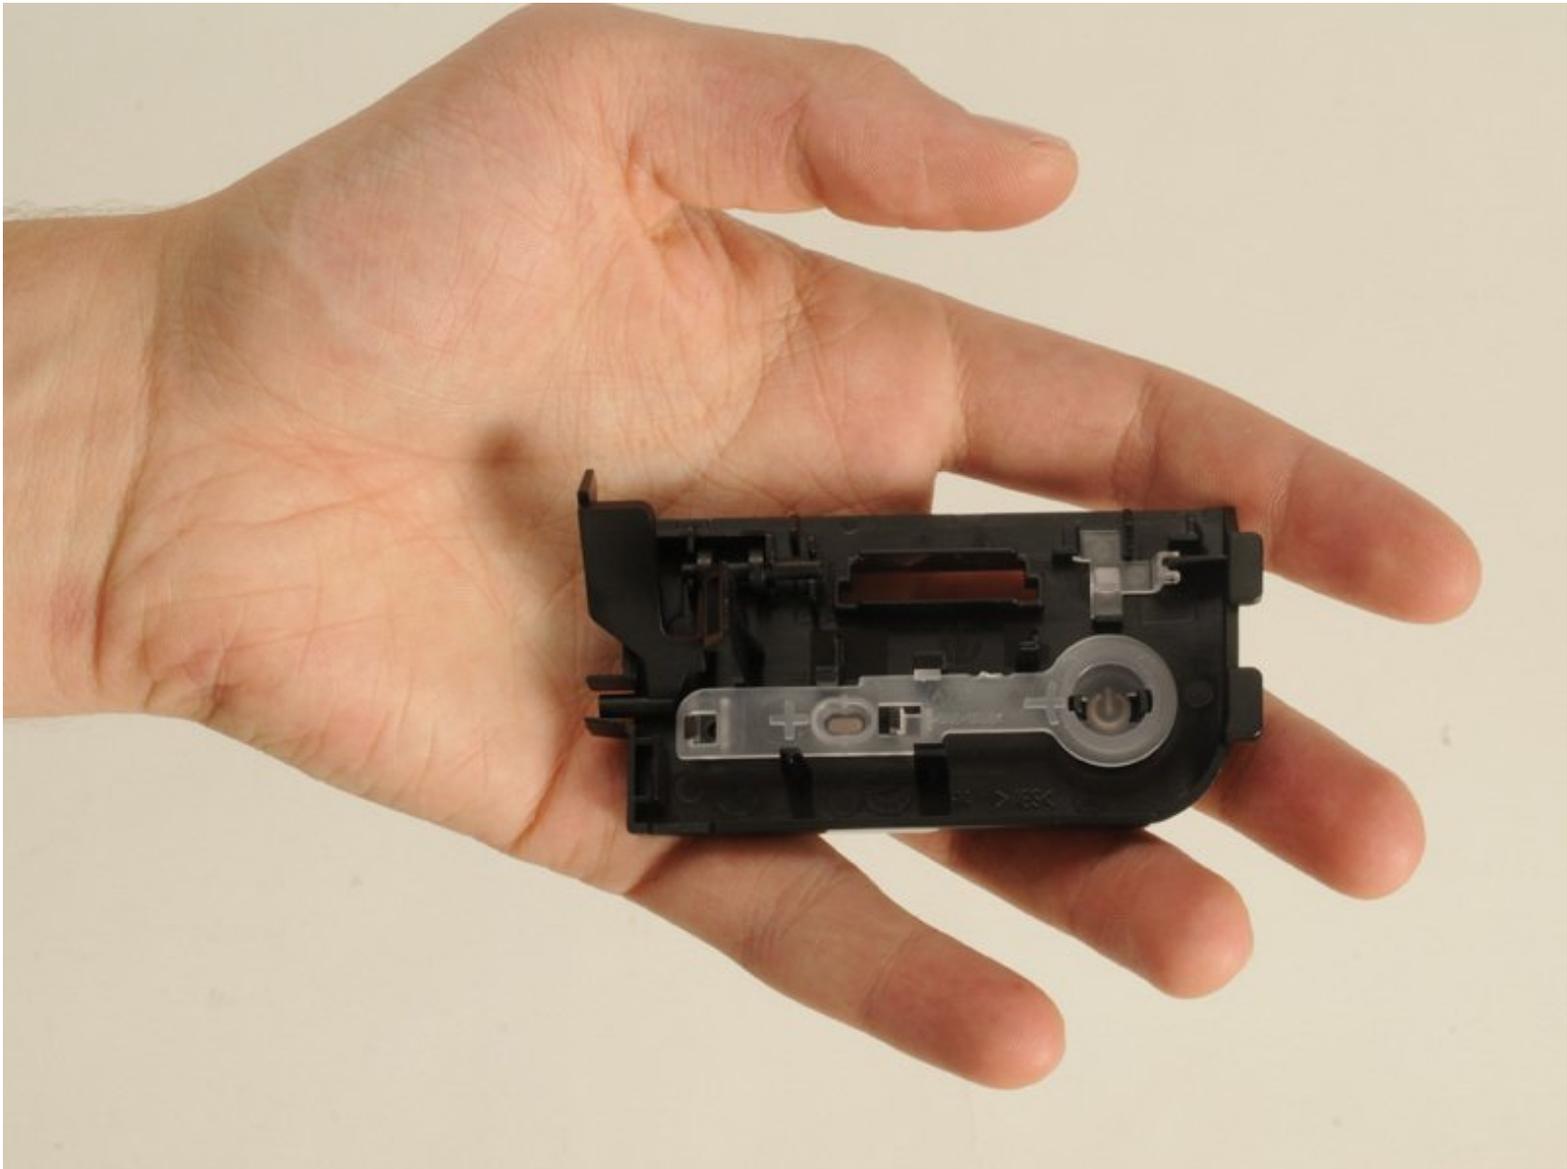

HP Photosmart D110a Power Button Replacement

If your power button is malfunctioning, this guide will explain possible ways to repair it.

Written By: Tim Wise



 **TOOLS:**

- [T9 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Power Button



- Open the printer's mouth by pulling the two mouth pieces down.
- Lift the flap covering the scanner. When you are finished, the printer should appear as shown.

Step 2



- Remove the flap for the scanner by pulling lightly on the clip that attaches it to the printer.
-  The clip may be damaged by applying too much force.

Step 3




- Remove the three screws from the top of the printer using a T9 screwdriver as shown.
- ⓘ The screws are located in the far-left, far-right, and near-right corners of the printer, with respect to the front view.

Step 4




- Reach into the mouth of the printer and press the clip behind the power button to release the power button face.

Step 5

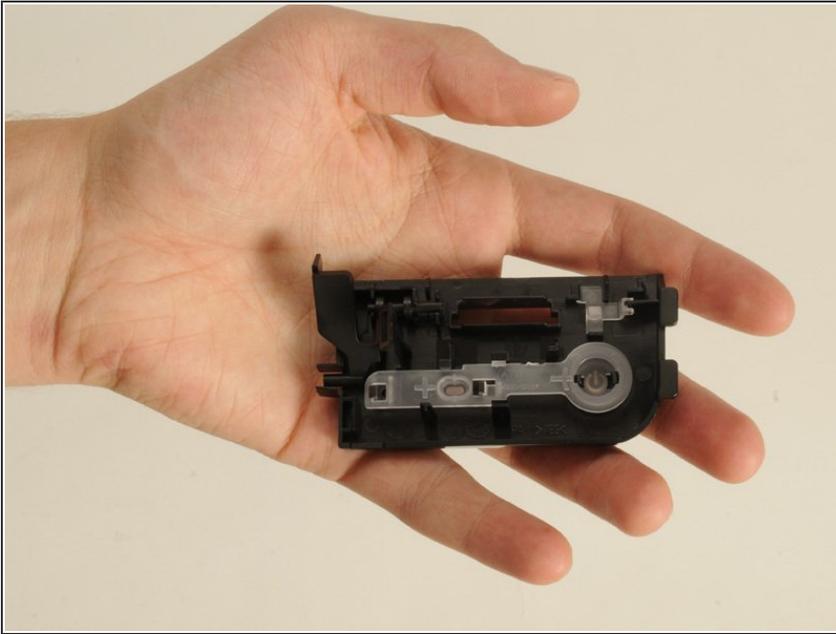


- i** A picture of the removed power button is provided to show the location of the clip that needs to be pressed.
- After pressing the clip, pull out the face of the power button by sliding it from the right to the left side.

Step 6

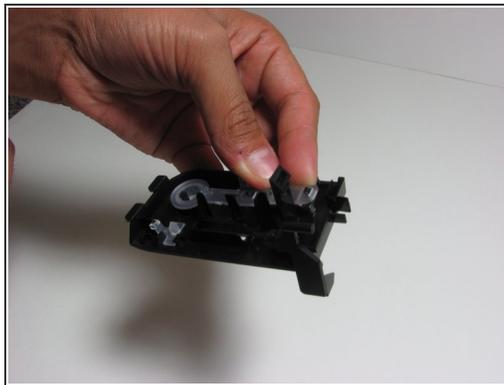

- i** The power button face has a plastic holder that attaches the power button and the wireless button to the face plate using two slots.
- Loosen the plastic holder by pulling the slots on the face plate away from the plastic holder.
- Remove the plastic holder from the face plate after the slots are loosened.

Step 7

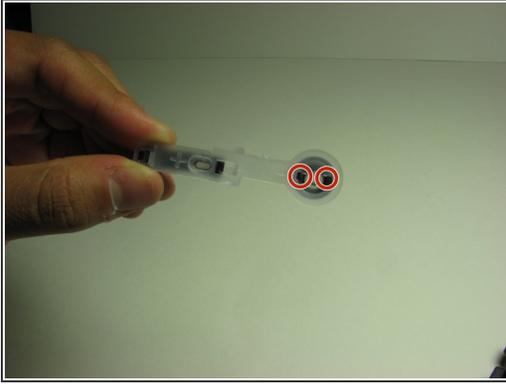

- i The plastic holder secures the power button by two slots.
- Using a spudger, push the holders inward to detach the button from the plastic holder.

To reassemble your device, follow these instructions in reverse order.