



# Repairing Hungry Cat Savings Bank Gear

Learn how to remove coins that become stuck in gears after a toddler overenthusiastically stuffs the Hungry Cat full of change.

Written By: Jeannie Crowley



---

## INTRODUCTION


Learn how to remove coins that become stuck in gears after a toddler overenthusiastically stuffs the Hungry Cat full of change.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Repairing Hungry Cat Savings Bank Gear

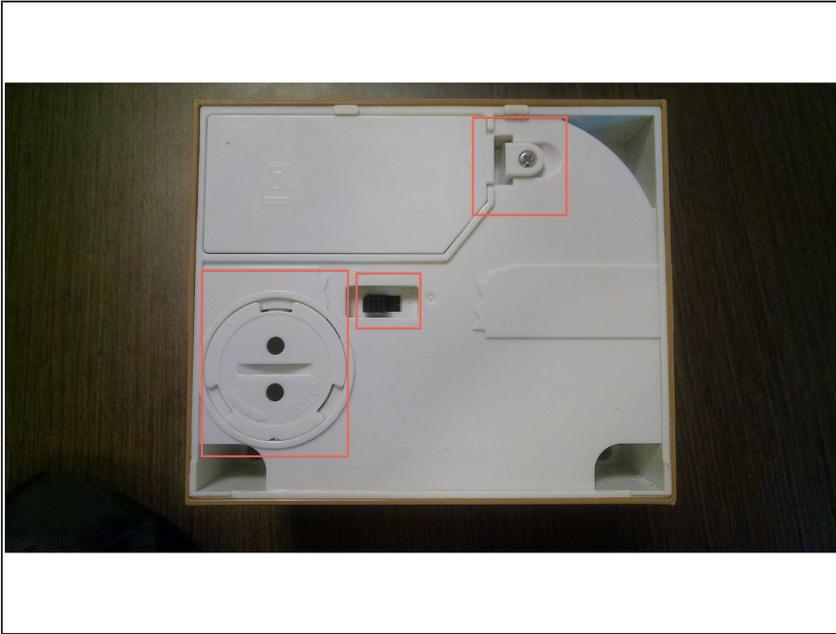


- Turn the Hungry Cat Savings Bank off.
- Using a coin, remove the cap covering the change storage.
- Use a standard Phillips screwdriver #0 to remove the screw holding the battery cover in place.

## Step 2




- Empty all change from the Hungry Cat Savings Bank, or it will drive you bonkers during repair.

### Step 3

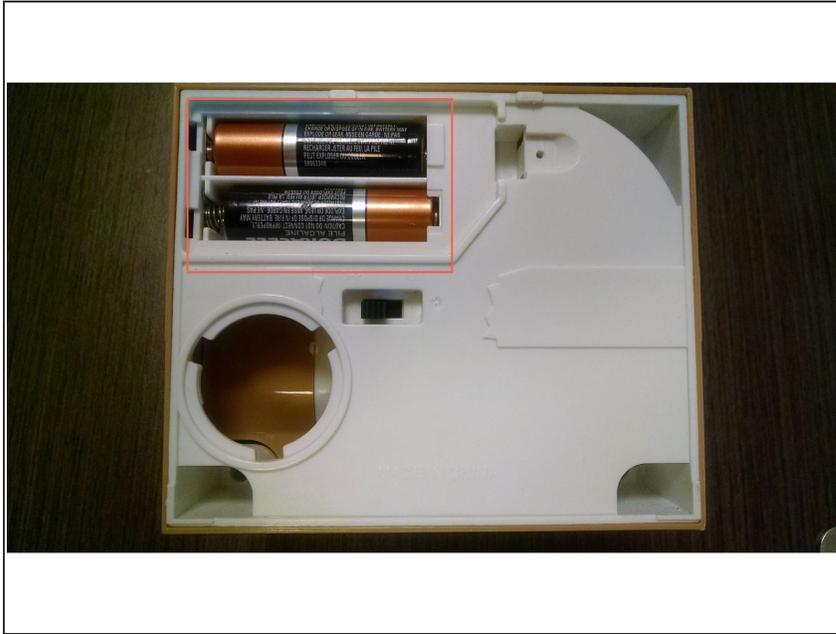

- Remove the battery cover and batteries.

## Step 4

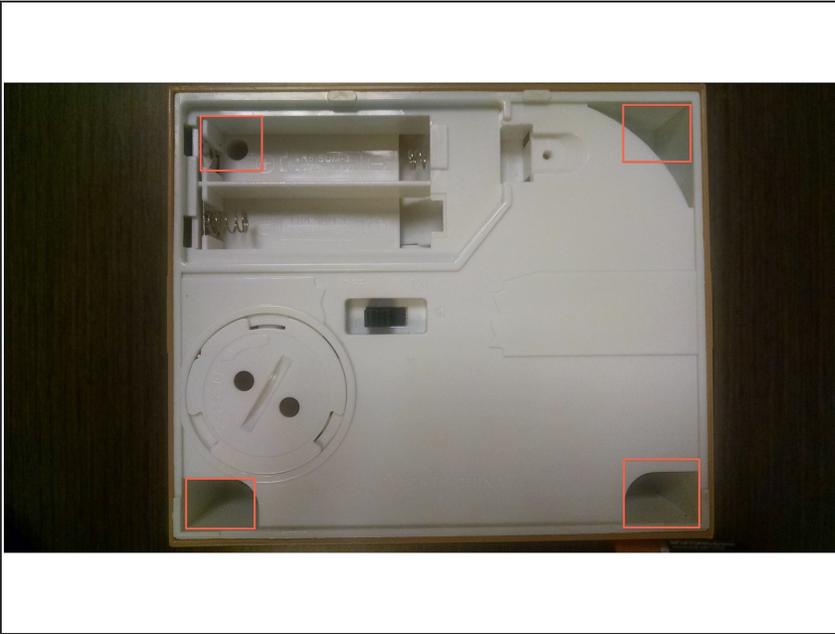


- Remove the four screws holding the cover in place. You'll need a traditional Phillips screwdriver, not a screwdriver set, to reach fully into the wells.

## Step 5




- Turn over savings bank and slide case up. You might need to grab the base to pull it apart.

## Step 6

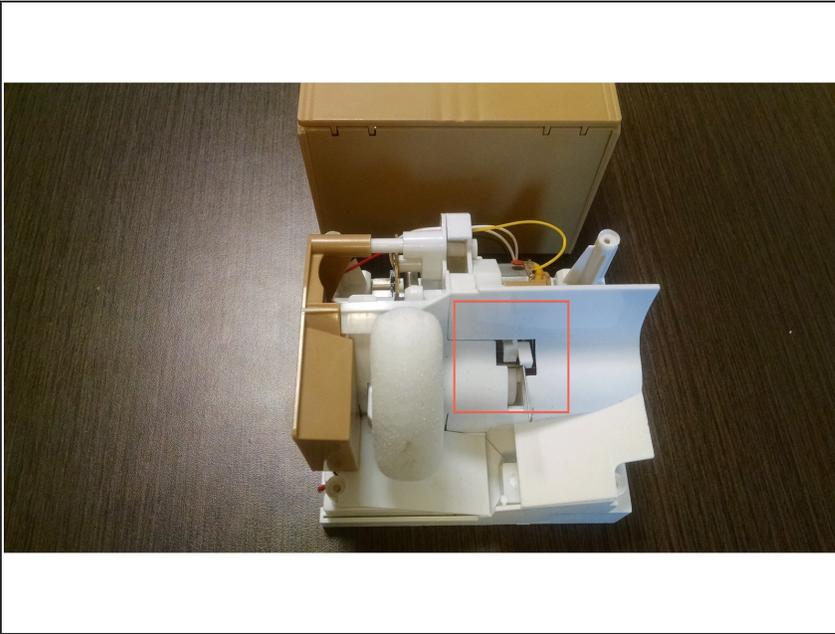

- Locate the jam. You might need to temporarily put in the batteries to activate the arm, so you can find the jam.

## Step 7

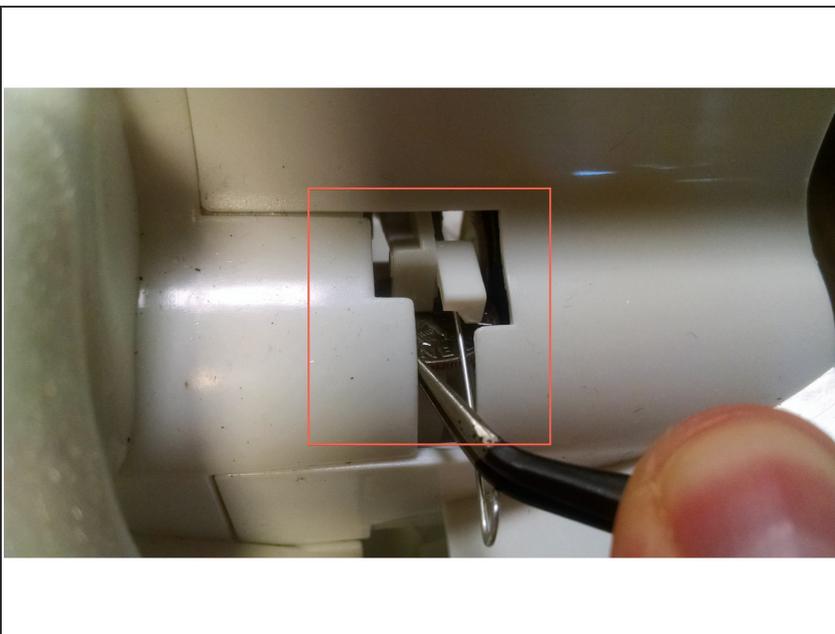

- Remove the coin using a set of tweezers.

## Step 8



- Reassemble the device and enjoy your working Hungry Cat Savings Bank!

To reassemble your device, follow these instructions in reverse order. Make sure to remove the batteries before reassembling.