



Panasonic DVD-RV31 Player Outer Case Replacement

Removal of the Panasonic DVD-RV31 outer case is...

Written By: Kevin



INTRODUCTION

Removal of the Panasonic DVD-RV31 outer case is necessary to gain access to the mainboard and other components. Removing the outer case is required to perform any other repairs in following Panasonic DVD-RV31 guides.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

Step 3 — Outer Case



- Remove the three screws running along the back edge of case cover.
- Remove the two screws from each side of the case cover.

Step 4



- Grab edges of the cover with your hands. Pull outward slightly, then straight up.

To reassemble your device, follow these instructions in reverse order.