



Removing Panasonic DVD-RV31 Player Rear Panel

Outline what you are going to teach someone how...

Written By: Kevin



INTRODUCTION

Outline what you are going to teach someone how to do.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Outer Case



- Remove the three screws running along the back edge of case cover.
- Remove the two screws from each side of the case cover.

Step 2





- Grab edges of the cover with your hands. Pull outward slightly, then straight up.

Step 3 — Rear Panel



- Be sure [case cover](#) has been removed prior to back panel removal.
- Remove 5 screws from panel, as shown.

Step 4

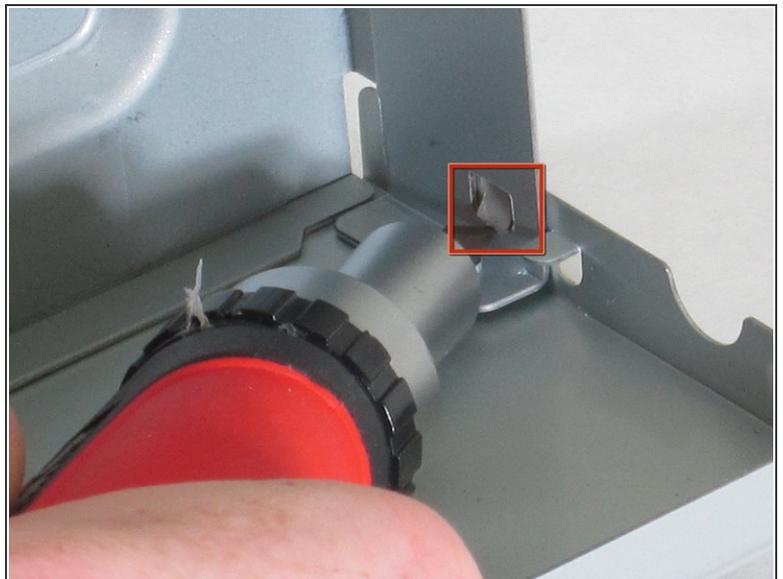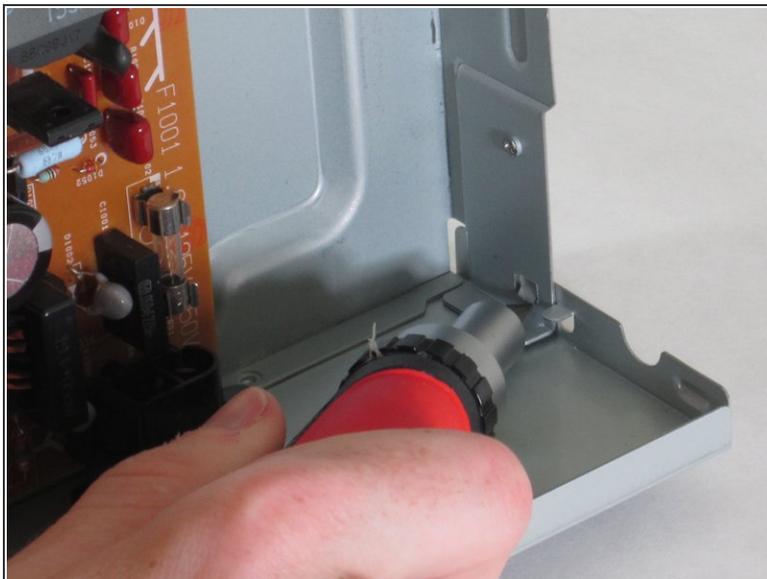

- Use flat-head screwdriver to push in square tabs, located on each side of the back panel.
- Use caution, the edges are sharp.

To reassemble your device, follow these instructions in reverse order.