




LG Optimus Fuel Speaker Replacement

Replace the speaker on your phone if you're having trouble hearing while talking on your phone.

Written By: Jason Owen

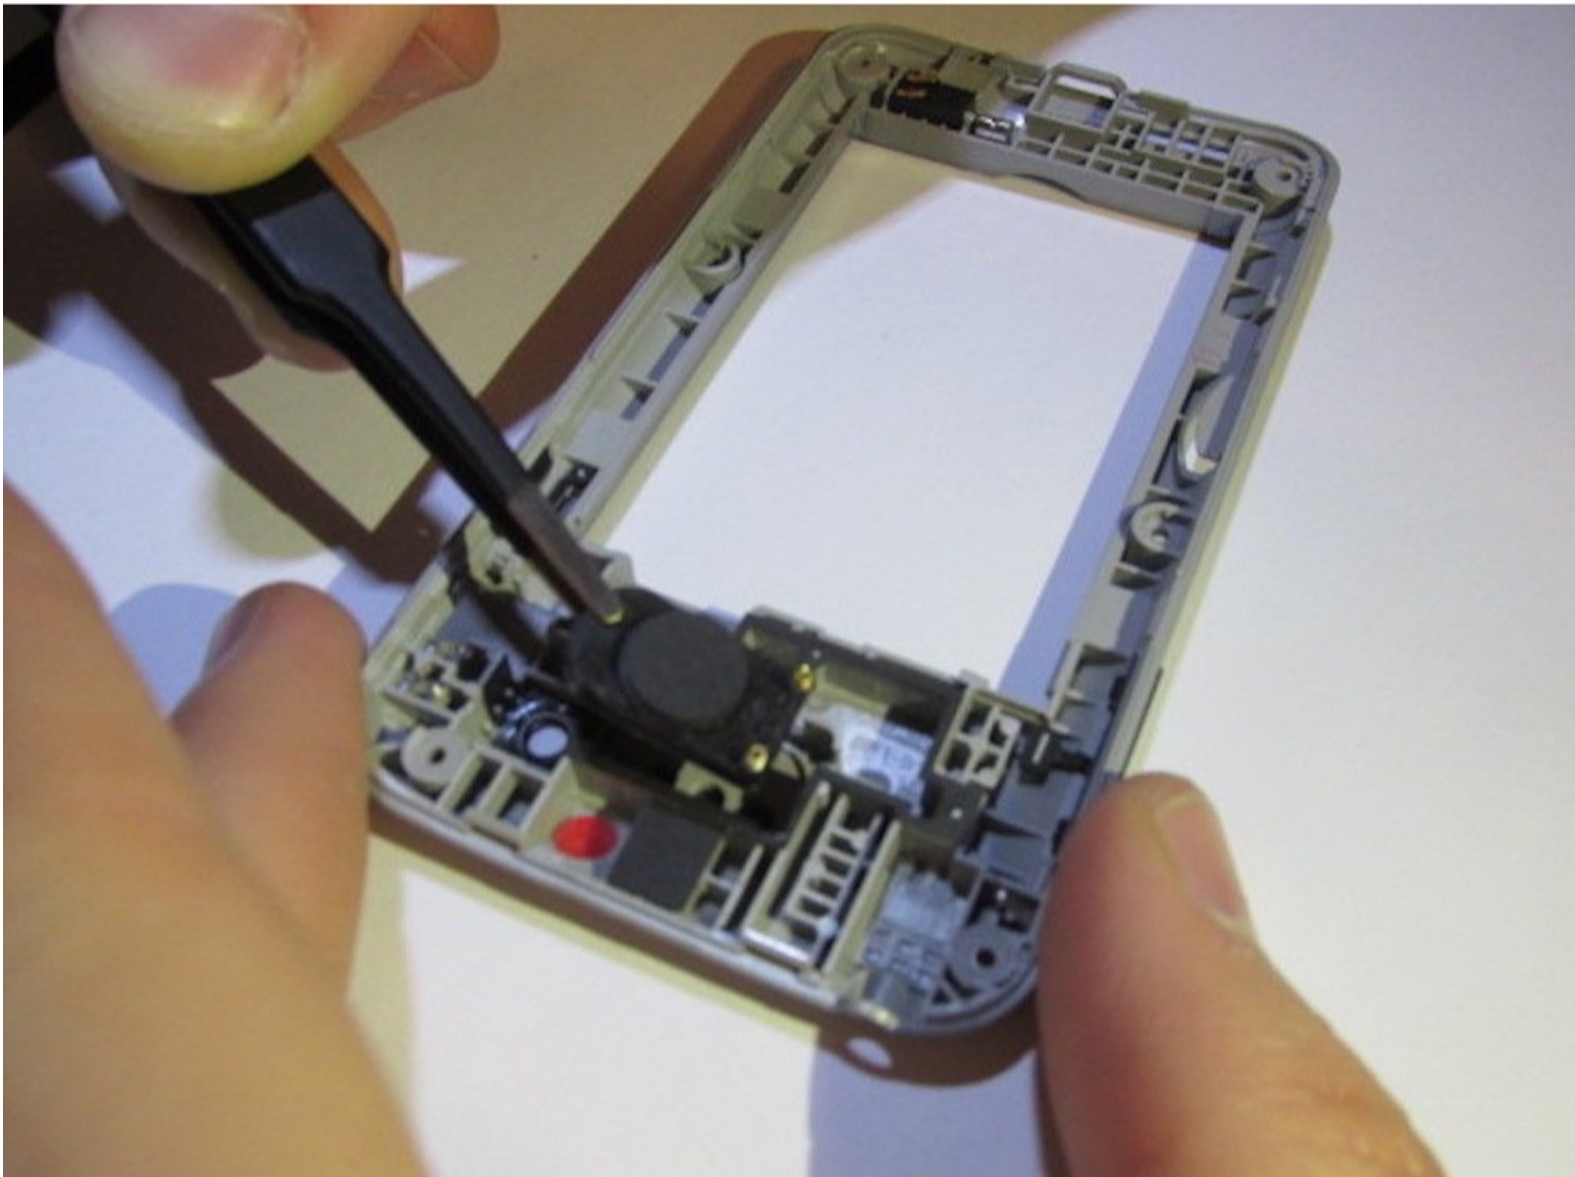

INTRODUCTION

You may need to replace your speaker if you notice a decrease in sound quality while using your phone or while listening to music.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Precision Tweezers Set](#) (1)
-

Step 1 — Battery



- Use the opening on the right side of the phone to pull off the plastic back cover.

Step 2




- Use the curved opening at the center-bottom of the battery to carefully remove the old battery.

Step 3 — Speaker



- Remove the six 1.4mm screws using a Phillips head screwdriver with a size PH00 bit. Then fully remove the back panel with a plastic opening tool.

Step 4

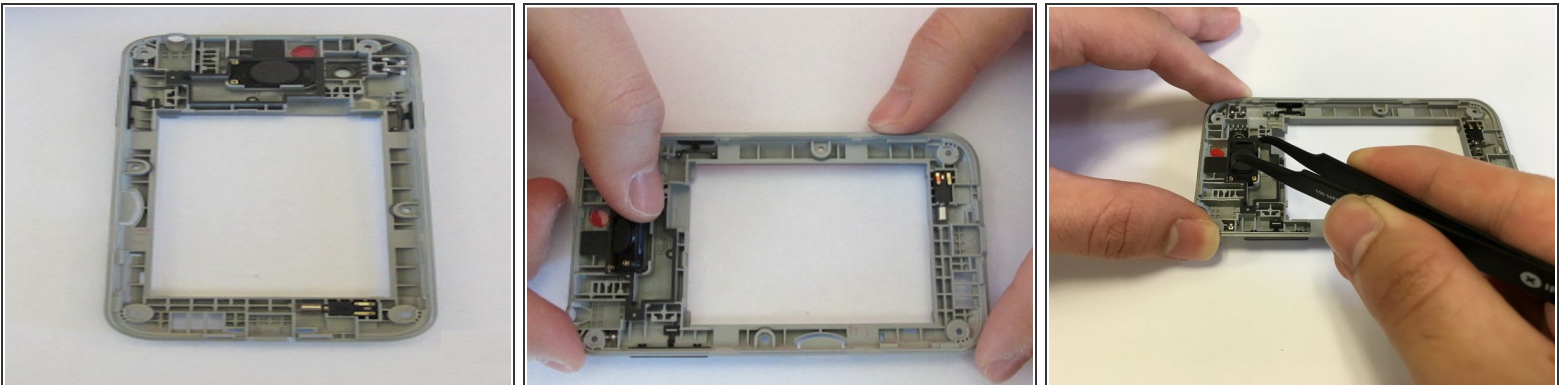

- Remove the speaker from the back panel. You may have to use some tweezers if you are having a hard time grabbing the speaker with your fingers.
- ⓘ Remember to take note of where the two springs on the speaker are positioned before removing it. Install the new speaker with the springs in this same position.

To reassemble your device, follow these instructions in reverse order.