



# Dell Inspiron 15 Ram (Memory Module) Replacement

This guide will show you how to remove and replace the Ram (Memory Module)

Written By: Edward Pacheco



---

## INTRODUCTION


You will be able to remove and replace the Ram in your computer with ease after this guide.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

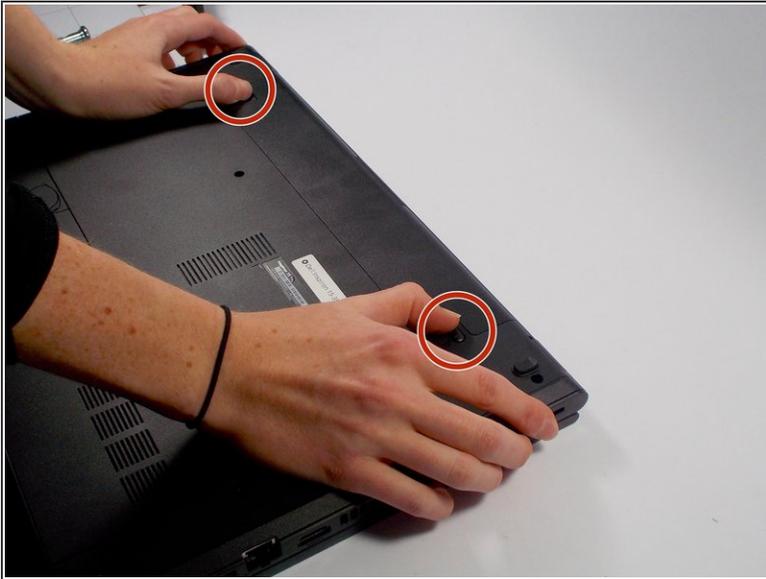

**!** Make sure your laptop is powered off completely and is not connected to the charger.


- Close the laptop and place it so that the back of the screen is lying flat on your work surface.
- Slide both of the battery-release latches towards the outer edges of the laptop to unlock the battery flap.

## Step 2



- Lift the battery at an angle using your fingertips and remove it from the laptop.
- i** Press and hold the power button for 5 seconds. This ensures that any remaining power will drain out of the computer.

### Step 3 — Ram (Memory Module)

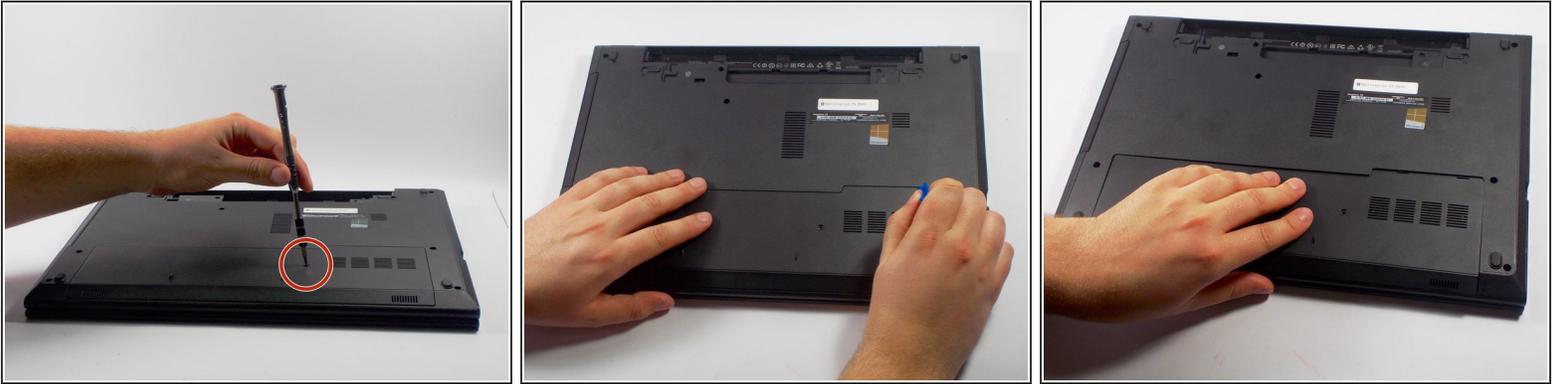

- Remove the bottom cover by removing the 4 mm screw using a PH-0 Phillips screwdriver that secures the base cover to the laptop base.
- Using the plastic opening tool, pry the base cover from the base.
- Slide the base cover towards you and remove it from the base. Put it aside.

### Step 4



- Using your fingertips, pry the vertical sides of the memory module apart until the piece pops out of place.
- Slide the memory module out of its slot and lift it out of the laptop base.

To reassemble your device, follow these instructions in reverse order.