




Sony Handycam HDR-CX220 Buttons Replacement

Replace the buttons if they are stuck or broken.

Written By: Keven

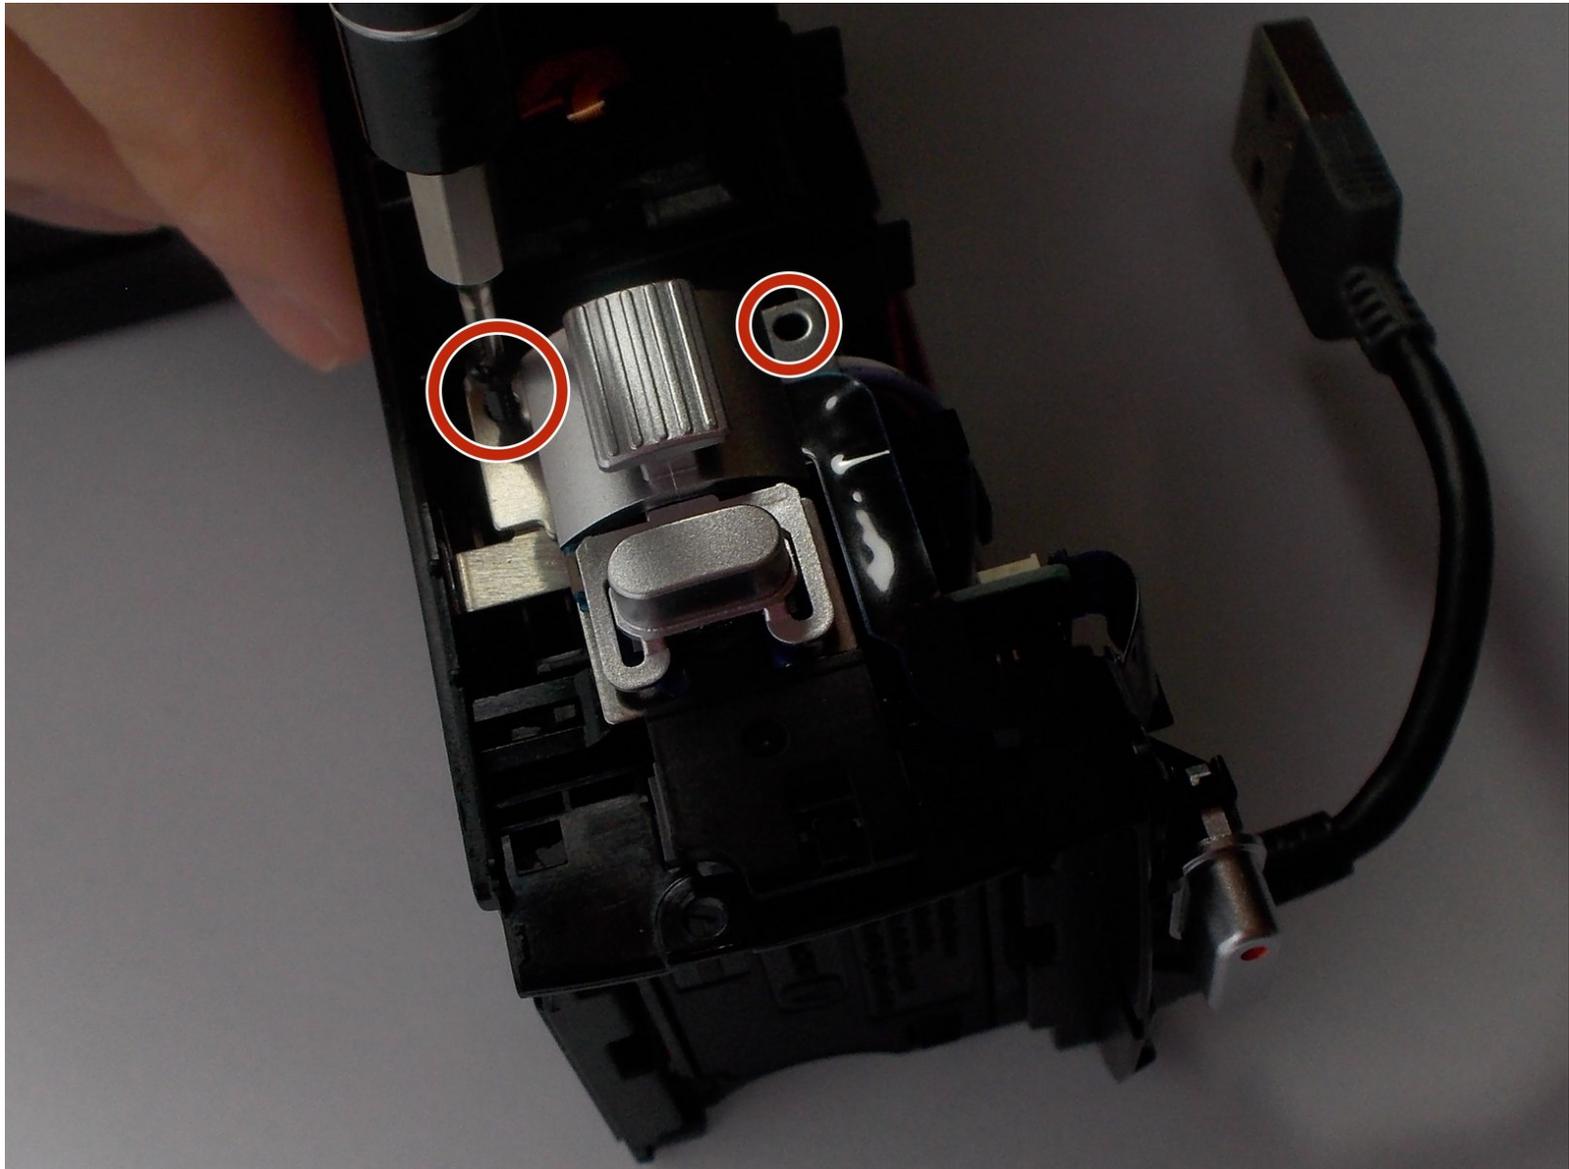

INTRODUCTION

The replacement of the buttons are necessary if you are struggling to manage through your menus, or having trouble pressing the buttons in general.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Push in the battery indicator.

Step 2



- Slide the battery out of the slot.
- ★ To put the battery back in, line up the battery's metal part with the camera's and slide it in.

Step 3 — Camera's Body

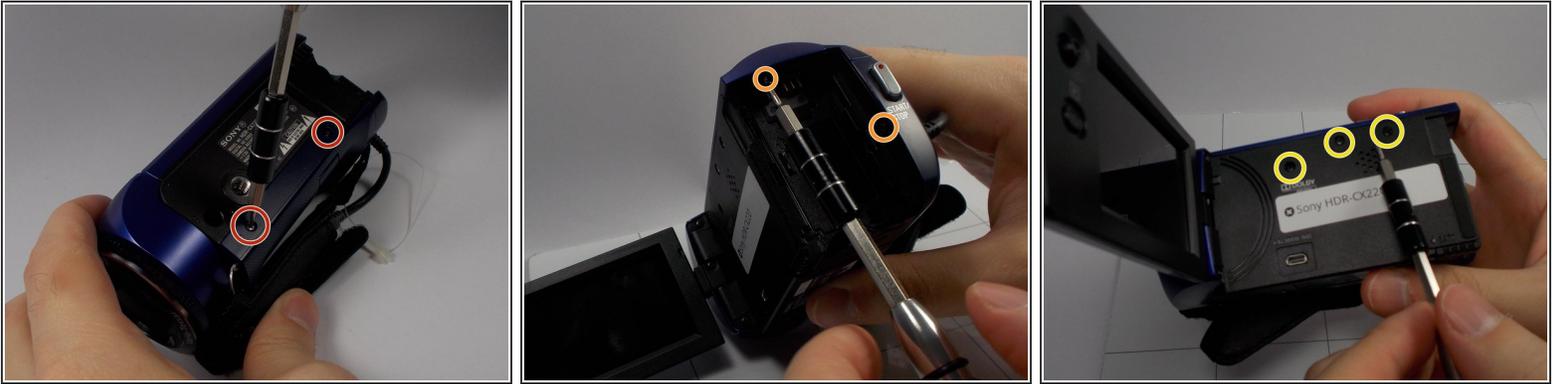


- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the three 5mm screws.

Step 4






- Use the plastic opening tool to loosen the plastic case of the camcorder.

Step 5

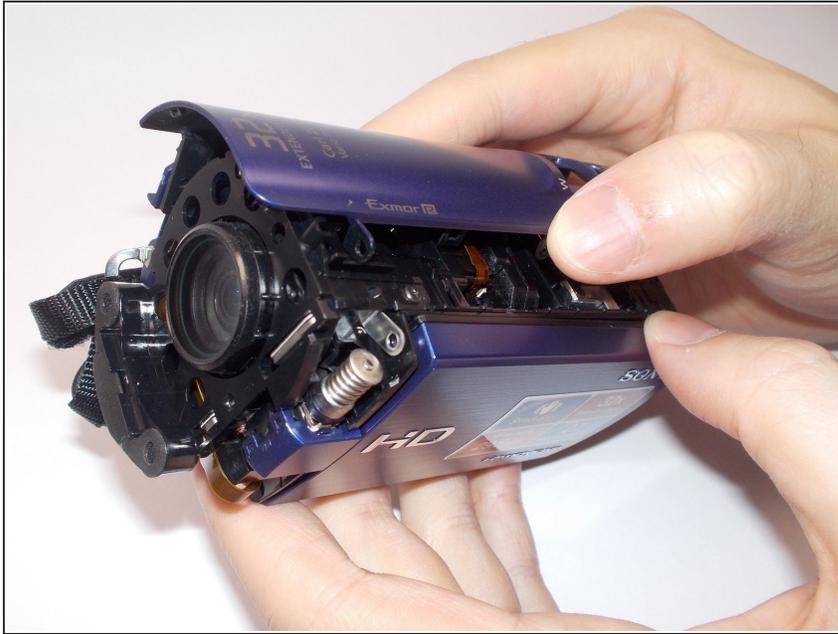



- Use your hands to remove the plastic case.
- ⚠ Gently pull on the case not to damage anything internally.

Step 6 — Buttons

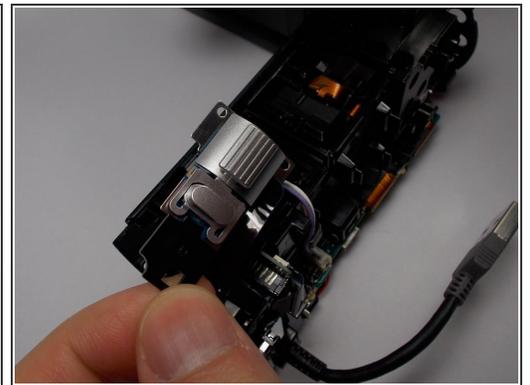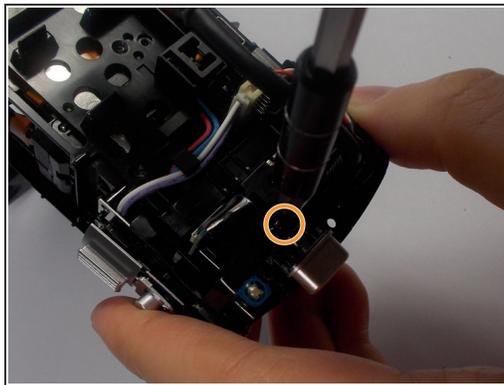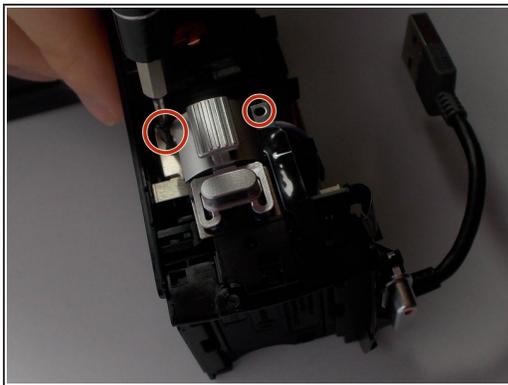

- Use the Philips #0 screwdriver to unscrew the two 5mm screws shown on top of the camera.
- Remove the one side 5mm screw using a Philips #0 Screwdriver.
- Remove the top buttons from the hook.

Step 7

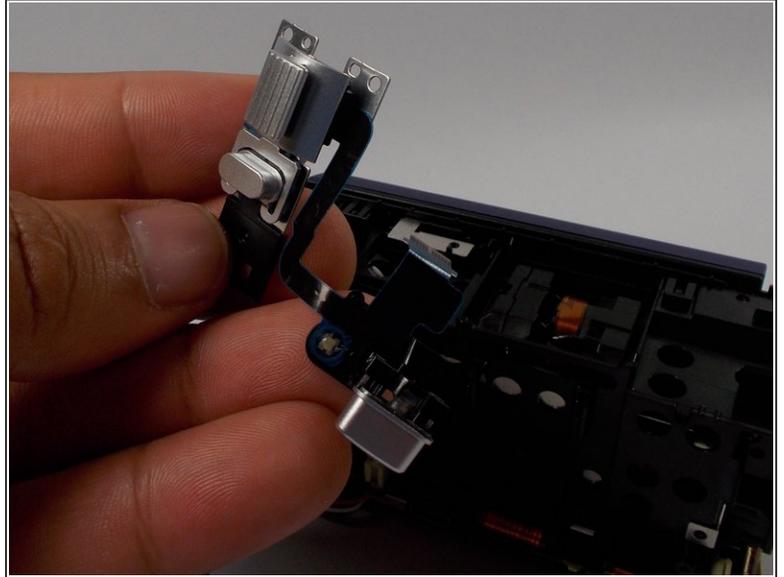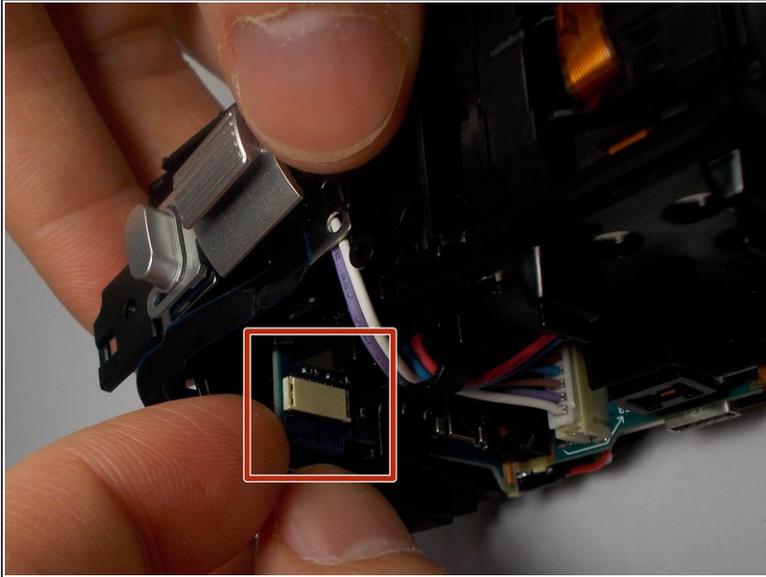

- Unplug the connected wire shown.
- ⚠ Pull gently not to cause any damage.

To reassemble your device, follow these instructions in reverse order.