




# Lenovo Flex 3-1120 Speakers Replacement

Replace the speakers in your Lenovo Flex 3-1120.

Written By: Geoff Bentz

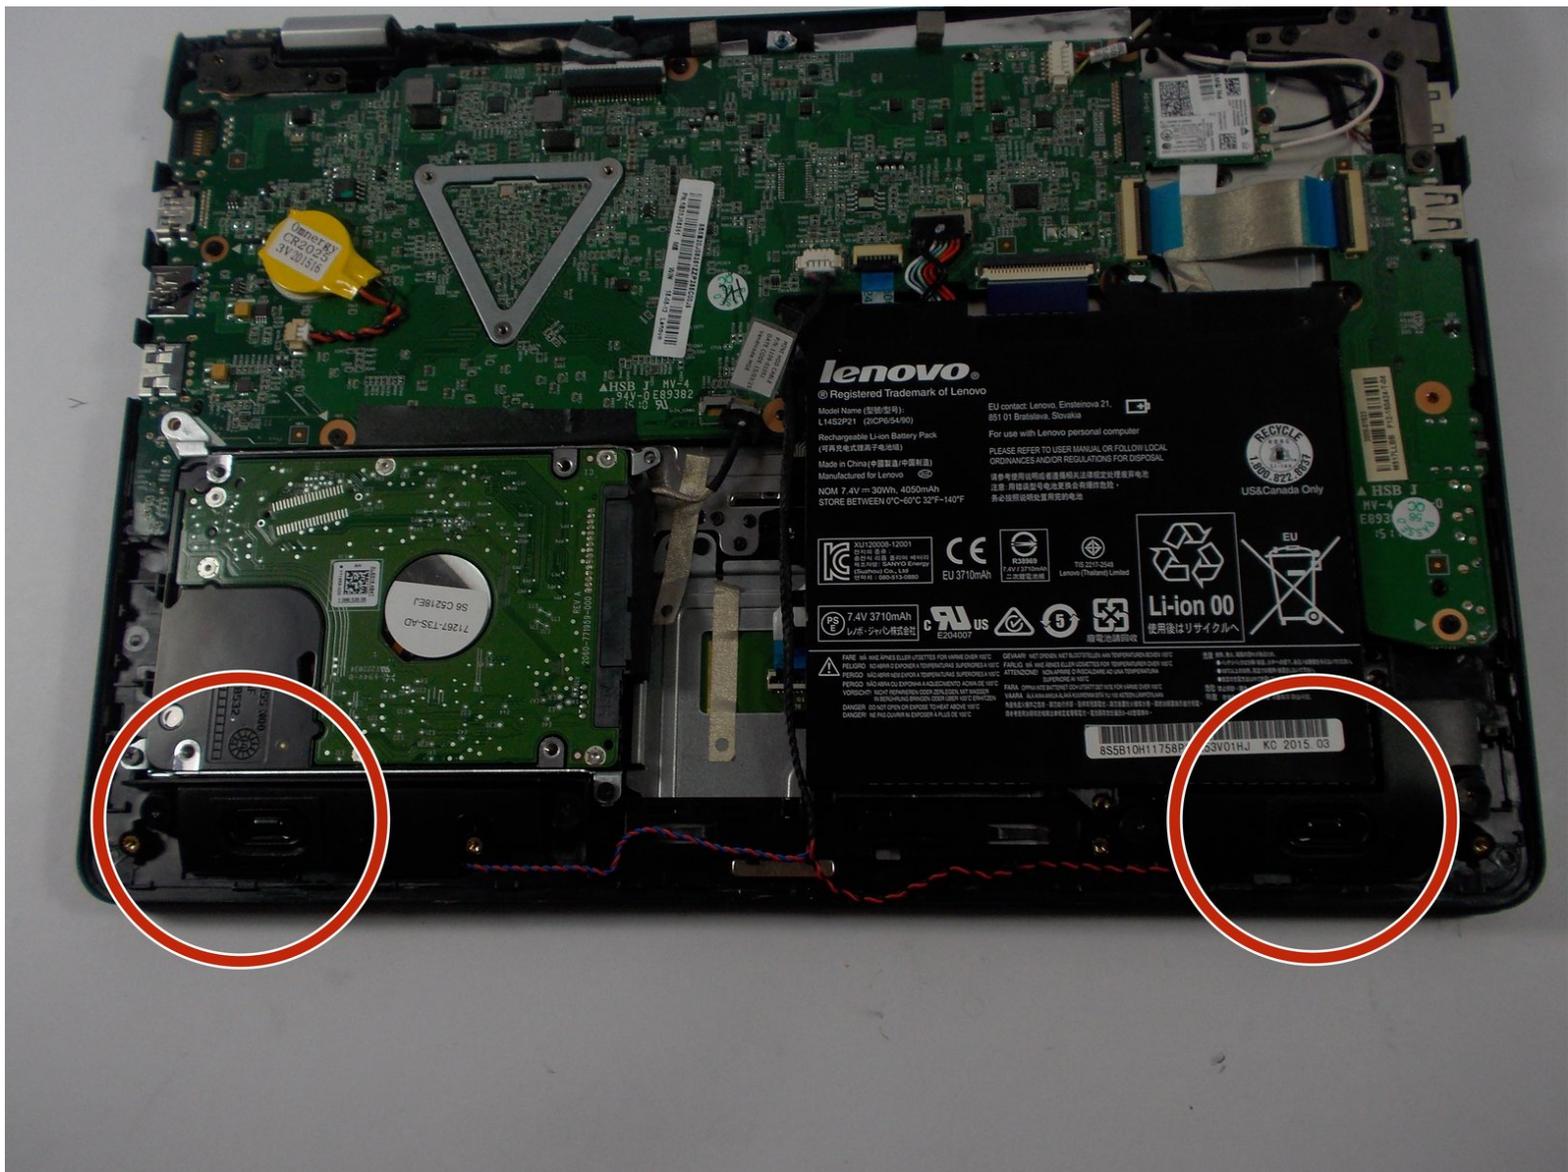

---

## INTRODUCTION

If sound output is distorted, or no sound is coming from your speakers at all, then your speakers may need to be replaced.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Bottom Panel




- Lay the computer down with the bottom panel facing up.

## Step 2



- Locate the ten 6mm Phillips screws along the edges and in the center of the back panel.
- Remove all ten 6mm Phillips screws with a size 0 Phillips screwdriver.

### Step 3

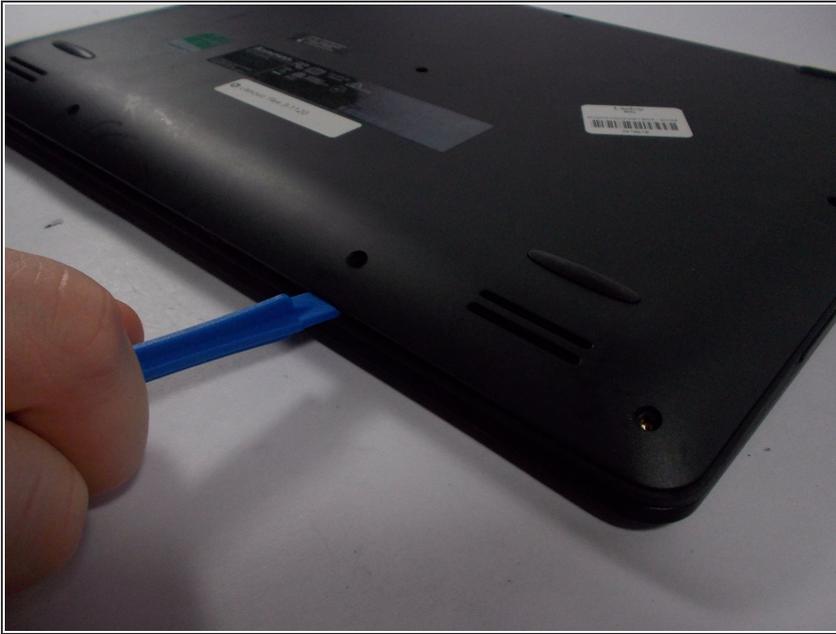


- Wedge the plastic opening tool into the small space under the back panel.
  - Use the plastic opening tool as a lever to separate the bottom panel from the computer.
  - Slide the tool along the edges of the computer until the bottom panel is completely separated.
- i** You may start prying the bottom panel on any edge.

### Step 4





- Lift the bottom panel off of the computer.

## Step 5 — Speakers

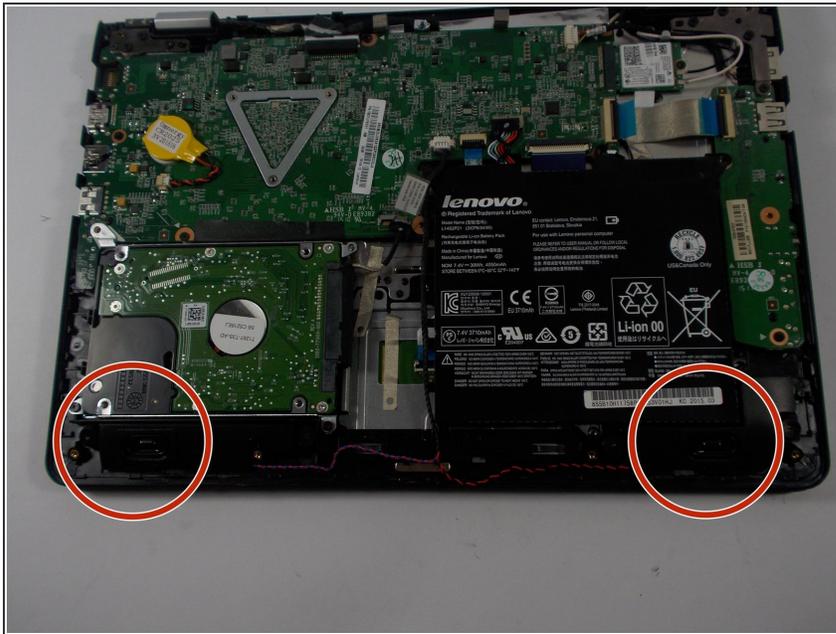



- Locate the speakers at the bottom left and right corners of the computer.

## Step 6

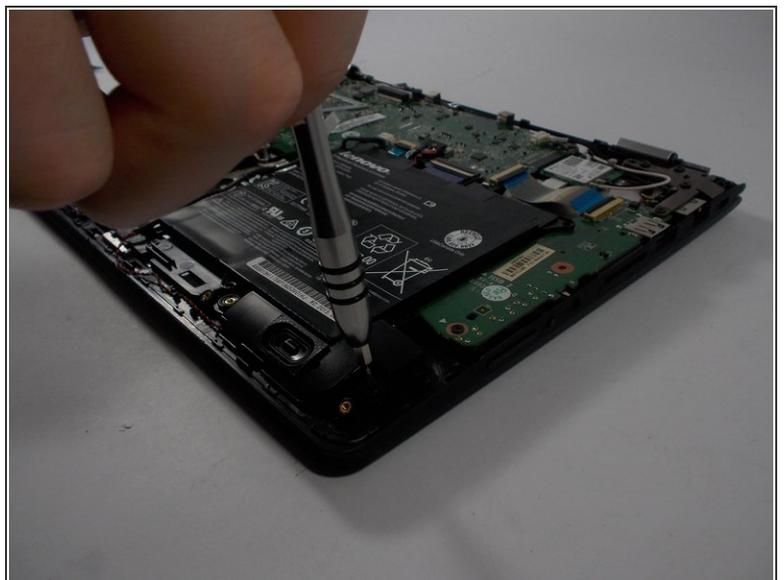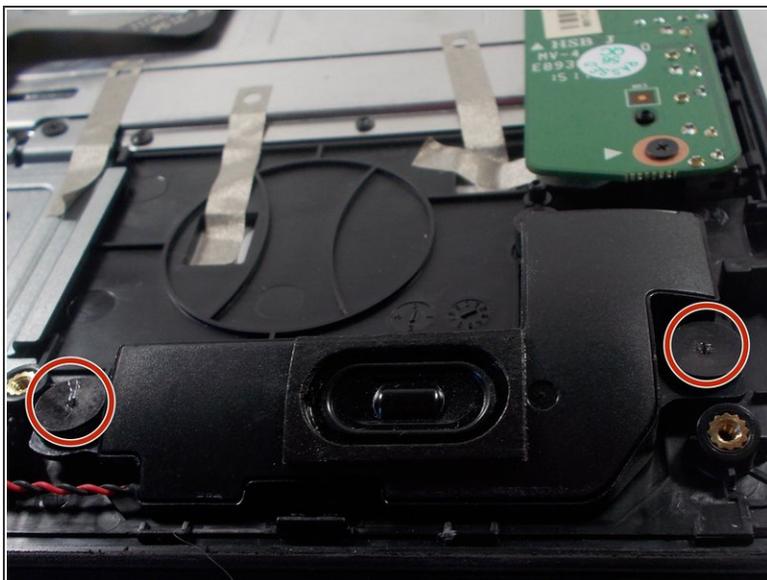


- Locate the two 1mm Phillips head screws on both speakers.
- Remove both screws from each speaker.

## Step 7

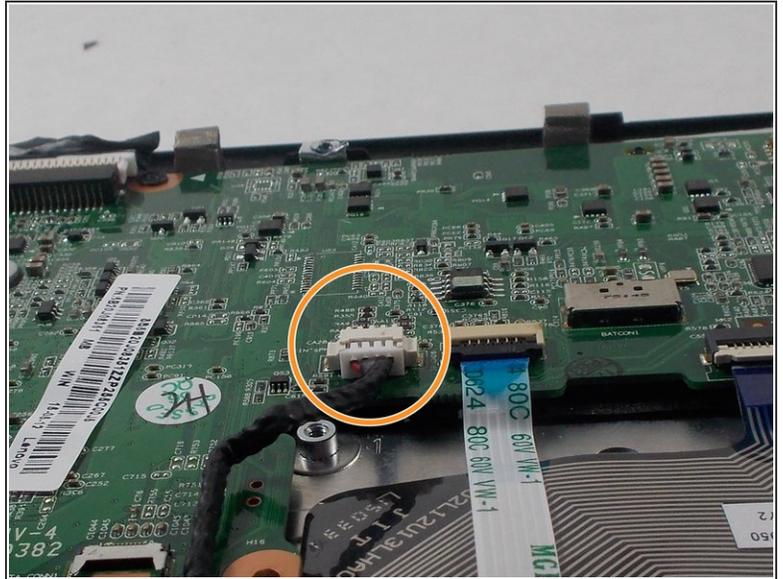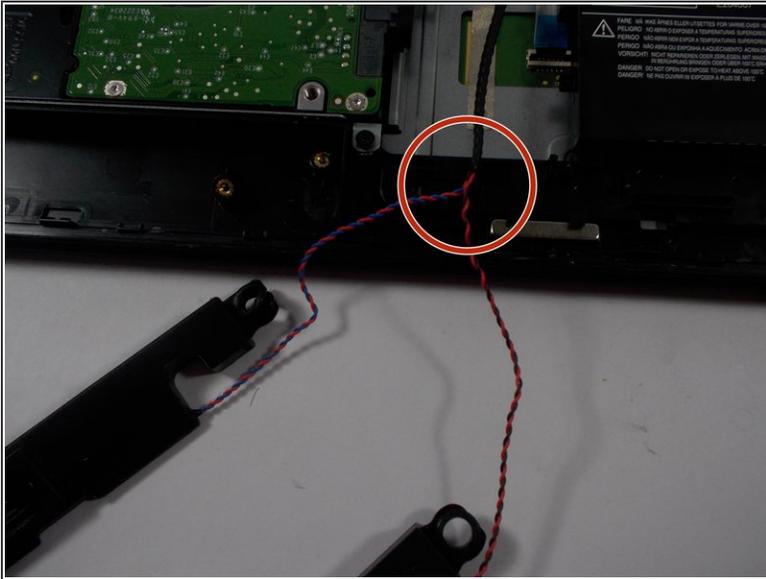

- Locate where the two speaker wires join at the center of the computer.
- Follow the wires directly upward to where they connect into the motherboard.

## Step 8

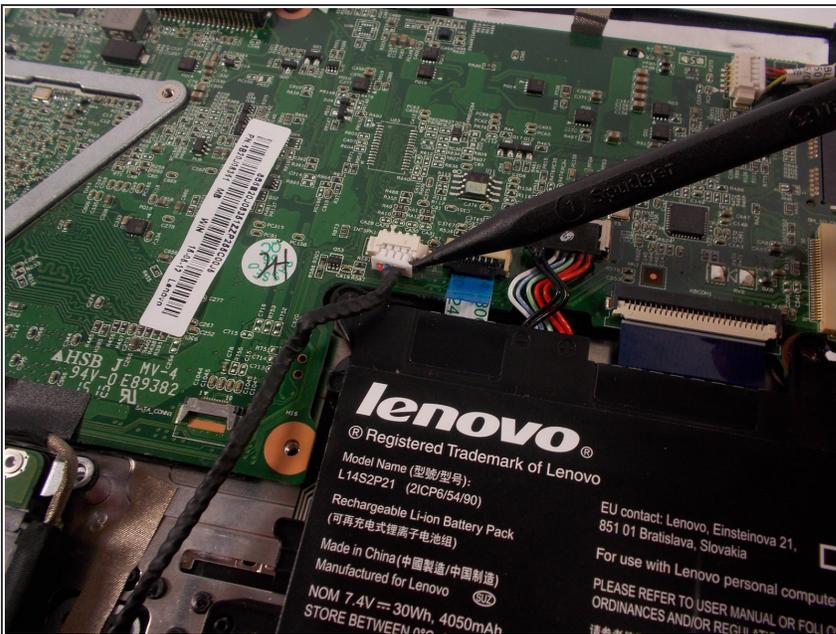

- Using the spudger, pull the wire down and away from the motherboard to disconnect it.

To reassemble your device, follow these instructions in reverse order.