



FoodSaver V4980 Seal Profile Replacement

This guide will allow you to replace the rubber seal profile on the FoodSaver Appliance.

Written By: Mackenzie Grossgold



INTRODUCTION

In this guide, we will outline how to properly unhinge the rubber seal profile and replace it after cleaning or with a new seal profile.

Step 1 — Seal Profile



- Open the drawer on the bottom side of the FoodSaver first.

Step 2



- Gently pull the sides of the rubber seal profile with a finger and remove it from the device.

To reassemble your device, follow these instructions in reverse order.