



Westcott iPoint Evolution Outer Casing Replacement

Remove the outer casing of your Westcott iPoint Evolution pencil sharpener.

Written By: Lilly




INTRODUCTION

In this guide, you will learn how to remove the outer casing of the Westcott iPoint Evolution pencil sharpener. Use this guide to replace the casing or to access the sharpener's internal components.

TOOLS:


- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Outer Casing

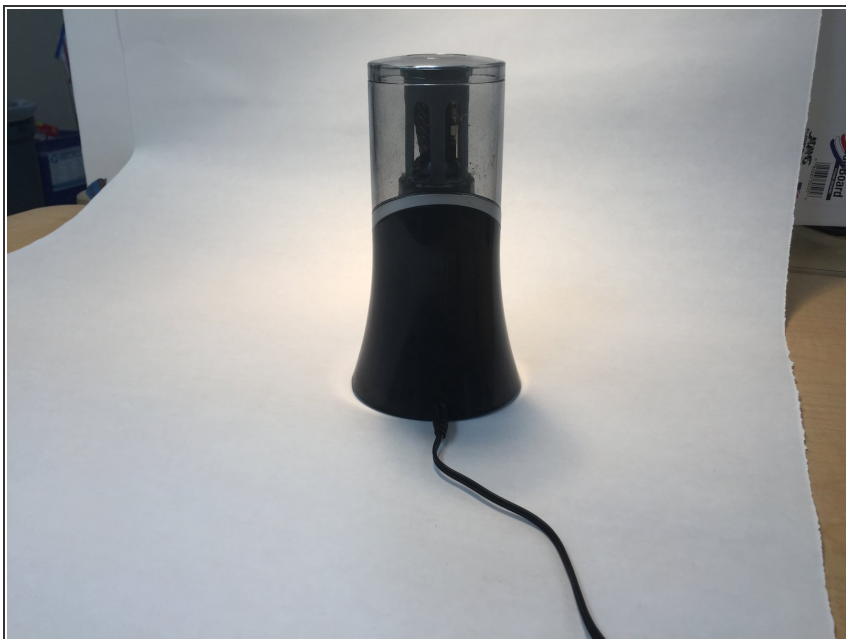

- Step 1: Start with the back of the pencil sharpener facing you.
- ⓘ This allows you to locate the power source.

Step 2

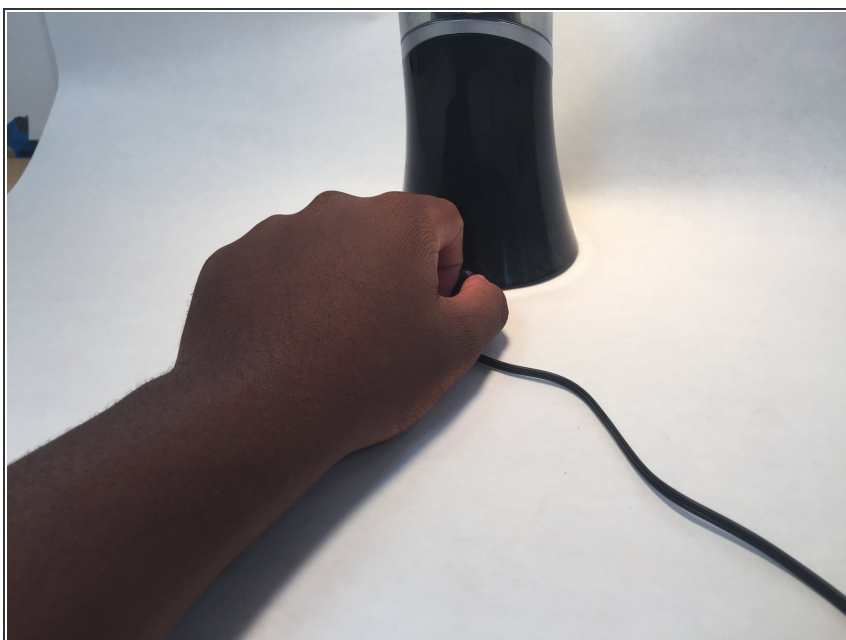

- Step 2: Grab the end of the plug located at the bottom of the sharpener and pull it out gently.

Step 3



✦ There are three parts of the sharpener.

- Step 3: Grab the very top of the sharpener, twist it to the right and lift it up to remove it.

Step 4




- Step 4: Grab the center of the sharpener and lift it up to remove the piece.

Step 5



- Step 5: Remove the small ring that is around the sharpener.

 This piece is below the center of the sharpener that you just removed.

Step 6



- Step 6: Flip the pencil sharpener upside down.
- Locate the four screws on the bottom of the sharpener.

Step 7




- Step 7: Take a screwdriver and unscrew all of the screws on the bottom.

Step 8



- Step 8: After all the screws are removed gently take off the bottom of the sharpener.

Step 9

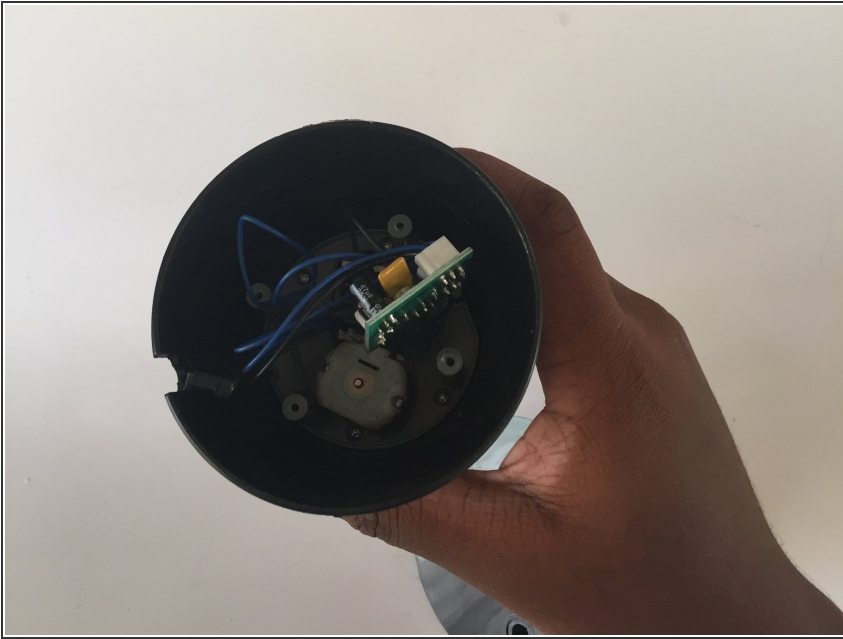

- Step 9: Carefully lift the lid off of the sharpener.

To reassemble your device, follow these instructions in reverse order.