



Insignia NS-D160A14 Outer Case Replacement

This guide will teach readers how to remove the outer case of the Insignia NS-D160A14. Removing this, and then the front assembly, will expose other important internal components.

Written By: Ian Hanken



INTRODUCTION

In this guide, you will learn how to remove and, if necessary, replace the metal outer casing of the Insignia NS-D160A14. This is a necessary prerequisite for all other replacement guides for this DVD player. Luckily, it is a short and simple process. Let's get started.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)

Step 1 — Outer Case



- ⚠ Unplug the power cord before proceeding to open the DVD player's enclosure.
- Remove the two 7mm Phillips #2 screws from the back of the DVD player.

Step 2

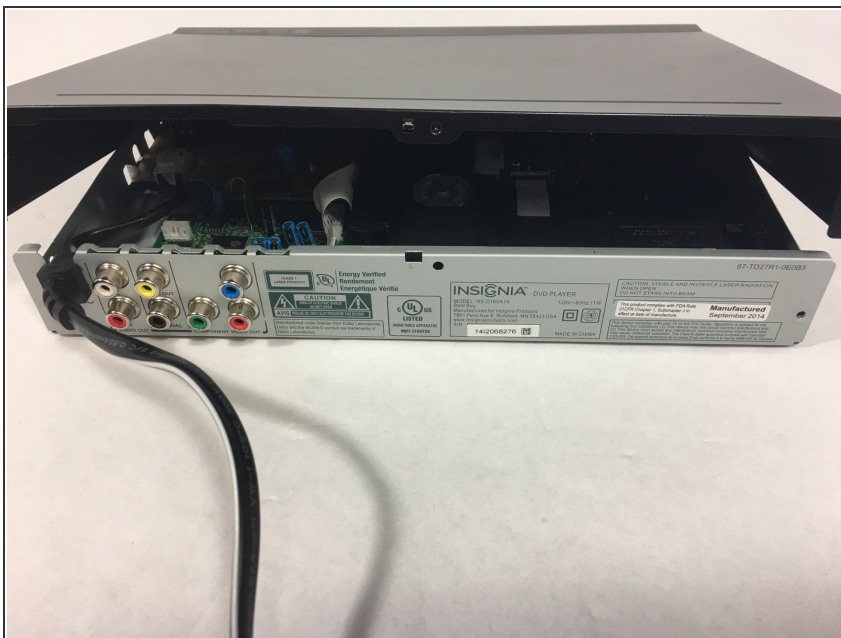

- Carefully lift the outer case up, starting from the back.
- ⓘ Removing the outer case may require some force, and you will need to get the case into an angled position compared to the rest of the DVD player before it can be completely separated.

To reassemble your device, follow these instructions in reverse order.