



How to clean the Epson Stylus Photo 1400

Light cleaning maintenance for Epson Stylus Photo 1400.

Written By: Luis Ruiz



INTRODUCTION

The purpose of this guide is to show how to clean the Epson Stylus Photo 1400. Maintenance should be done several times per year for consistent performance.

- Caution: Do not touch the gears or any other parts inside the printer.

TOOLS:


- [Soft Brush](#) (1)
 - [Soft Cloth](#) (1)
-

Step 1 — How to clean the Epson Stylus Photo 1400





- Turn off the printer.
- Remove all paper and CD/DVD tray.
- Disconnect power from wall socket.
- Disconnect USB cord from printer.

Step 2 — Clean the tray feeder.

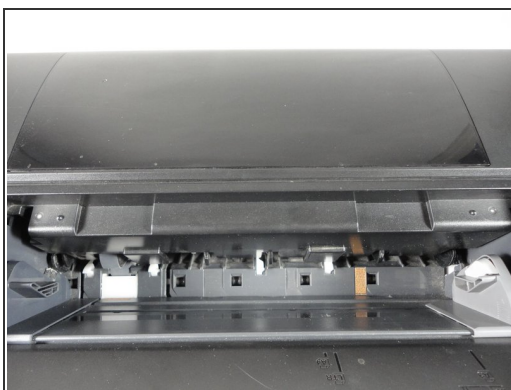

- Use a soft brush to clean the sheet feeder.
- i** If there are ink spots or dirt on the inside of the printer, use cloth to clean the plastic area shown.


Step 3 — Clean the inside.

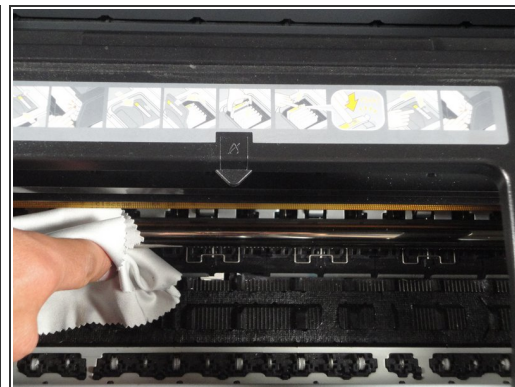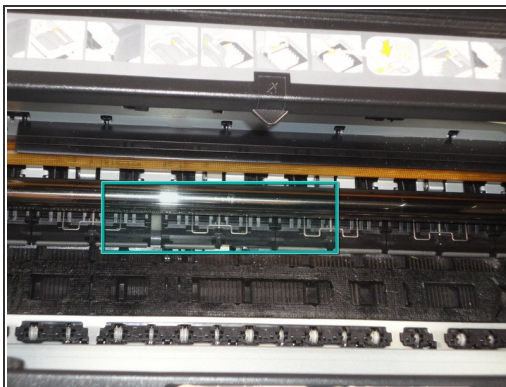

- Use cloth to clean the plastic parts and metal bar.

⚠ Try not to touch the roller gears.

Step 4 — Clean the bottom.

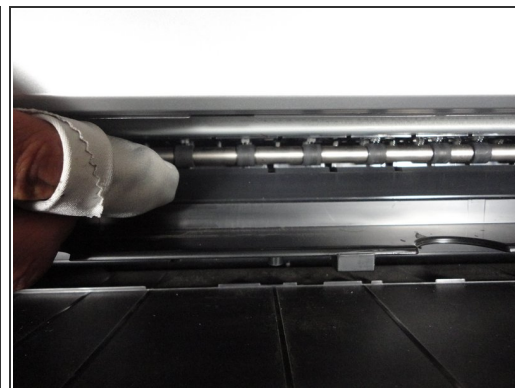

- Wipe off the roller on the bottom with the cloth.
- Clean off any dust on the plastic tray.

To reassemble your device, follow these instructions in reverse order.