



# Removing the HP Compaq dx2000MT Optical (CD) Drive

This guide will show you how to remove the...

Written By: Logan Pace



---

## INTRODUCTION

This guide will show you how to remove the optical (cd) drive from your HP Compaq dx2000MT.

---

### TOOLS:

- [T15 Torx Screwdriver](#) (1)
-

## Step 1 — Removing the HP Compaq dx2000MT Case Doors



- Turn off your computer and remove the power cable by pulling it straight out of its socket.

## Step 2



- Remove the two Phillips #2 screws that secure the case door to the device.

### Step 3



- Remove the side case door by pushing towards the rear of the device with your hand.
  - ⓘ This may take considerable force so keep pushing!
- Once you slide the door back, remove it by pulling it outwards from the device.

### Step 4




- Remove the side case door by pushing towards the rear of the device with your hand.
  - ⓘ Once again, this may take considerable force.
- Once you slide the door back, remove it by pulling it outwards from the device.

## Step 5 — Optical (CD) Drive



- Remove the IDE data cable and the power cable from the optical drive by pulling away from the drive.

## Step 6

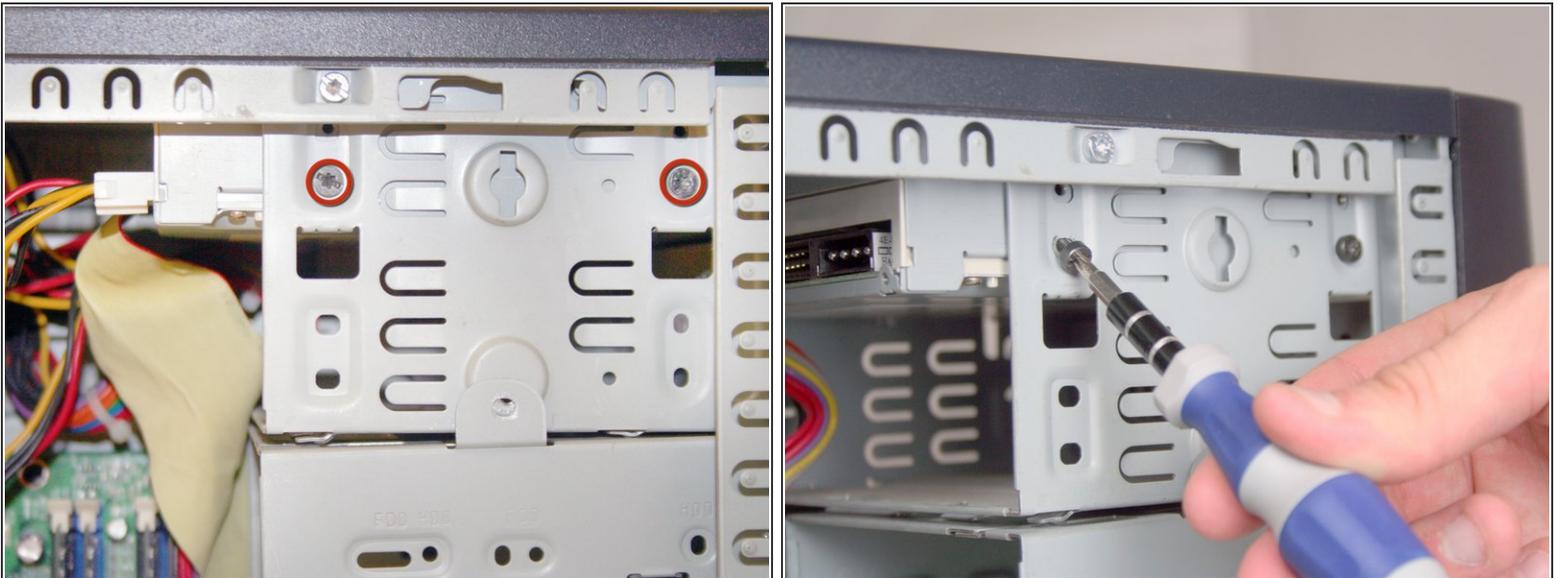

- Remove the 2 Torx T15 screws holding the optical drive in place.

## Step 7



- Remove the other 2 Torx T15 screws holding the other side of the drive in place.

## Step 8



- Remove the optical drive by sliding it out the front of the device.

To reassemble your device, follow these instructions in reverse order.