




HTC Wizard 200 Keyboard Slider Replacement

Installation of the Keyboard Slider on the HTC Wizard 200.

Written By: Kyle Champ

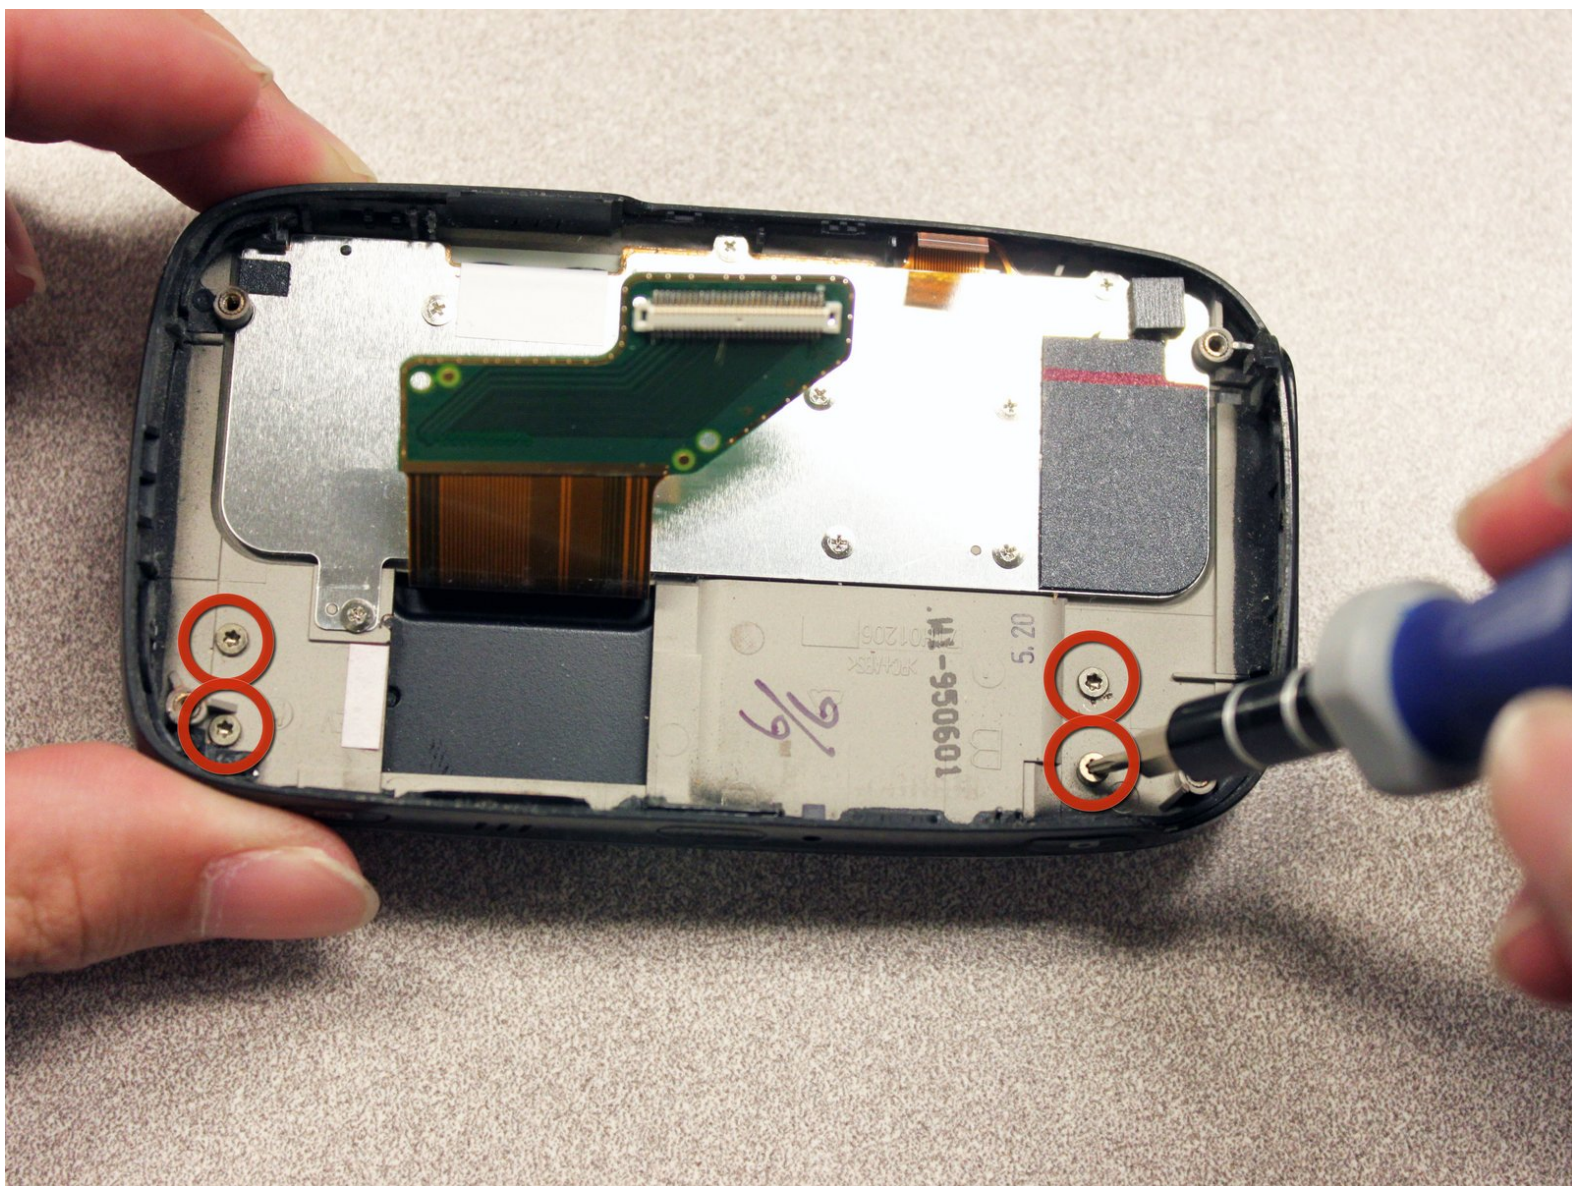

INTRODUCTION

This guide will explain how to remove and install the keyboard slider on the HTC Wizard 200.

The keyboard slider slides out from the right side of the phone to reveal a QWERTY keyboard. The main use of the keyboard is for texting, as well as all typing on the phone.

The keys should type out the correct letter when typing and not repeat letters when pressed once. The slider should smoothly move in and out of the body without catching or sticking. If these symptoms are present, then the keyboard slider needs repairing.



TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- To expose the battery, remove the outer case with your fingernail.
- Remove the battery by pulling the black tab.

Step 2 — Back Panel




- Insert the flat end of the [spudger](#) into the two notches on the back of the camera cover and pry them up.

Step 3



- Work the [spudger](#) around the edges of the camera cover until it comes off.

Step 4

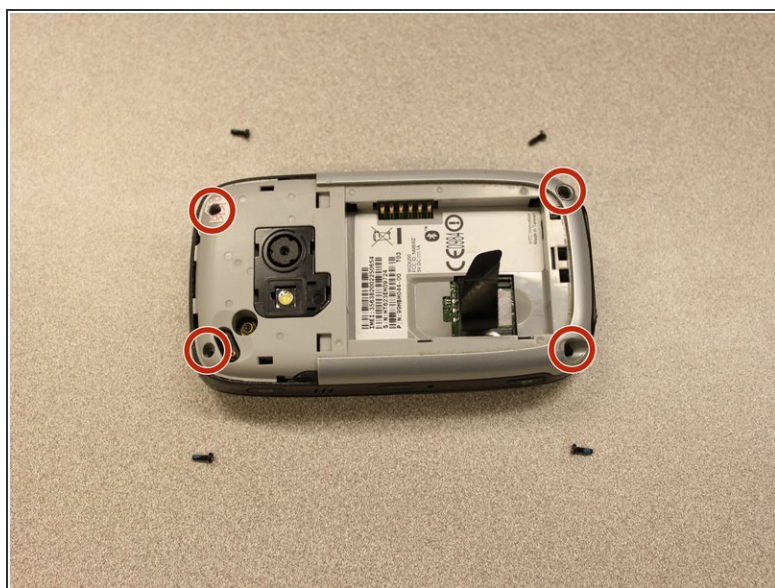

- Remove the four 6 mm screws with the [T5 Torx screwdriver](#).


i One of the screws is under the "void" sticker.

Step 5



- Insert the flat end of an iFixit opening tool between the side and inner covers to create a gap.
- Work the tool around the edges until all the clips release.

Step 6

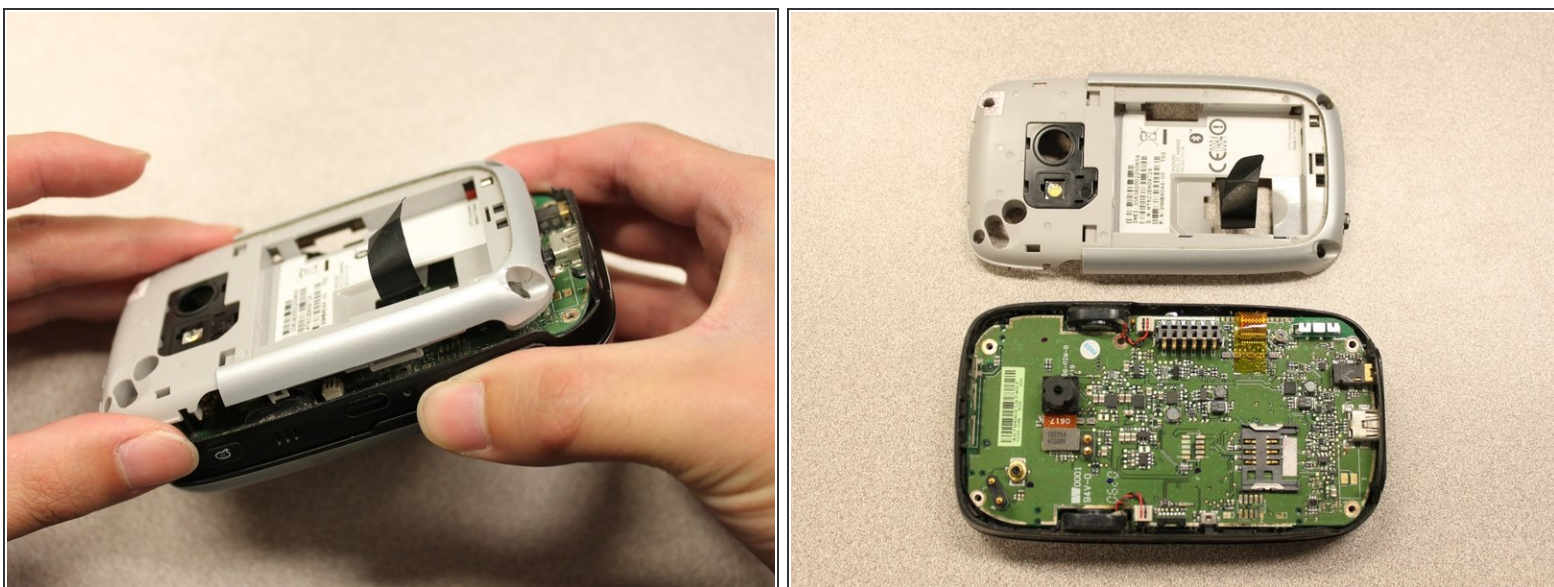



- Once all the clips are open, remove the inner panel from the phone.

Step 7 — Motherboard



- Use the [spudger](#) to pry the camera off.

Step 8

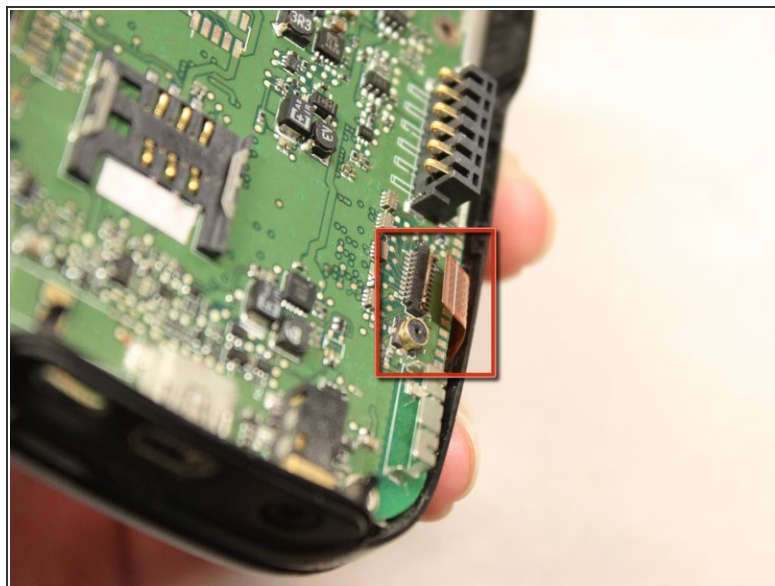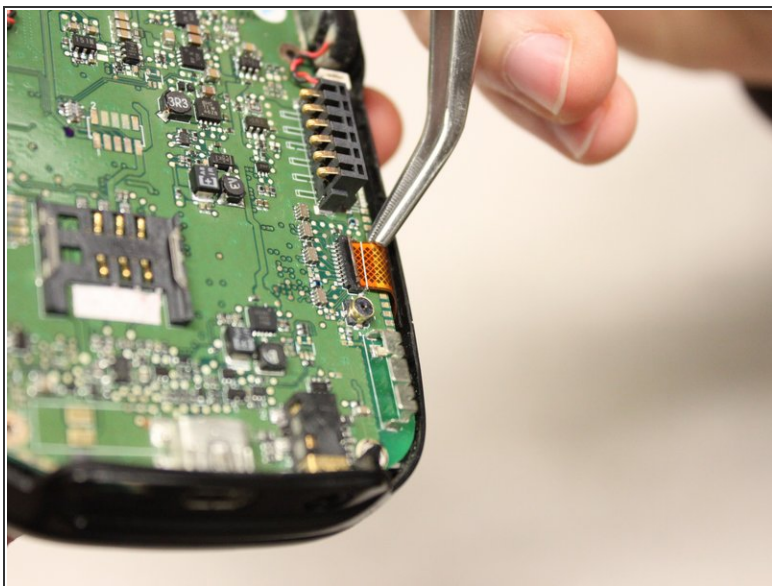


- Using [tweezers](#), flip the connector latch away from the motherboard.
- Detach the flexible connection from under the connector latch.

Step 9




- Slide the keyboard into the open position.

Step 10

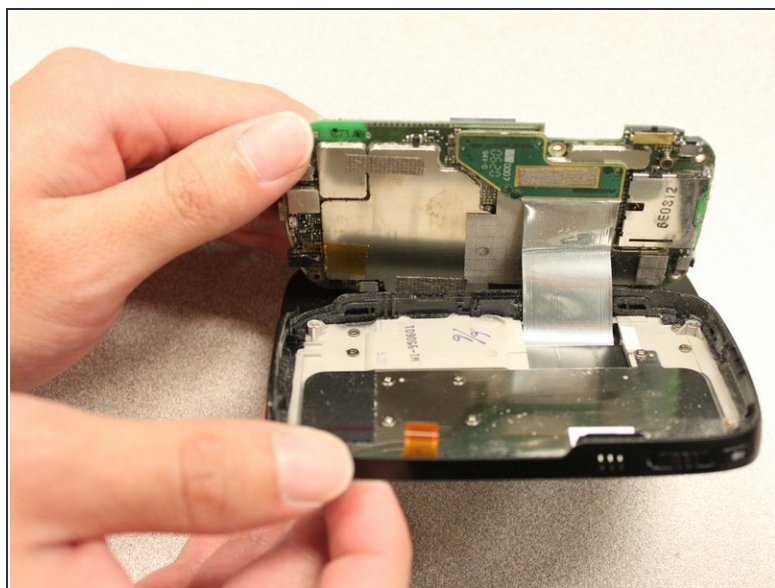

- Lift the motherboard out of the case using the [spudger](#).
- Expose the underside of the motherboard using your hands.

Step 11

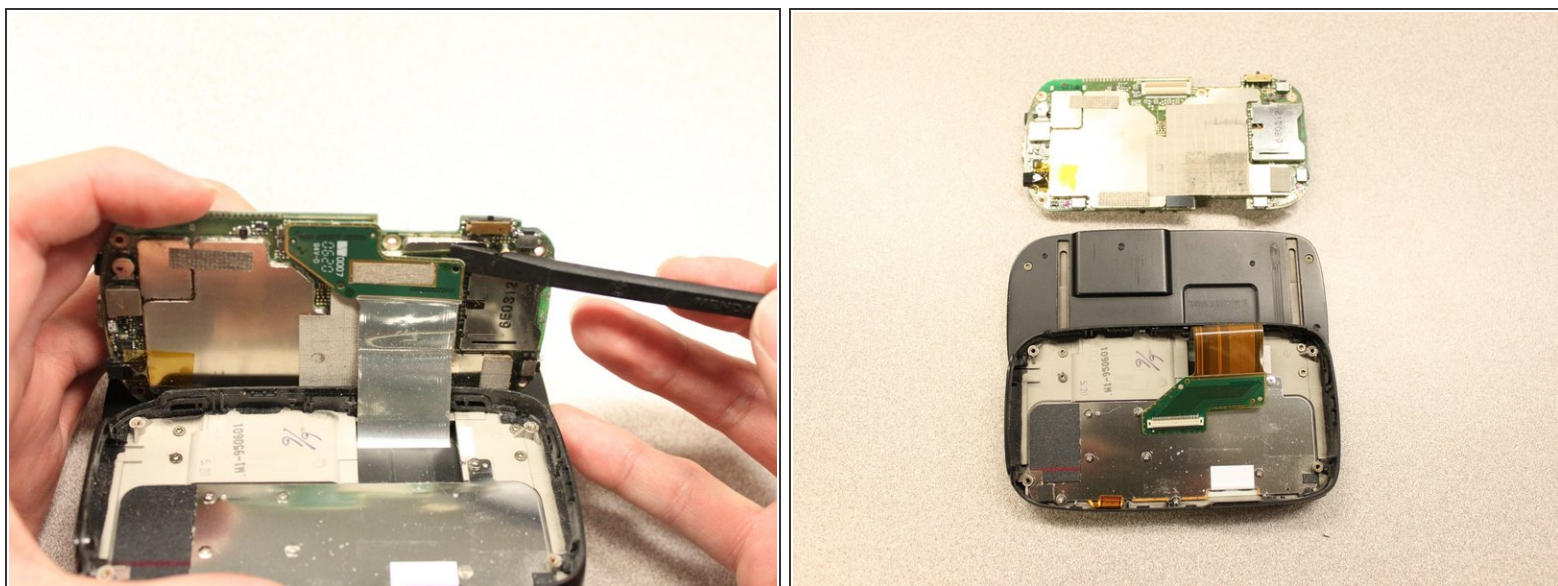

- Remove the flexible connection from the motherboard.

⚠ Caution: Removing the connection too fast may cause damage to the connection and cables.

Step 12 — Keyboard Slider



- Remove the four 5mm screws with the [T5 Torx screwdriver](#).
- Remove the keyboard slider from the main body.

To reassemble your device, follow these instructions in reverse order.