




HTC Wizard 200 Front Buttons Replacement

Installation of front panel buttons in HTC Wizard 200.

Written By: Kyle Champ

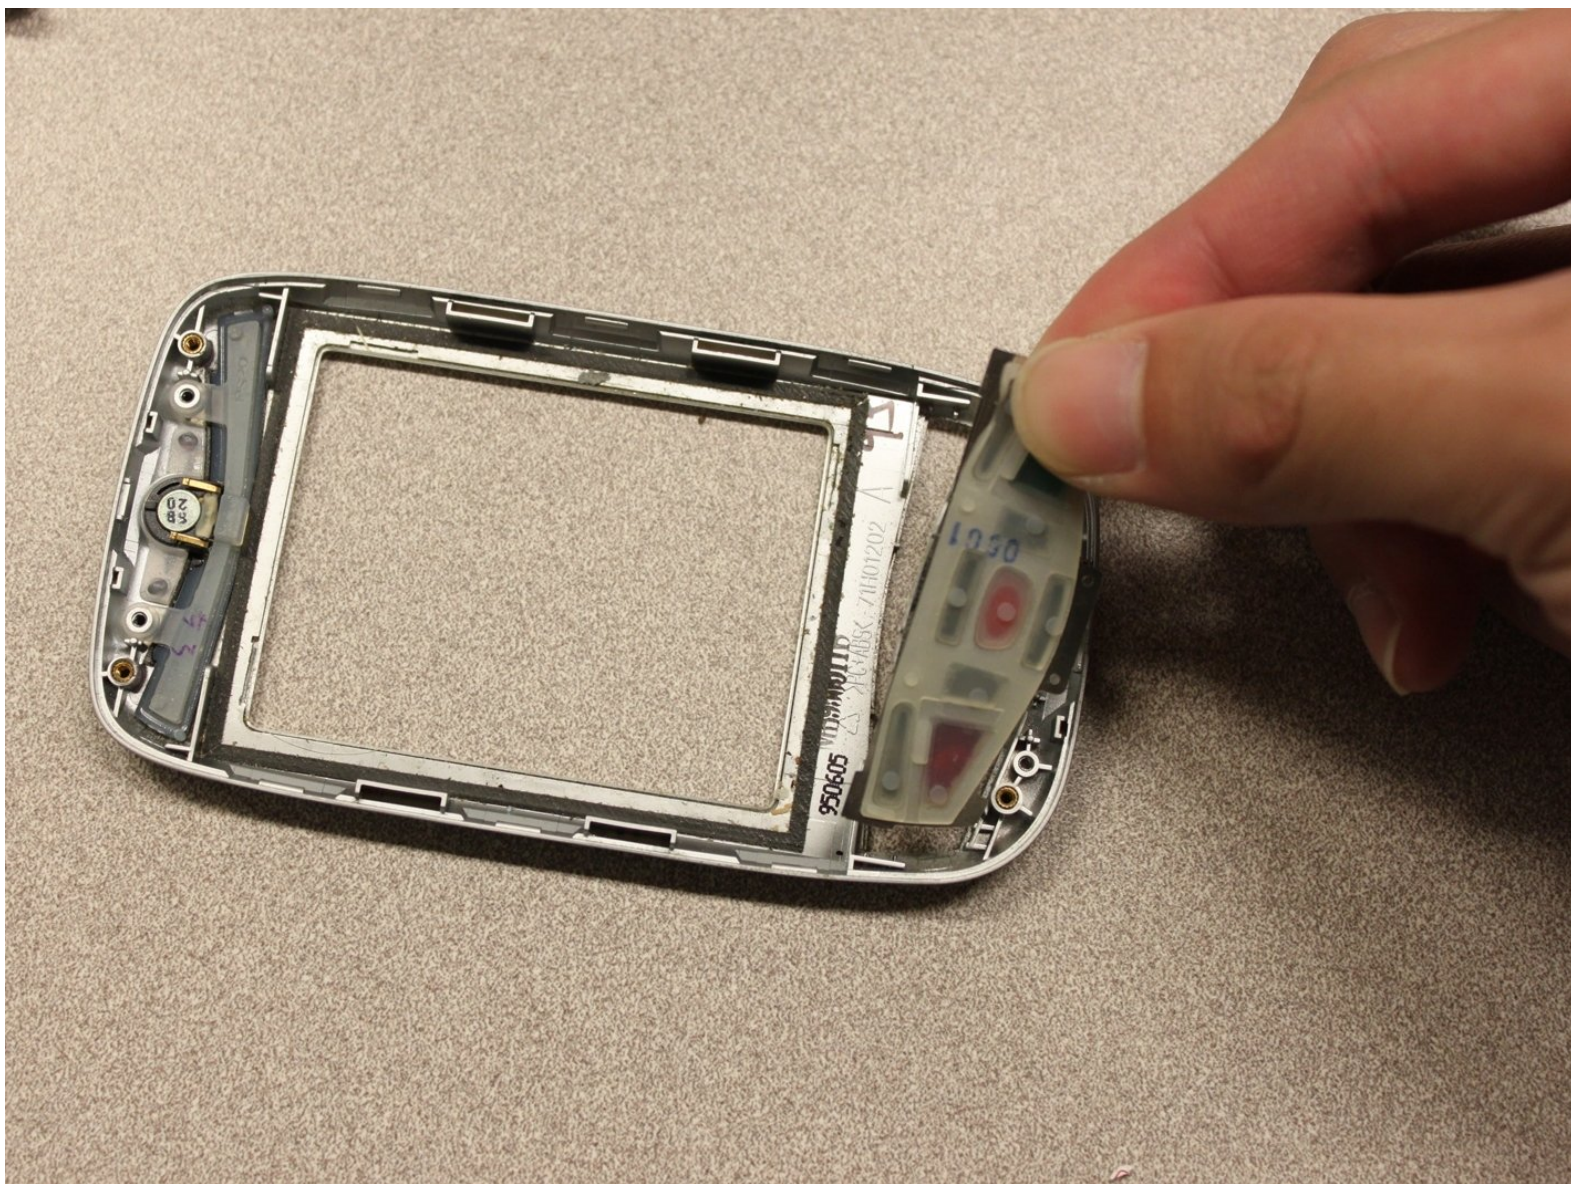

INTRODUCTION

This guide takes you through the steps to install the front panel buttons.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- To expose the battery, remove the outer case with your fingernail.
- Remove the battery by pulling the black tab.

Step 2 — Back Panel




- Insert the flat end of the [spudger](#) into the two notches on the back of the camera cover and pry them up.

Step 3



- Work the [spudger](#) around the edges of the camera cover until it comes off.

Step 4

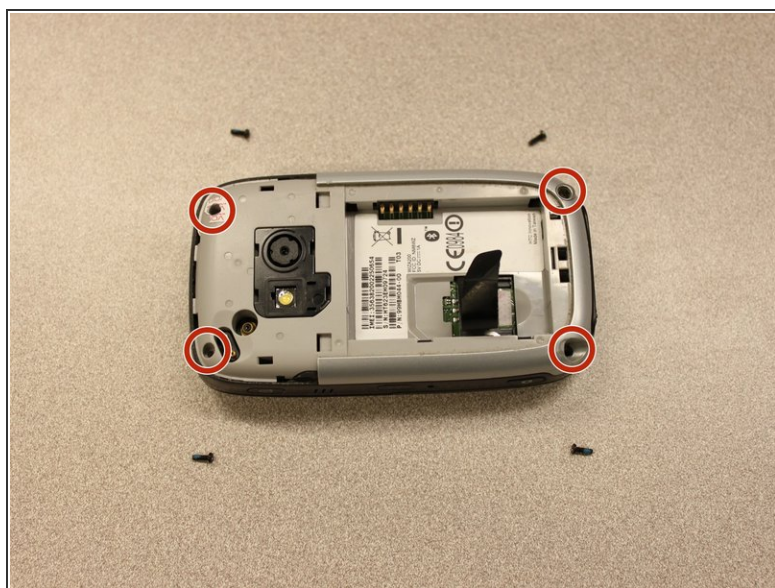

- Remove the four 6 mm screws with the [T5 Torx screwdriver](#).


i One of the screws is under the "void" sticker.

Step 5



- Insert the flat end of an iFixit opening tool between the side and inner covers to create a gap.
- Work the tool around the edges until all the clips release.

Step 6

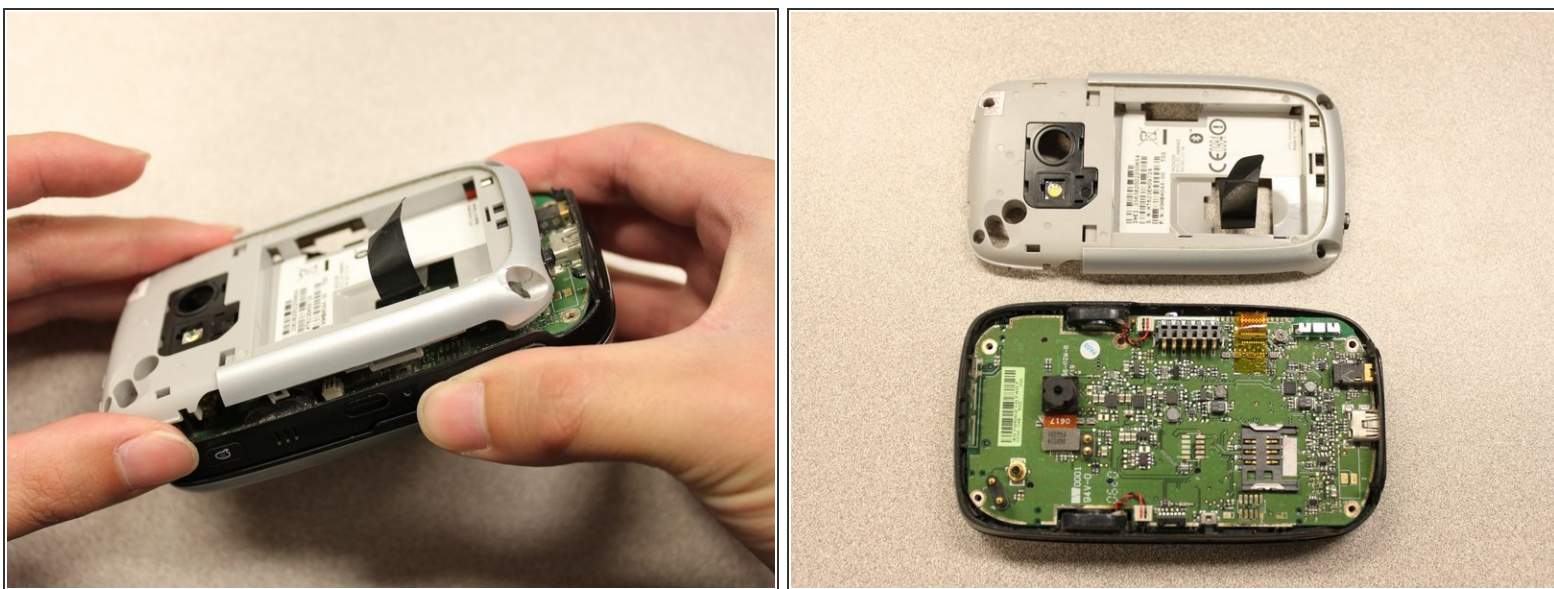



- Once all the clips are open, remove the inner panel from the phone.

Step 7 — Motherboard



- Use the [spudger](#) to pry the camera off.

Step 8

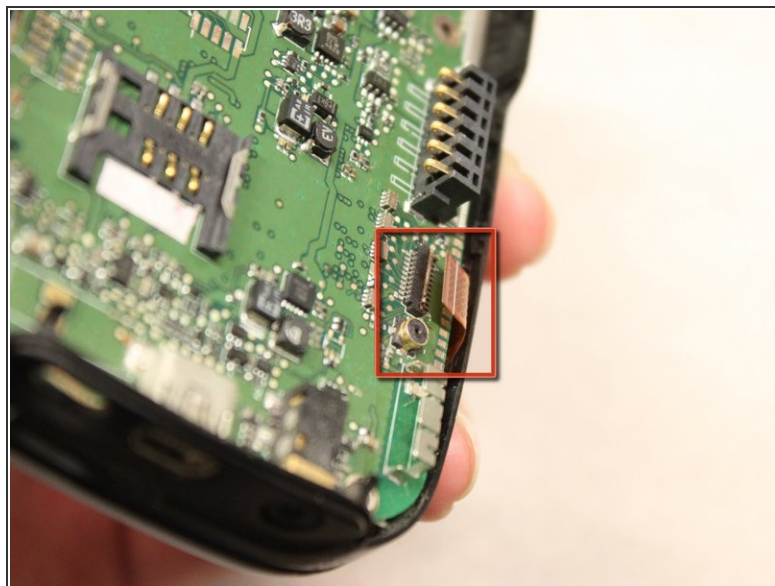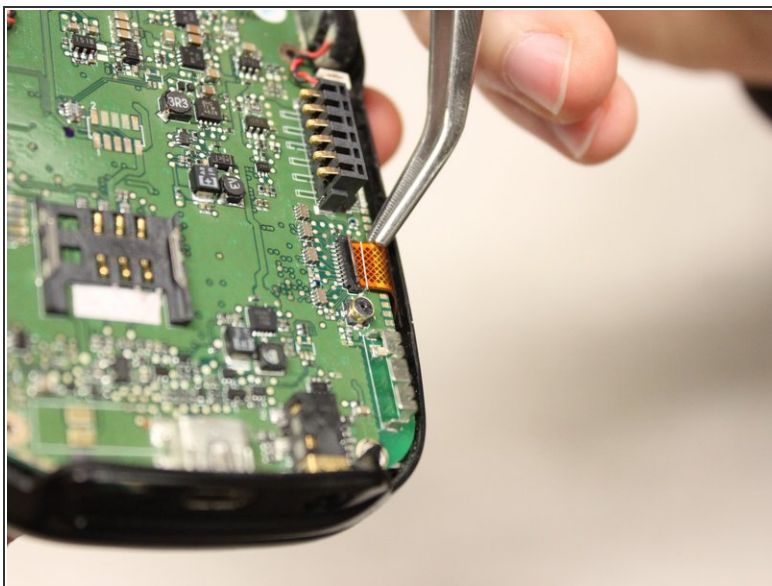


- Using [tweezers](#), flip the connector latch away from the motherboard.
- Detach the flexible connection from under the connector latch.

Step 9





- Slide the keyboard into the open position.

Step 10

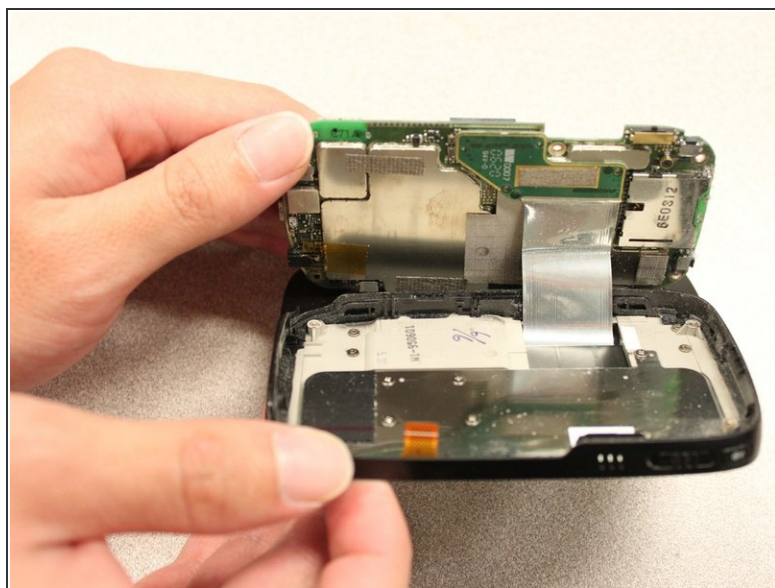

- Lift the motherboard out of the case using the [spudger](#).
- Expose the underside of the motherboard using your hands.


Step 11

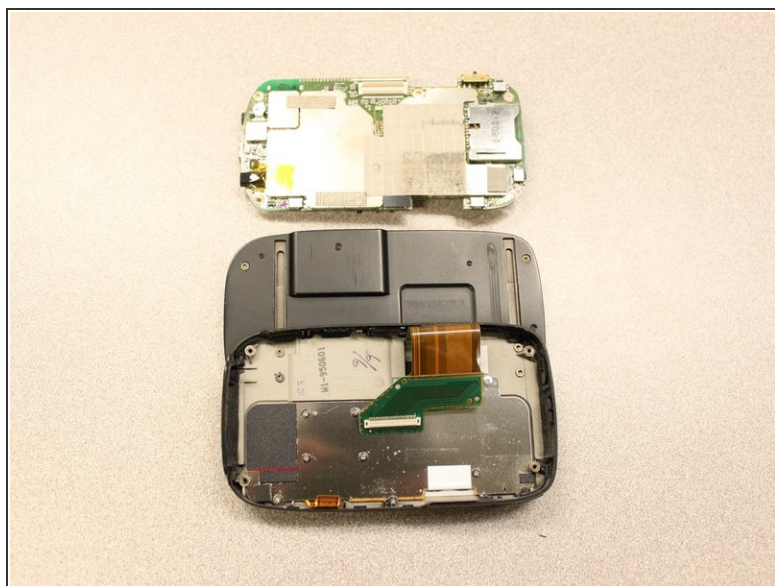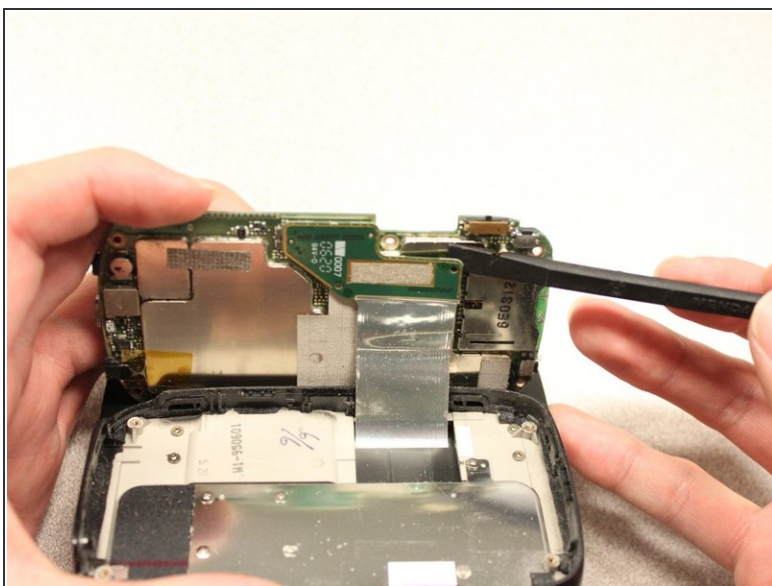

- Remove the flexible connection from the motherboard.



⚠ Caution: Removing the connection too fast may cause damage to the connection and cables.

Step 12 — Keyboard Slider

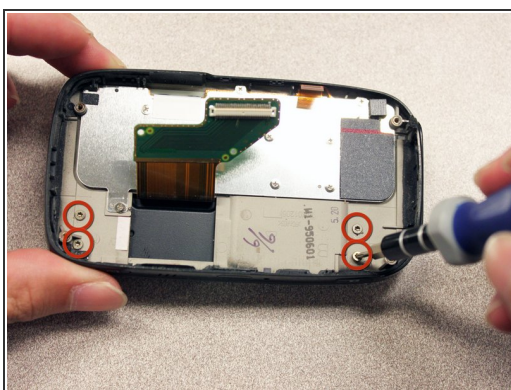



- Remove the four 5mm screws with the [T5 Torx screwdriver](#).
- Remove the keyboard slider from the main body.

Step 13 — Screen Cover

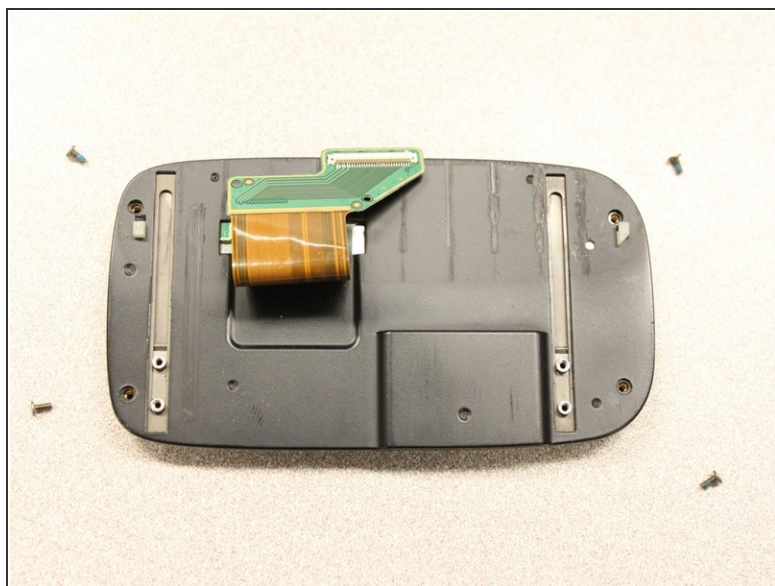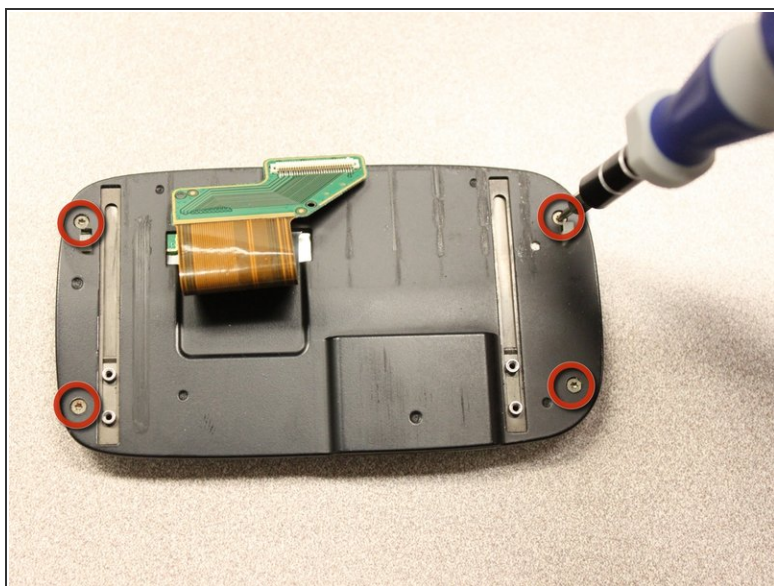

- Use the T5 Torx screwdriver to remove four 5mm screws that secure the back of the screen casing.

Step 14

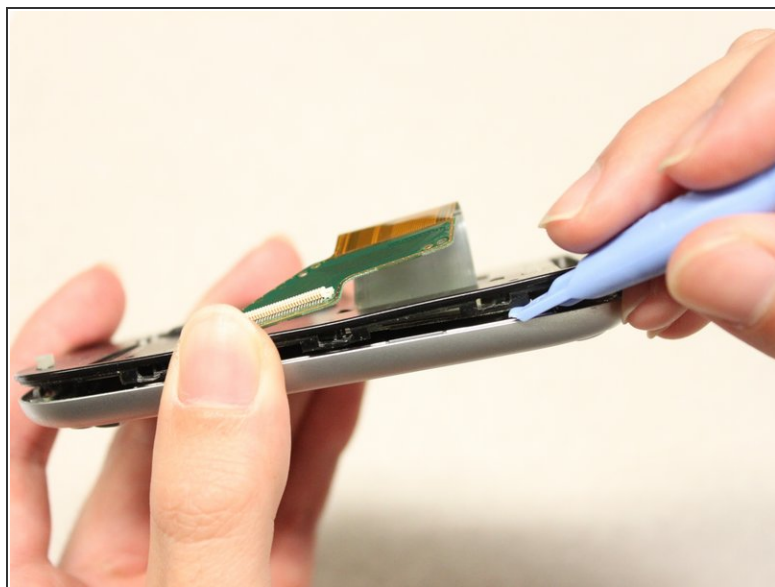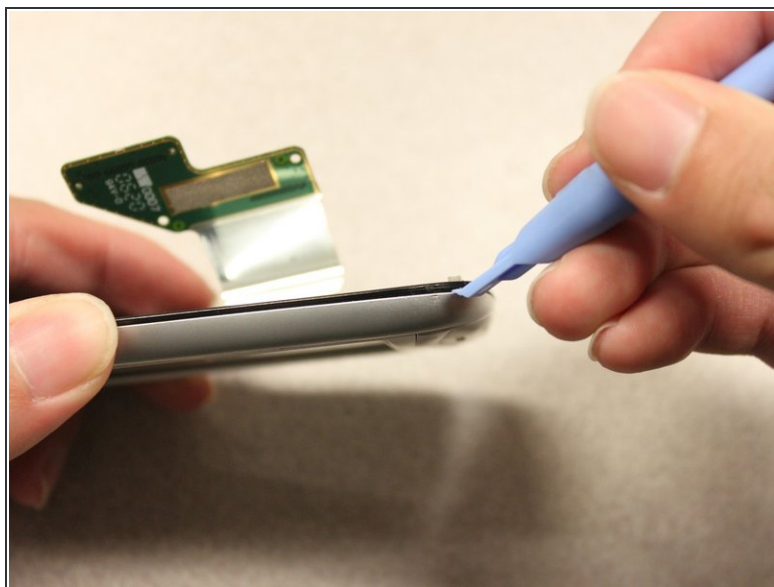


- Insert the plastic opening tool between the front panel and the rear panel and pry open to reach the screen.

Step 15





- Once the rear panel is loose, lift it off of the front panel.
- The flexible connection will pop loose.

Step 16

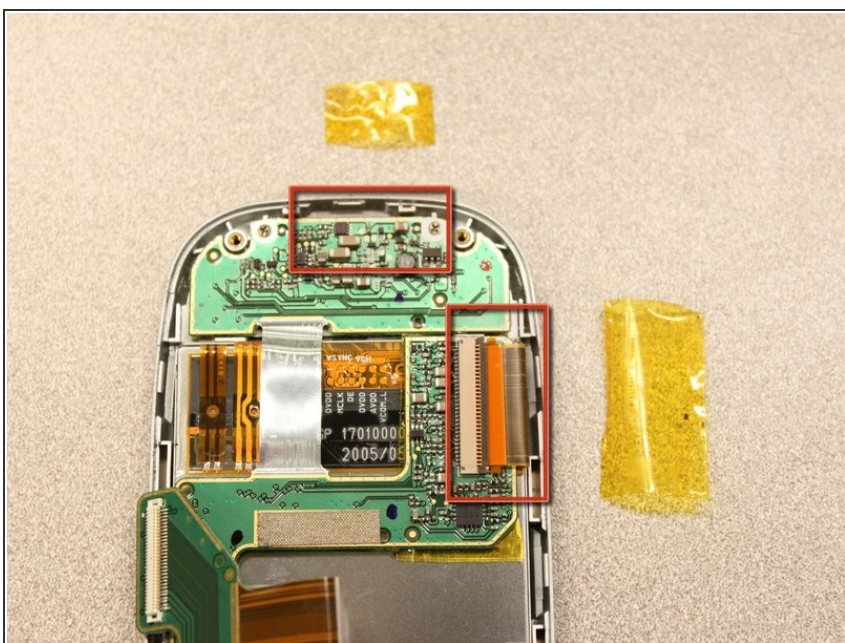


- ❗ Device rotated 90 degrees CCW.
- Remove the yellow anti-static tape.

Step 17

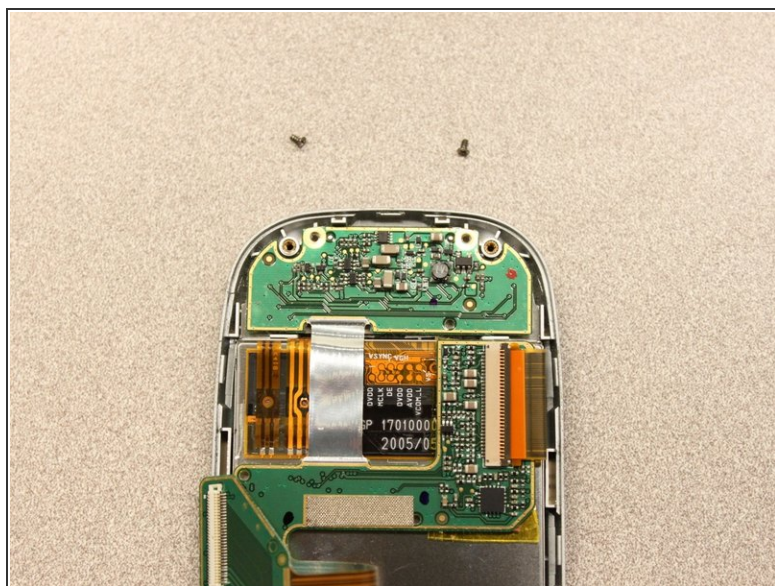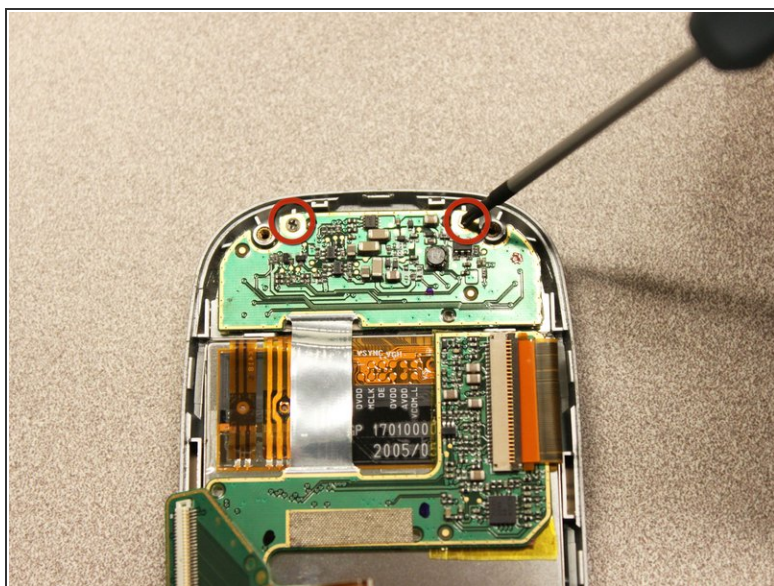


- Unscrew the two 3mm phillips #0 screws from the bottom of the device that secure the rigid flex board to the screen panel.

Step 18

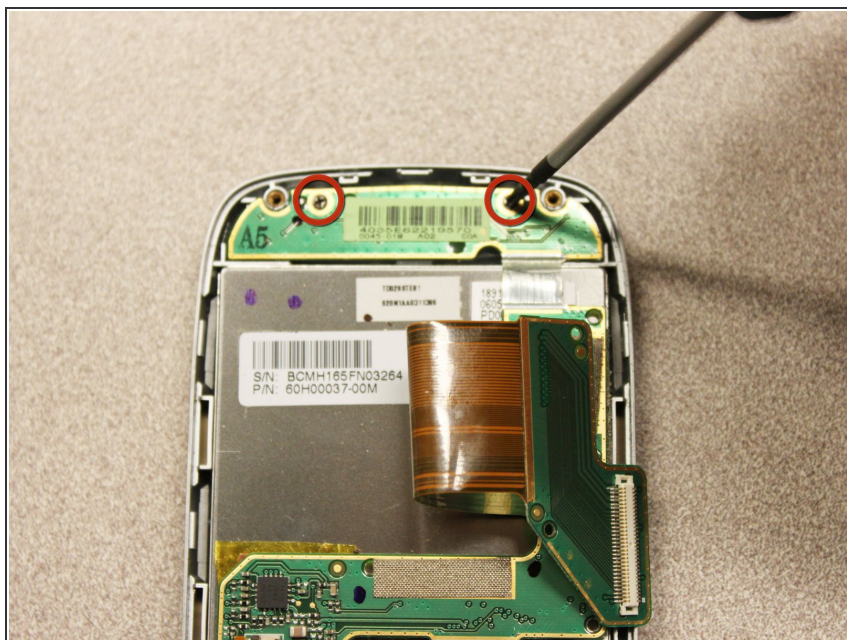


- ① Device rotated 180 degrees CW.
- Unscrew the two 3mm phillips #0 screws from the top of the device that secure the rigid flex board to the screen panel.

Step 19

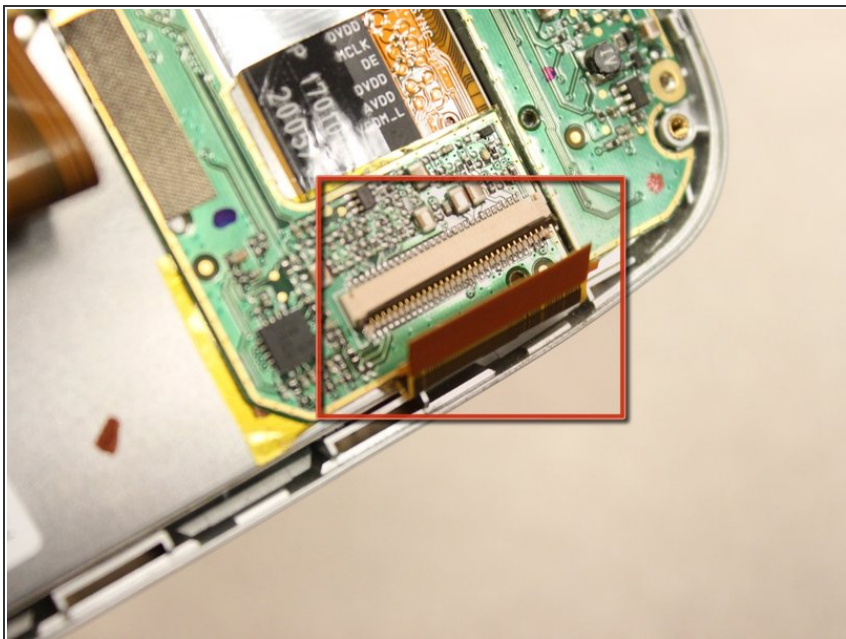


- ① Device rotated 90 degrees CCW.
- Unhinge the flexible connection and use the tweezers to disconnect.

Step 20

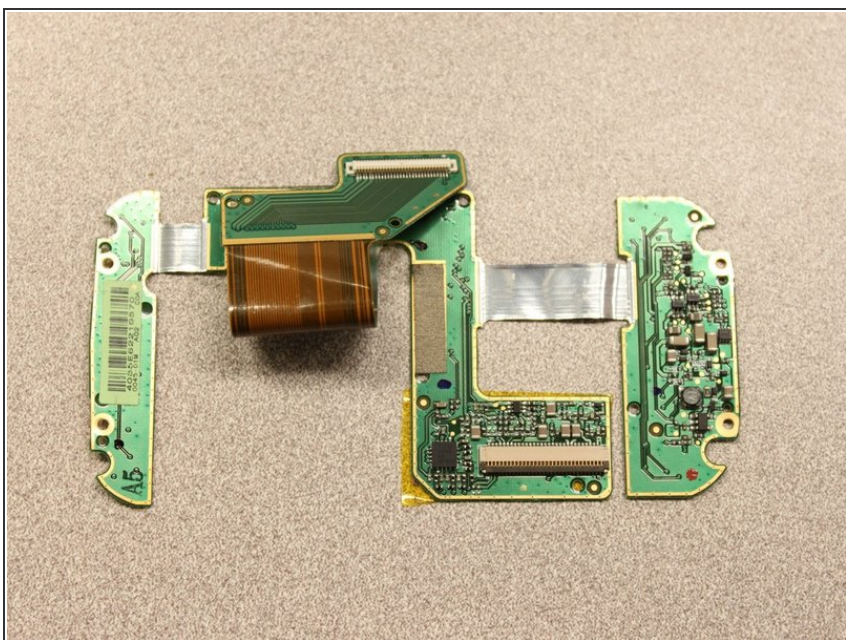

- Now that the rigid flex board is loose, remove it from the screen.

Step 21 — LCD Screen

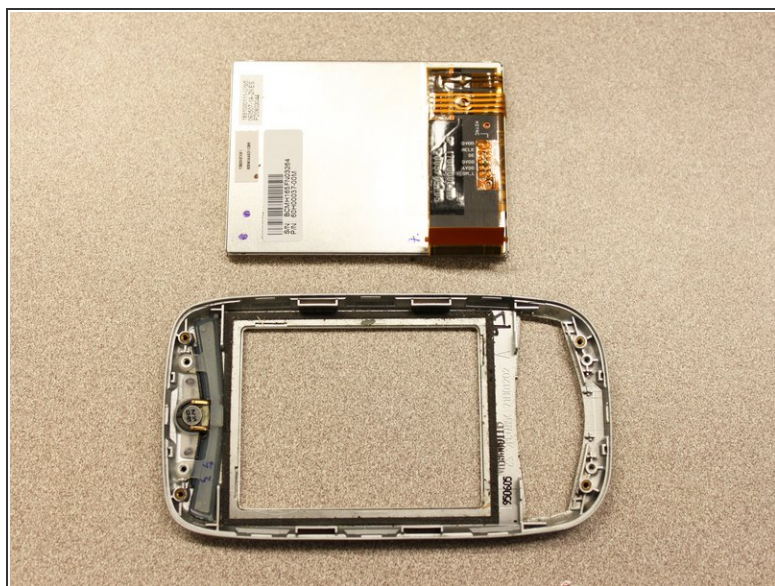

- Simply pull out the loose screen.

Step 22 — Front Buttons



- Pull out the front button panel.

To reassemble your device, follow these instructions in reverse order.