




# Macintosh Powerbook 5300cs RAM Replacement

Written By: Ronan

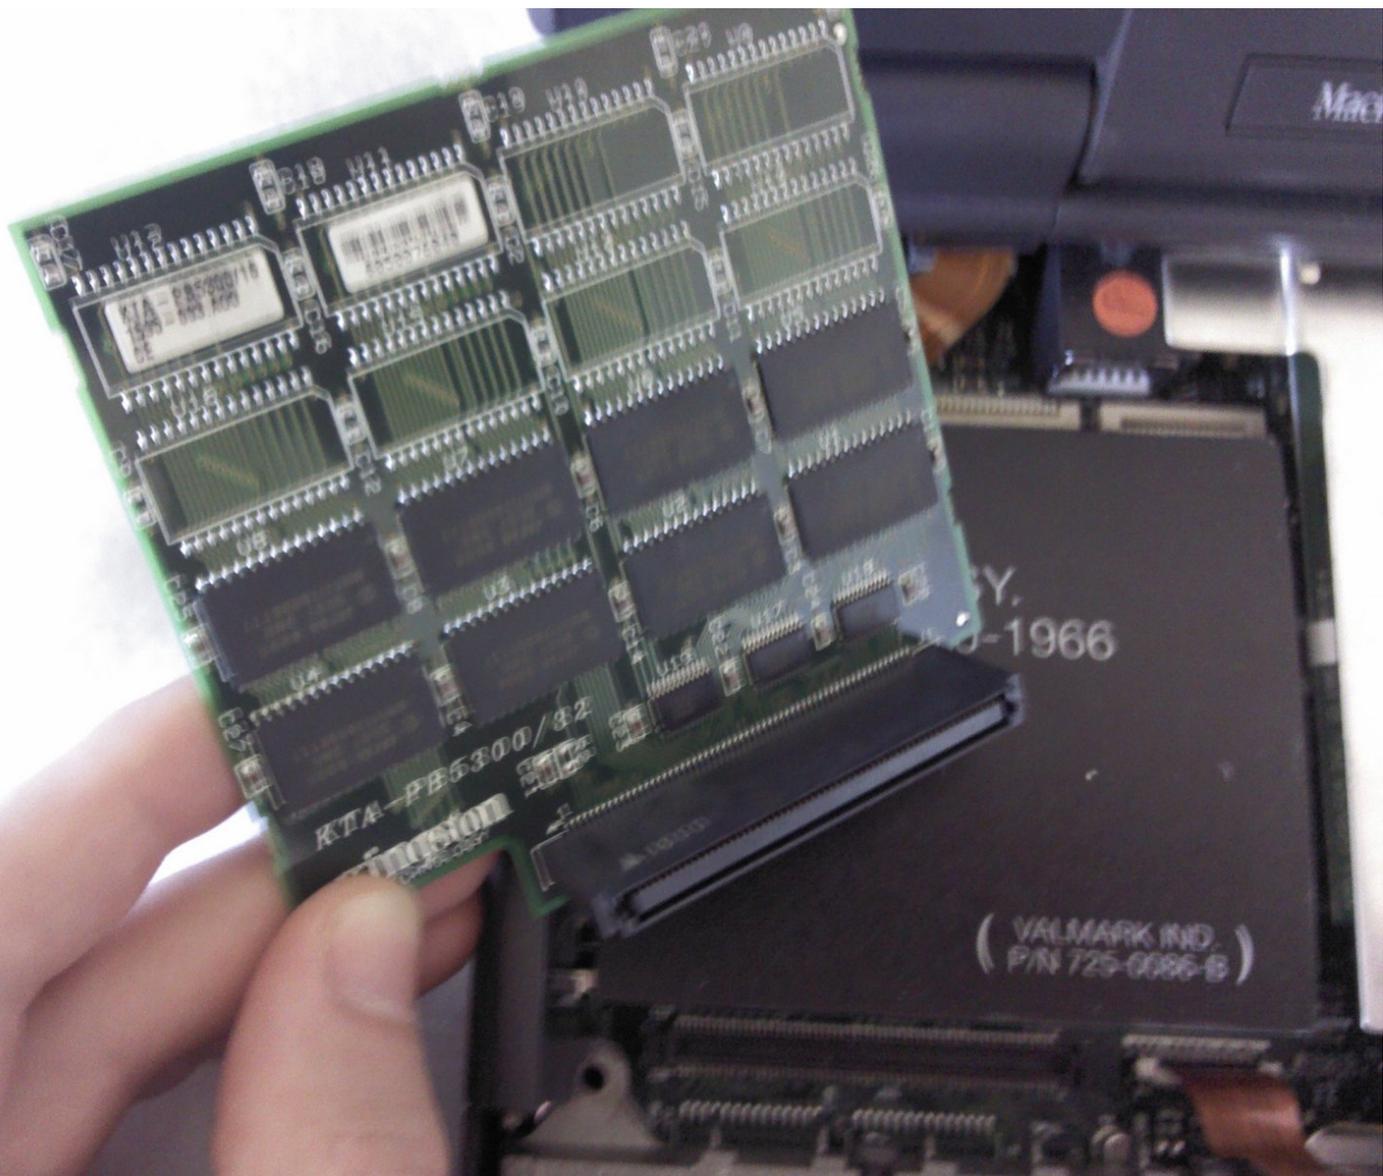

---

 **TOOLS:**

- [TR9 Torx Security Screwdriver](#) (1)
-

## Step 1 — Battery



- The battery compartment is located in the front-right side of the laptop.

## Step 2



- To insert the battery, gently slide it into the compartment until it clicks in place.
- To remove, slide the button highlighted in the red rectangle to the right to release the battery and slide it from the compartment.

## Step 3 — Keyboard




- With the laptop upside down and with the battery removed, use a Torx #9 screw driver to remove the three .84 in. screws shown.

## Step 4





- Carefully pull up on the front of the keyboard to pop it out from the case.
- Then slide the back out so the keyboard becomes nearly free.

## Step 5

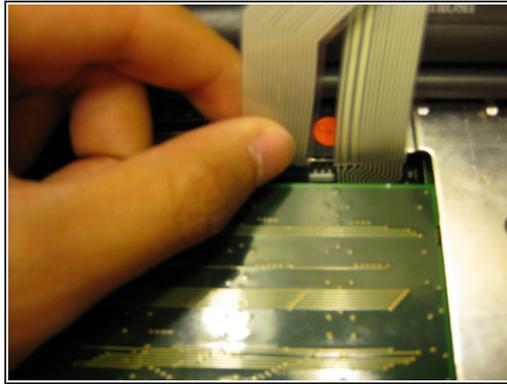

- Disconnect the ribbon that is connecting the keyboard to the rest of the computer.
- Pull the keyboard out and repair or replace as needed.

## Step 6 — RAM

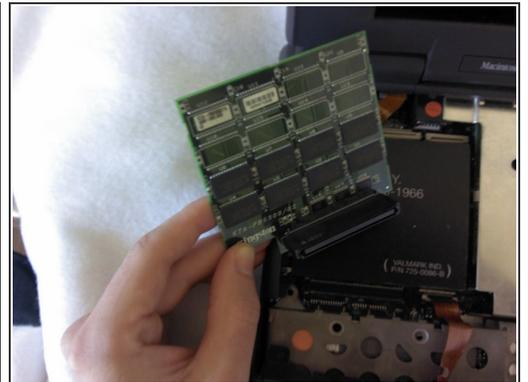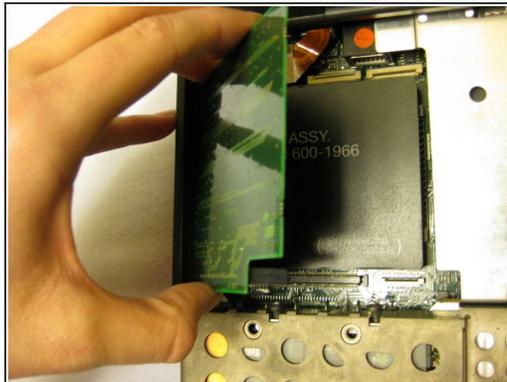

- Remove the RAM board located underneath the keyboard by carefully popping it out from its connection. Reinstall or replace as necessary.

To reassemble your device, follow these instructions in reverse order.