



# HP G71t-300 DVD Drive Replacement

Make sure you have a compatible DVD drive with...

Written By: Rohan Mathew



# INTRODUCTION

Make sure you have a compatible DVD drive with the same dimensions.

---

## TOOLS:

Metal Spudger (1)

Magnetic Project Mat (1)

Phillips #0 Screwdriver (1)


---

## Step 1 — DVD Drive





- Ground yourself by either touching an unpainted metal surface or by using the [Anti-Static wrist strap](#).
- Turn off the computer and remove the charger from the charging port.
- Turn the laptop over and slide the battery release catch to the right. The battery will pop up from its slot. Remove it using your fingers.

## Step 2

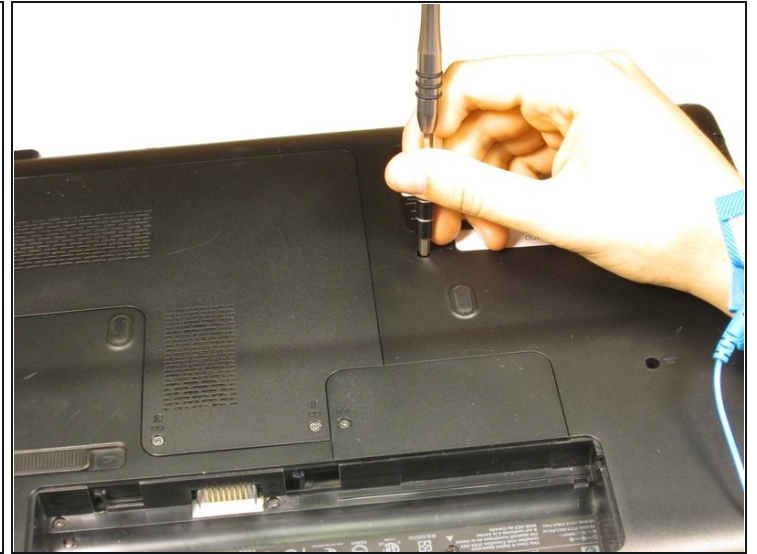

- Remove the 6mm screw above the laptop stickers using a Phillips #0 screwdriver.

## Step 3

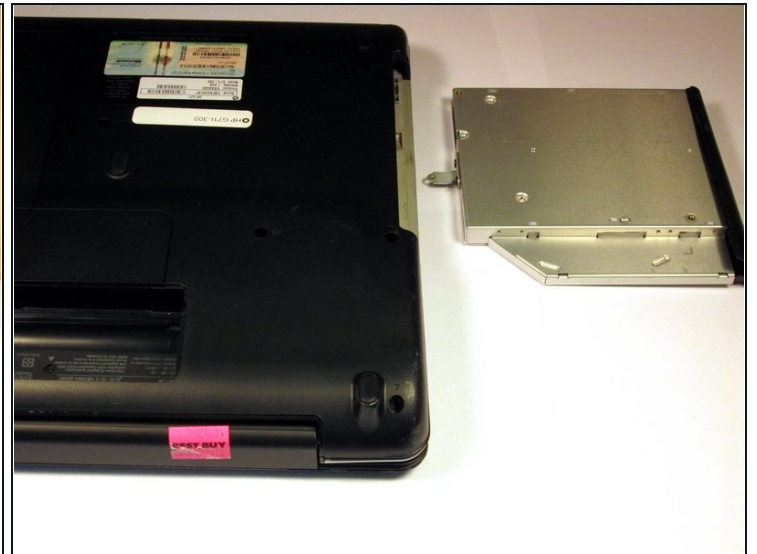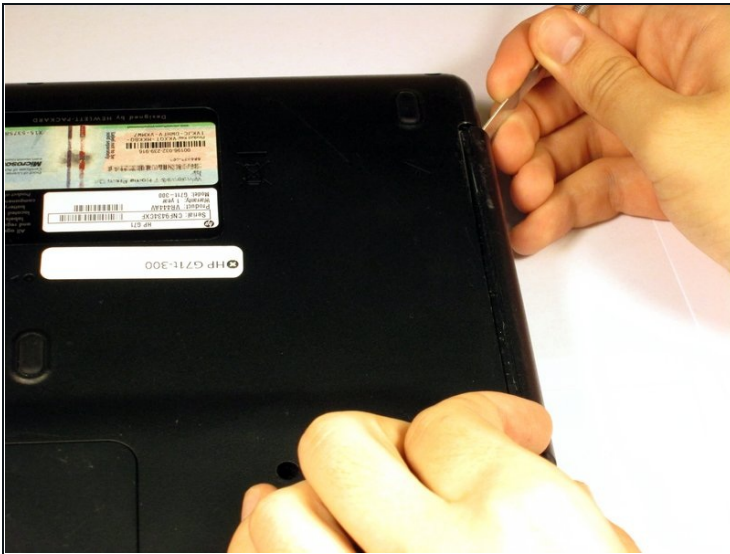

- Gently pull the DVD drive out of the slot on the right side of the laptop using your fingers and a metal spudger.

---

To reassemble your device, follow these instructions in reverse order.