



# Oster 3905 Temperature Knob Replacement

Replace temperature knobs to prevent uneven toasting and wobbly knobs.

Written By: Sydney Alcaraz



---

## INTRODUCTION

Overtime temperature knobs may become damaged or dislodged from frequent use. This guide shows how to replace the temperature knobs on the Oster 3905.



### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Temperature Knob



- Pry the angled tip of a plastic opening tool behind the knob.

## Step 2



- Place hand firmly on the toaster and pull away with force to remove the knob

 Instructions applicable to both knobs

To reassemble your device, follow these instructions in reverse order.