

## **Lorex LW2742 Back Panel Replacement**

To remove the Back Panel of your Lorex LW 2742 security system. Prerequisite guide only.

Written By: Alex Kusmierz





- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Back Panel







- Remove the battery cover on the back of the LCD monitor by unscrewing one 5mm Phillips #1 screw.
- Slide the battery out of the housing. Lightly tap the opposite end of the monitor if the battery does not come right out.

## Step 2



 Remove the four 6mm Phillips #1 screws on the back of the LCD monitor.

## Step 3





- Using a plastic opening tool, gently separate the back panel from the front panel, working the tool around the panel to disconnect it.
- Carefully remove the back panel
- The speaker wire is connected to the motherboard so DO NOT rip back panel away from the monitor.

To reassemble your device, follow these instructions in reverse order.