



Toshiba Chromebook 2 Back Cover Replacement

Prerequisite only guide

Written By: Haley Hattendorf





TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Back Cover



- Remove all external devices from the Toshiba Chromebook 2.

Step 2



- Close the Toshiba Chromebook 2 and turn it over so that the bottom of the laptop is facing upwards toward you with the lettering on the bottom facing right side up.

Step 3



- Remove the 8 visible Phillips 8.25 mm screws using the Phillips #0 screwdriver.

Step 4



- Remove 2 hidden Phillips 8.25 mm screws located underneath the rubber grips at the back (opposite the hinges) with the Phillips #0 screwdriver.
- ⓘ The rubber grips are glued in place, so you'll need to peel them up with a spudger or other pry tool.

Step 5



- Remove the back panel by pulling up on 2 adjacent corners.

To reassemble your device, follow these instructions in reverse order.