




Astro Mixamp Control Button Replacement

Fix control buttons that are sticking or not working properly.

Written By: Hope Burns

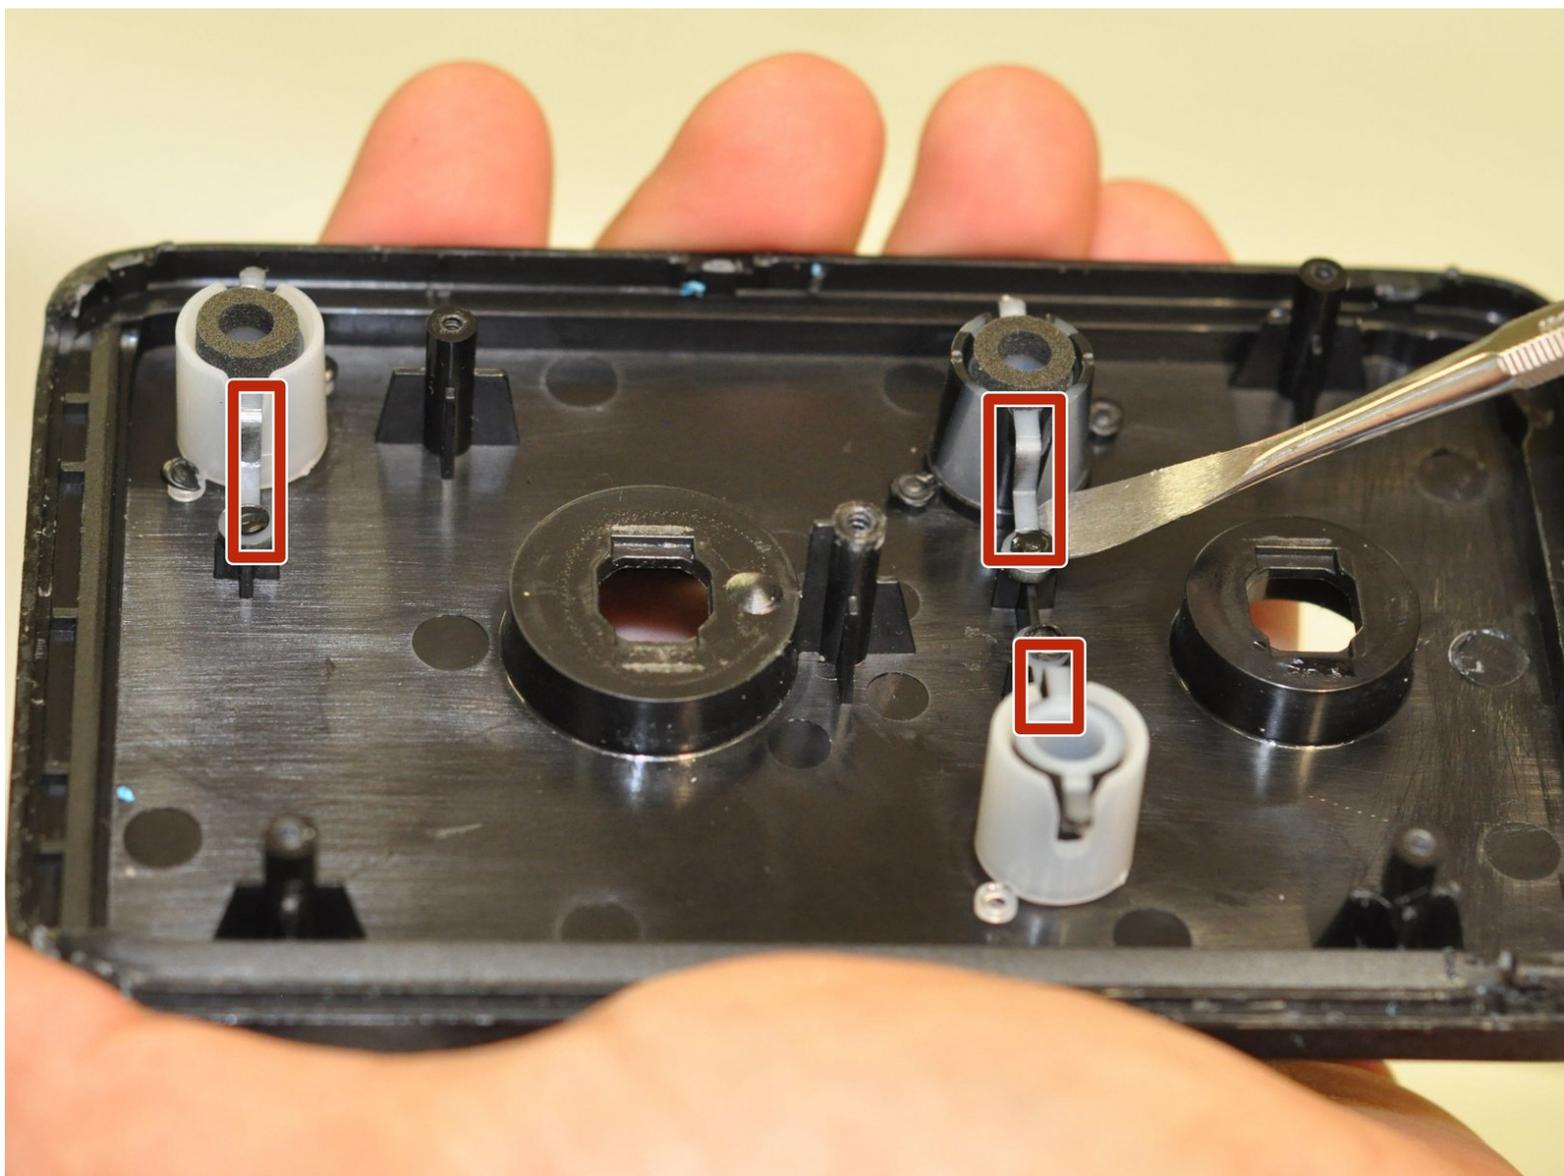

INTRODUCTION

Use this guide to remove control buttons for cleaning or replacement.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Soldering Iron](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Panel Dial




- Grip the dial tightly and pull straight off the device.
- Repeat for the second dial

Step 2



- Using tweezers, remove the spacer nuts and washers from each dial post.

Step 3 — Outer Casing

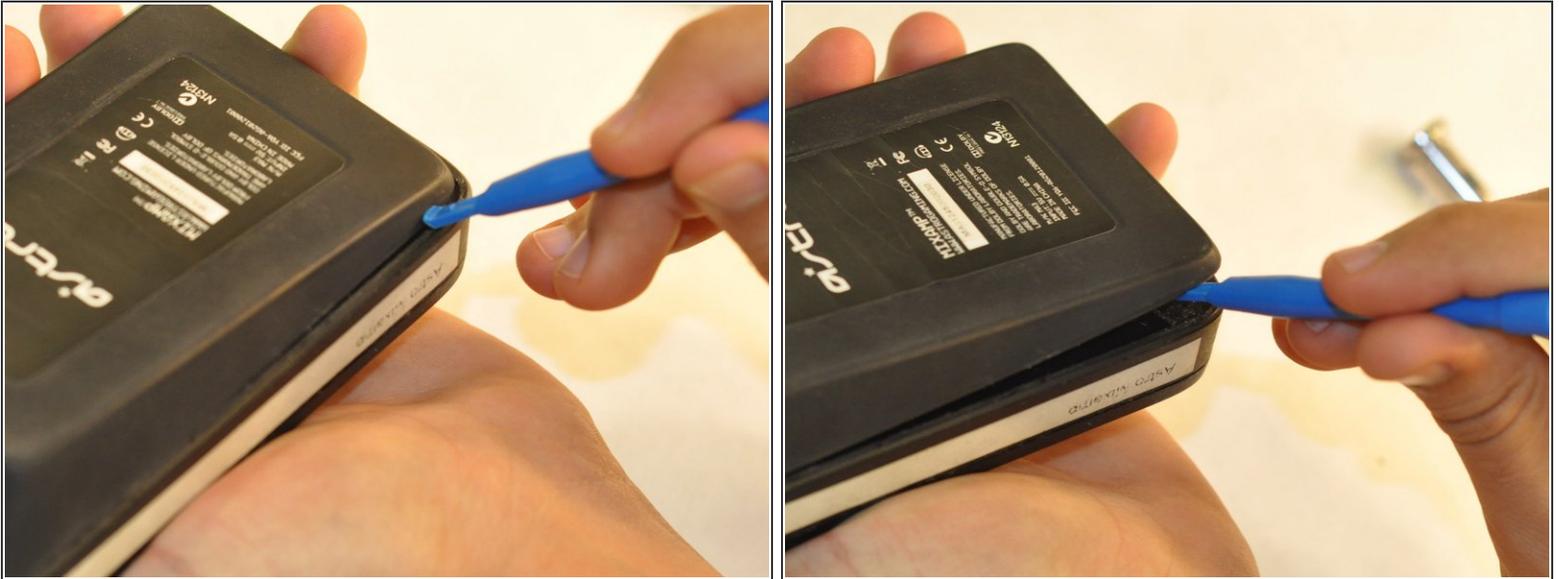

- ⓘ Before opening your device, ensure the device is not on or connected to the charging cable.
- Insert a plastic opening tool into the seam between the rubber foot and plastic casing.
- Pull the rubber foot free of the plastic casing.

Step 4




- Use a screwdriver to remove the screw from the rear casing.

Step 5



- Gently lift the rear casing from the device.


Step 6 — Motherboard

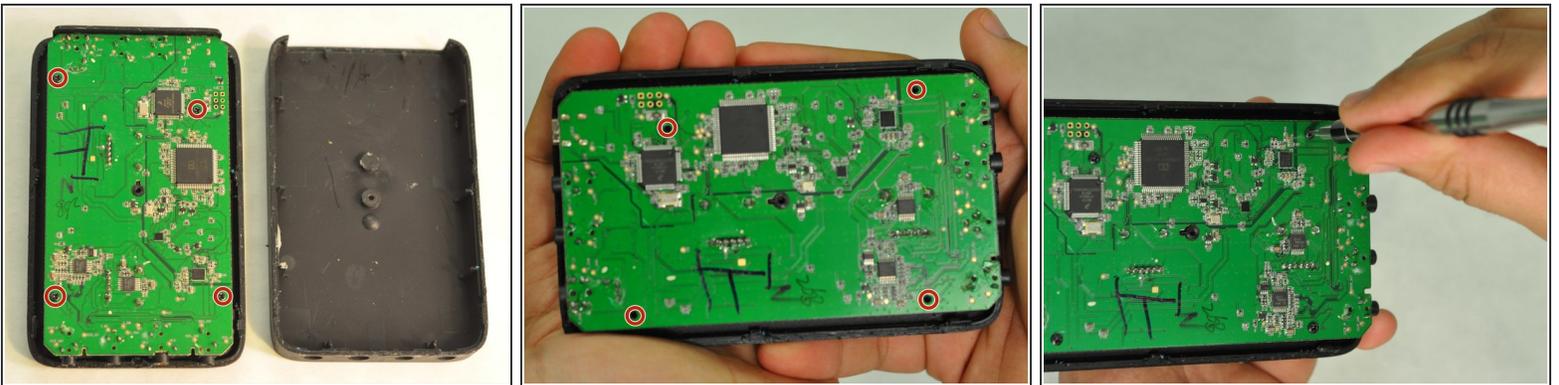

- Remove the four screws that hold the motherboard in place.


⚠ Only touch the edges of the motherboard. Touching the surface can damage the motherboard.

Step 7

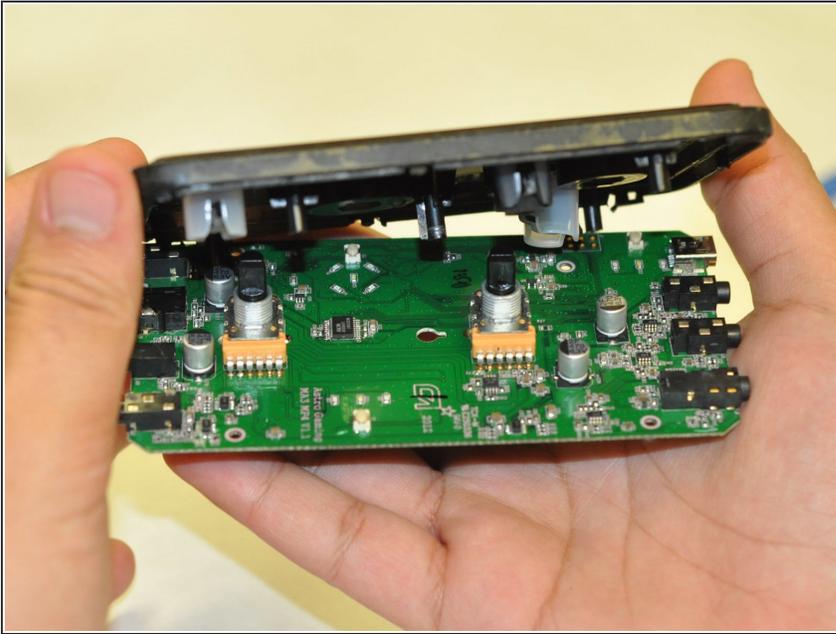

- Gently pull the motherboard from the front cover.

Step 8 — Control Button

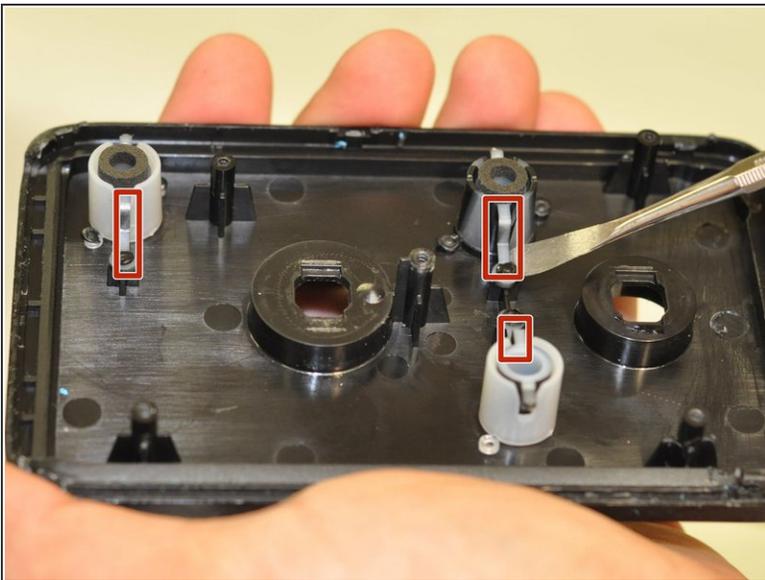

- Gently insert a metal spudger under a control button housing.
- ⚠ Do not pry the button housing from the front panel, this can cause damage to the button.
- Rotate the control button around the marked pin.

To reassemble your device, follow these instructions in reverse order.