




Garmin Nuvi 2597LMT Speaker Replacement

Use this guide to replace the speaker within your Garmin Nuvi 2597LMT.

Written By: Patrick McNett

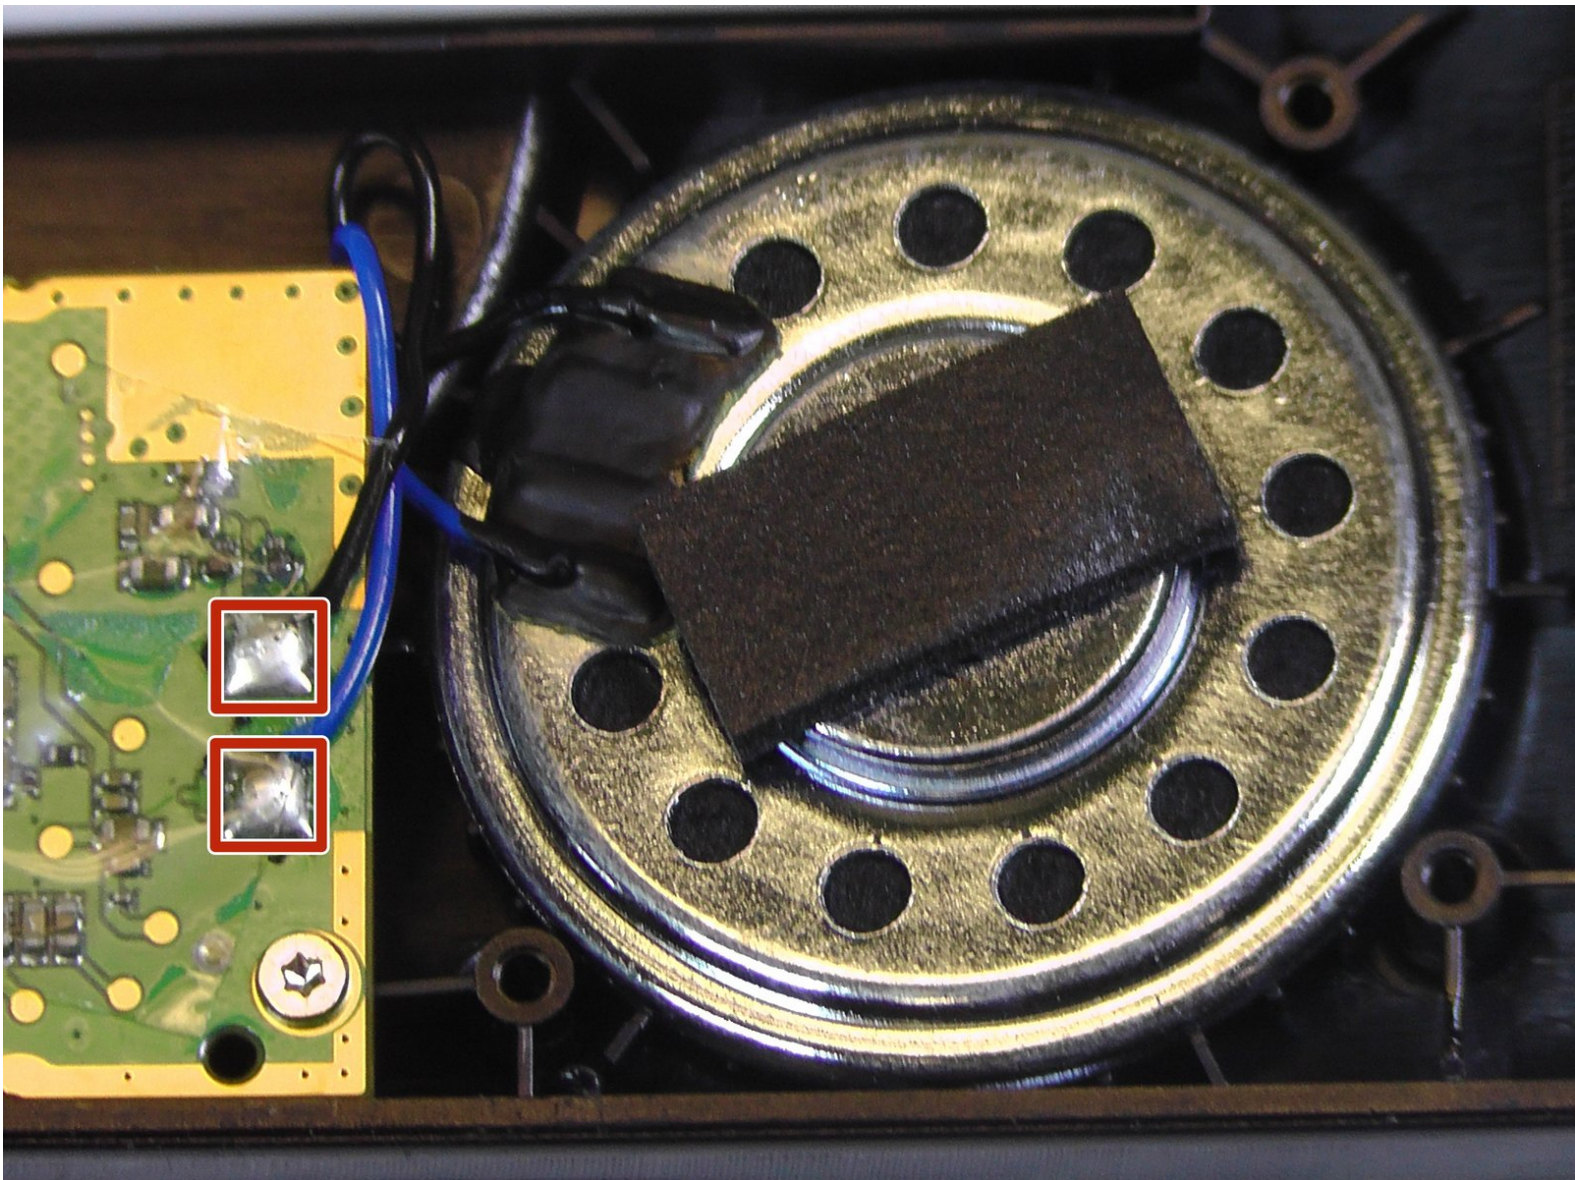

INTRODUCTION

This guide will walk you through the process of replacing a faulty or broken speaker in your Garmin Nuvi 2597LMT. You may need this guide to replace the speaker if the speaker is muffled, fuzzy, or scratchy sounding, or if the speaker just doesn't work at all. Make sure you are very careful when working with your device; you don't want to break any of the fragile components inside or rip the ribbon cable connecting the two halves.



TOOLS:


- [Portable Soldering Iron](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speaker




- Turn your device over so the back is revealed and you can see the screws in the four corners.
- Remove the four 3mm width by 6mm length T5 Torx screws using your screwdriver.

Step 2

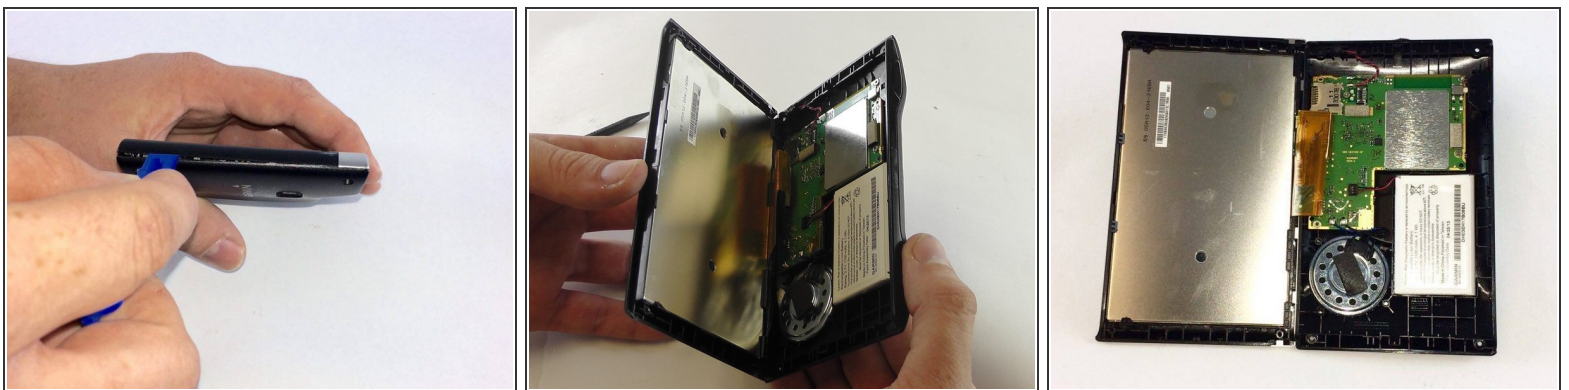



- Use the plastic opening tool to pry open the device at the seam where the two halves meet, prying all along all sides if need be.
- ⚠ Do it slowly so you don't accidentally rip the ribbon cable that connects the digitizer to the motherboard, as well as don't completely separate the halves as this can tear the ribbon cable.
- Open your device from the top, so that you don't disconnect the ribbon cable.

Step 3

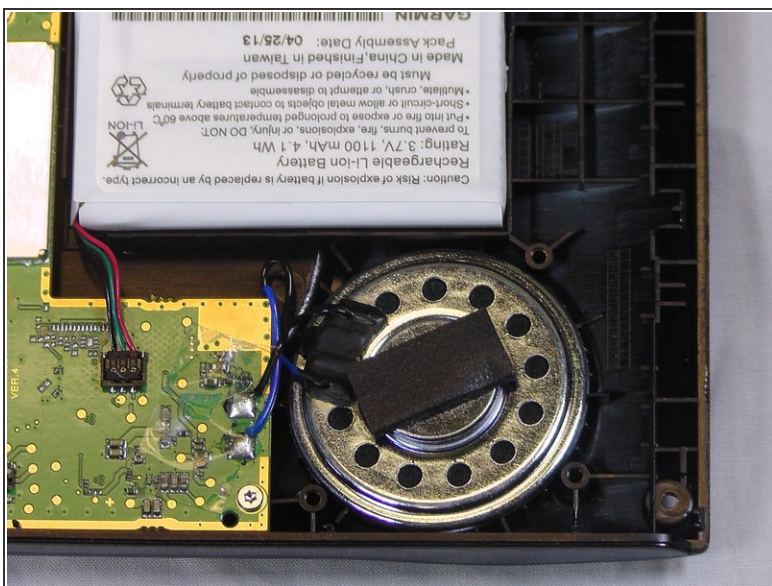


- Use your thin spudger to gently lift the speaker off of the sticky pad and away from the casing.

Step 4

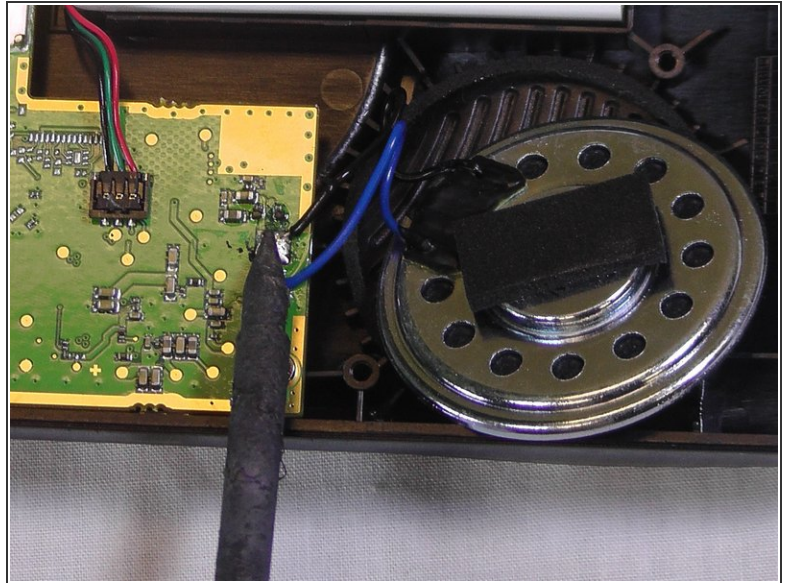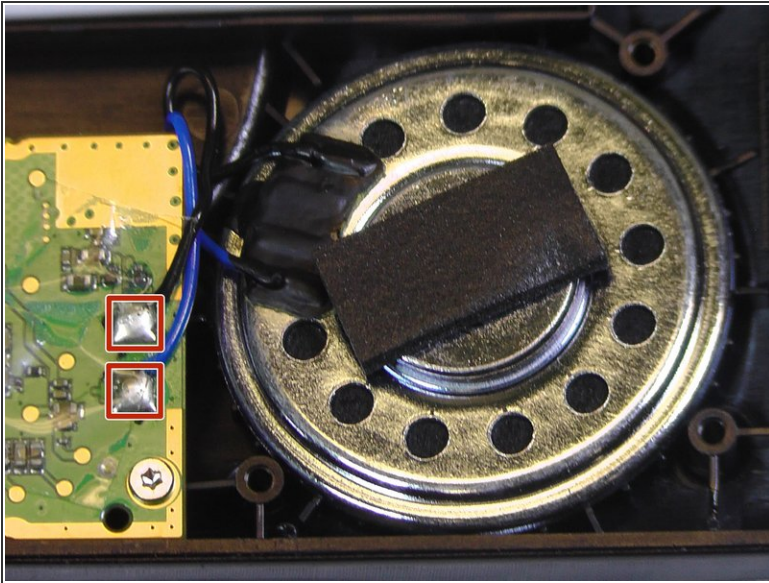

- Use your soldering iron to disconnect the wires from the motherboard. Disconnect the ground wire (the black one) and the positive wire (the blue one).

 The soldering iron is very hot and do not touch the wires to anything as it may stick to it when it cools.

- ⓘ After you have finished this step and the wire ends have cooled, you can safely set the removed speaker aside.

To reassemble your device, follow these instructions in reverse order.