



# Yamaha NS-AW190BL Mount Replacement

Use this guide to replace the mount for your Yamaha NS-AW190BL.

Written By: Nick Ruiz



## INTRODUCTION

This guide will walk you through the process of replacing the mount for Yamaha NS-AW190BL.

## Step 1 — Mount Replacement



- Turn your Yamaha NS-AW190BL to your left or right hand side.
- Twist mount knob counterclockwise until removed.
- Continue to remove the knob on the opposite side.

## Step 2



- Dismount the mount from the Yamaha NS-AW190BL.

To reassemble your device, follow these instructions in reverse order.