

# Coby DVD209 Circuit Board for Buttons Replacement

Written By: Yufay Chow



## 🔧 TOOLS:

Phillips #1 Screwdriver (1)  
iFixit Opening Tool (1)

## ⚙️ PARTS:

Circuit Board for Buttons (1)

### Step 1 — The bottom portion of the DVD player



- Press the eject button to view the laser inside.
- Using the blue plastic tool and the [tweezers](#), remove the ribbon cable.

### Step 2




- Remove the six 1cm screws on the bottom of the device with the Phillips #1 screwdriver.

**⚠️ Do not lift the top of the DVD player too quickly because there are wires attached on the inside.**

- Pry the top of the device open from the right side where the buttons are located.


### Step 3

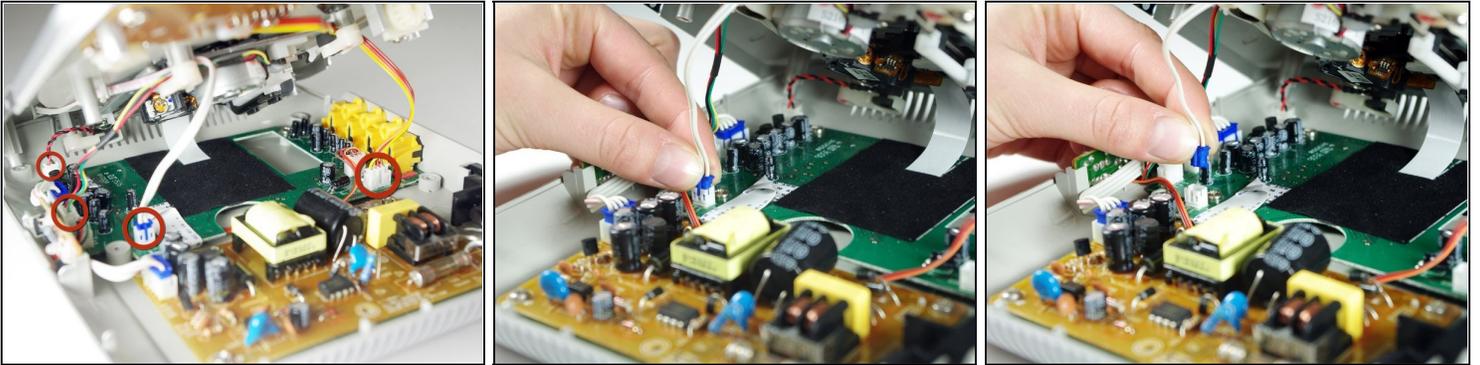

⚠ When pulling the ribbon cables out, make sure not to pull by the wires, as this can cause damage to them.

- Pinch the plastic adapter with two fingers to remove the wires circled in red from the circuit board.

### Step 4 — Circuit Board for Buttons

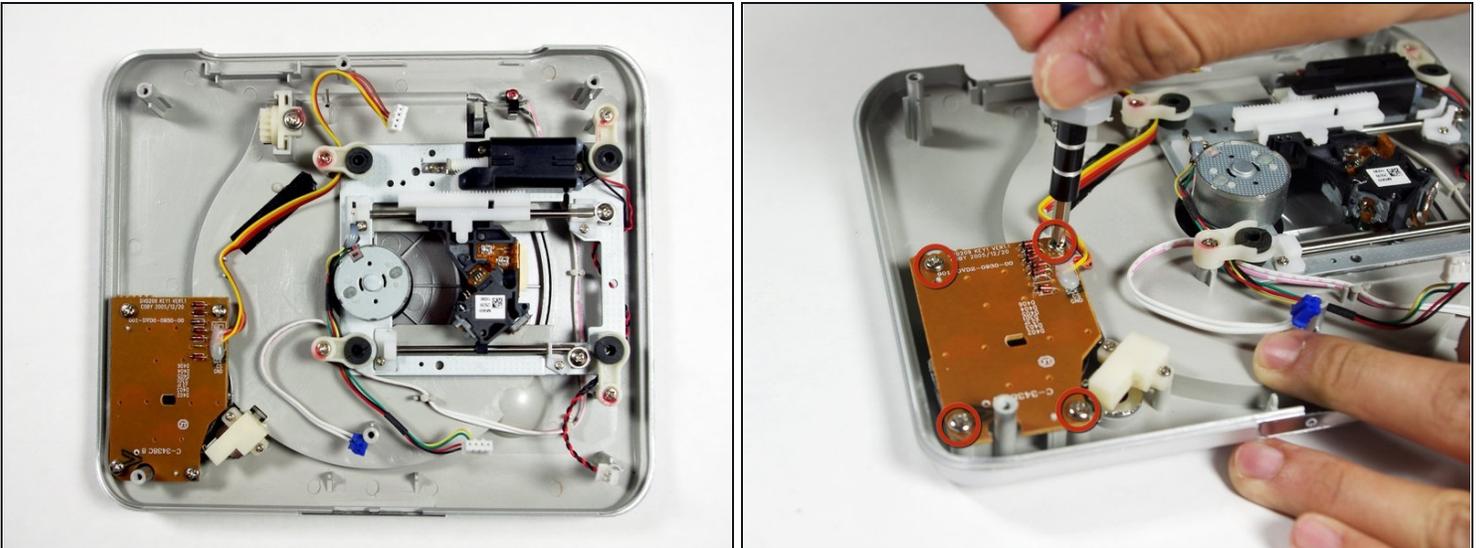

- Take the top portion of the DVD player and orient the device as shown in the first picture.
- Remove the four 0.2" screws circled in red.

## Step 5



- Loosen the screw circled in red.
  - ⓘ The screw will not come out of the plastic knob.
  - Turn the plastic knob 90 degrees to the right so that the cable comes out freely.
- 

To reassemble your device, follow these instructions in reverse order.