



# Deroute Kindle Fire Speaker Cable

PREREQ

Written By: Phillip Takahashi






## TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Speaker Cable

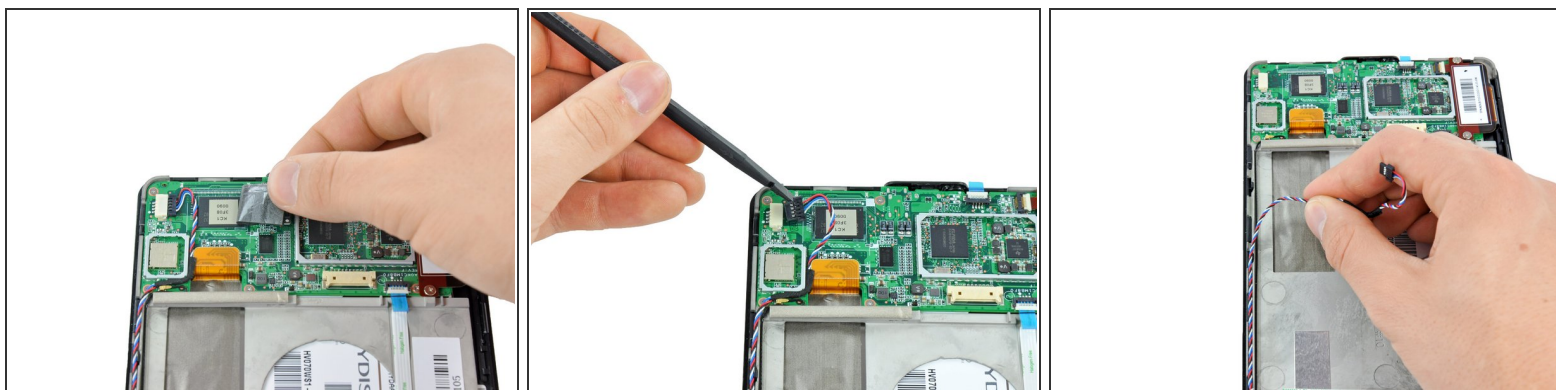

- Peel the tape on the upper-left IC that is securing the speaker cable.
- Use the flat end of a spudger to push the speaker connector out of its socket.
- Deroute the speaker cable so that it will not interfere with the motherboard.

To reassemble your device, follow these instructions in reverse order.