



Sony Cyber-shot DSC-P100 Back Casing Replacement

Written By: Katie McCraw



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Casing



- Remove the four screws from the casing.

Step 2

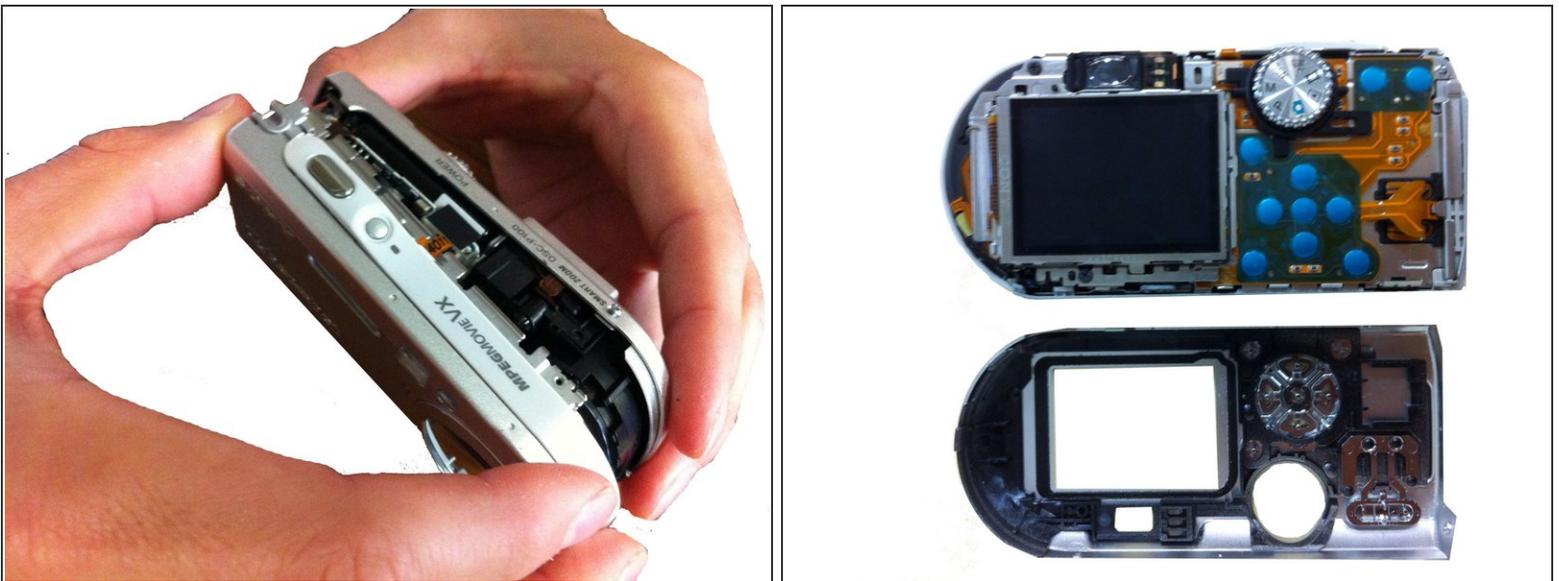

- Carefully pull the back casing away from the camera.

To reassemble your device, follow these instructions in reverse order.