




Huawei P9 Lite Front Camera Replacement

Replace the front camera in your Huawei P9 Lite

Written By: Tobias Isakeit

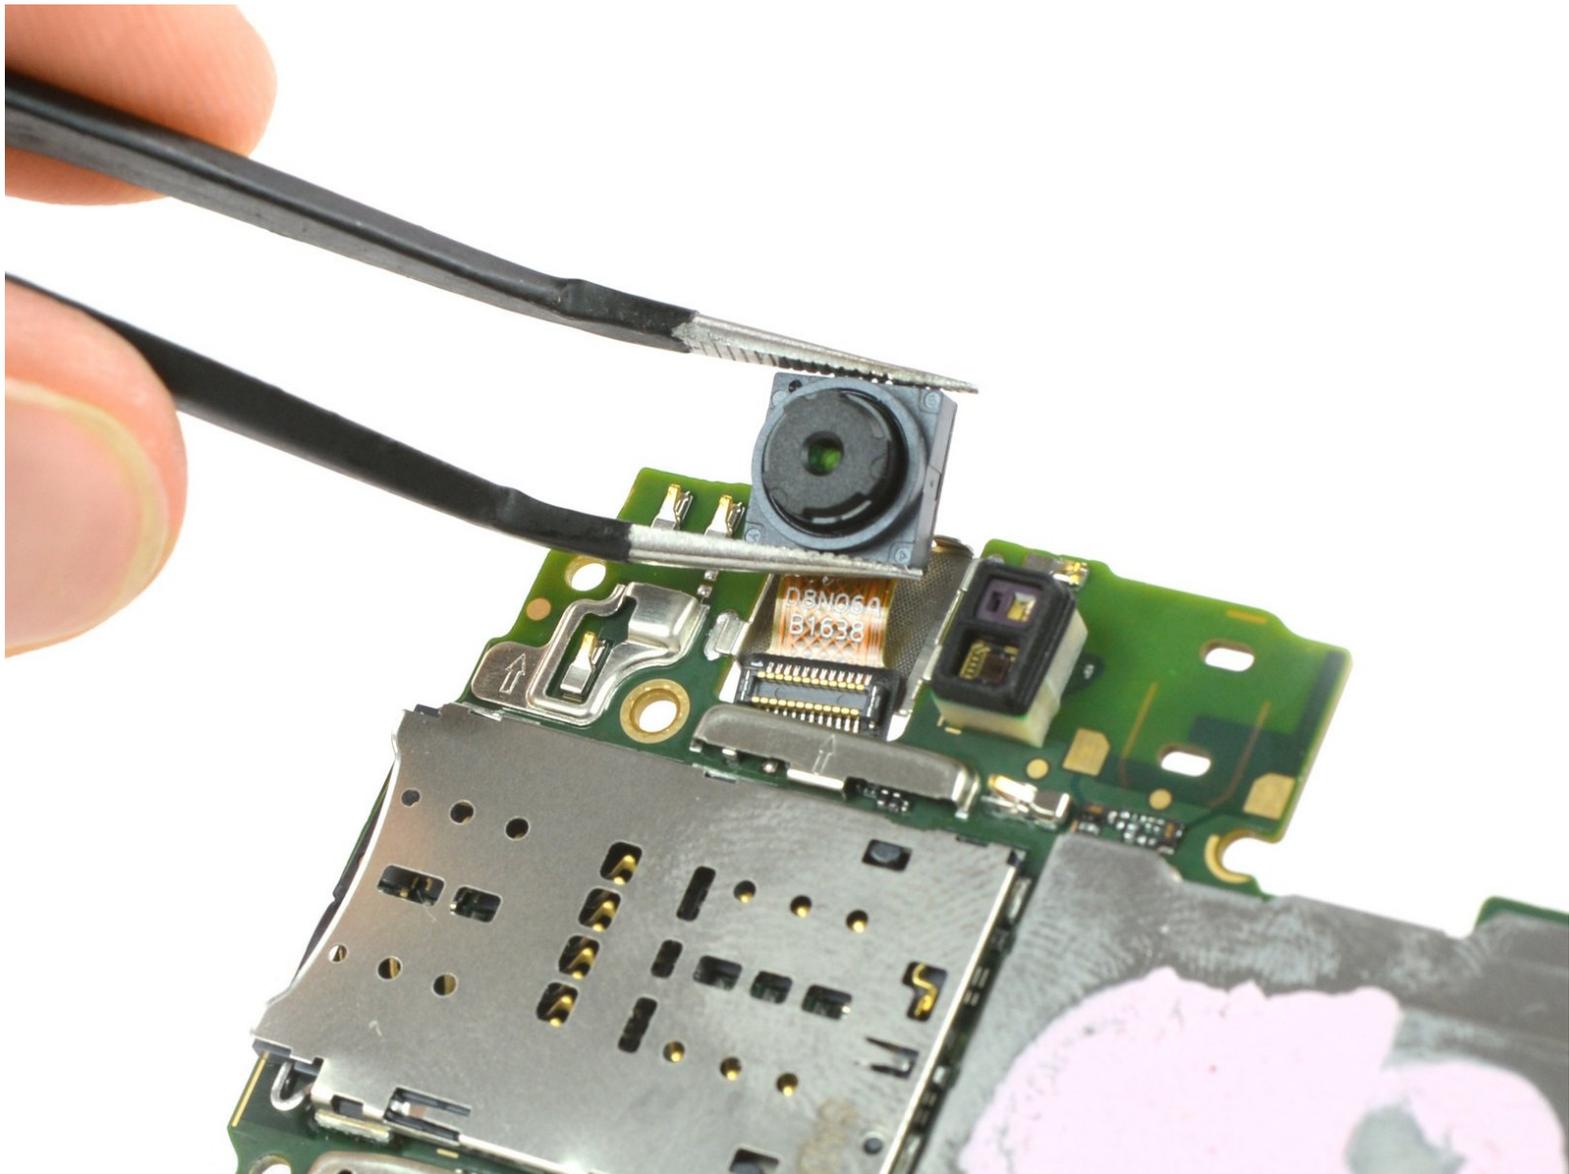

INTRODUCTION

Use this guide to replace the front camera in your Huawei P9 Lite.

TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
 - [Plastic Cards](#) (1)
-

Step 1 — Back Cover




- Use an opening pick to unclip the rear cover, starting from the bottom corner.
- Work your way around counterclockwise and carefully pry the plastic tabs open one by one.

Step 2




- ⓘ There is adhesive underneath the back cover that holds it to the battery and the metal plate at the top.
- ⚠ Be careful with the flex cable at the right hand side.
- Twist the opening pick to lever the back cover away and loosen it from the adhesive.

Step 3

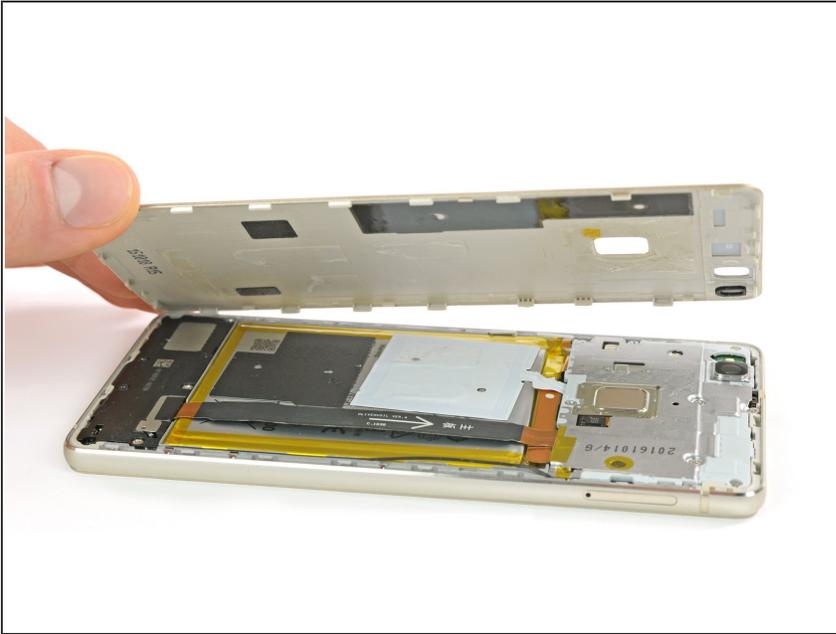


- When the back cover is freed from the adhesive you can pop it off by hand completely.

Step 4 — Motherboard Shield

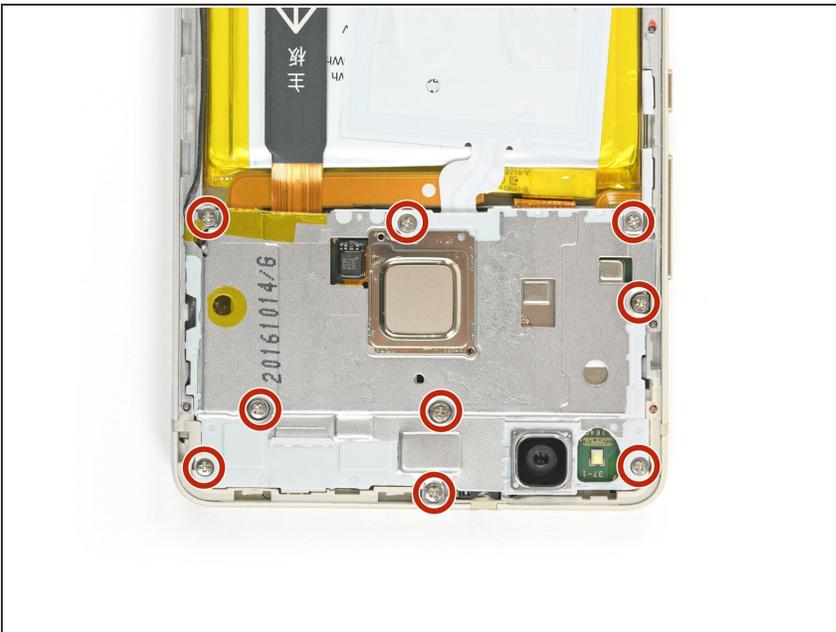

- Remove the nine Phillips #00 screws that secure the metal shield plate.
- ⓘ Some screws may be covered with tamper proof stickers. Remove them to ensure a proper seating for your driver.


Step 5

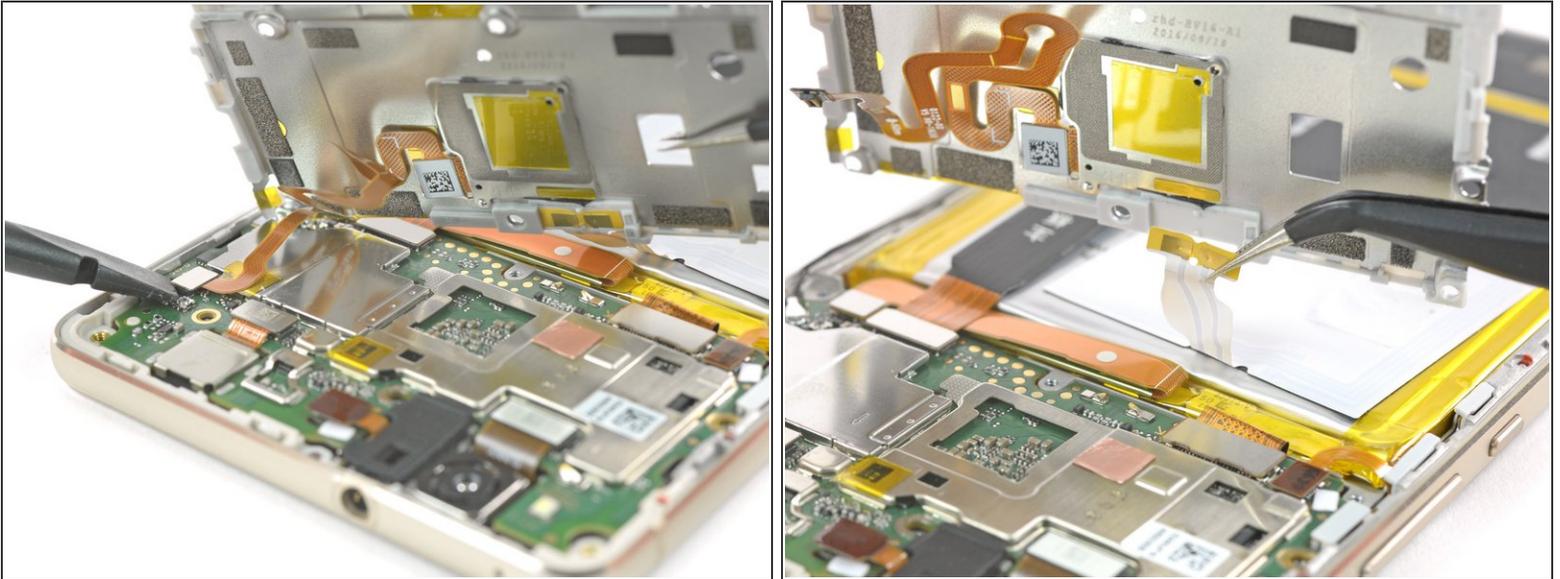

⚠ Do not remove the shield plate yet, it is attached by a connector and an adhered cable.

- Use a spudger to disconnect the fingerprint sensor from the motherboard.
- Peel the NFC antenna cable off of the metal plate.

Step 6 — Motherboard

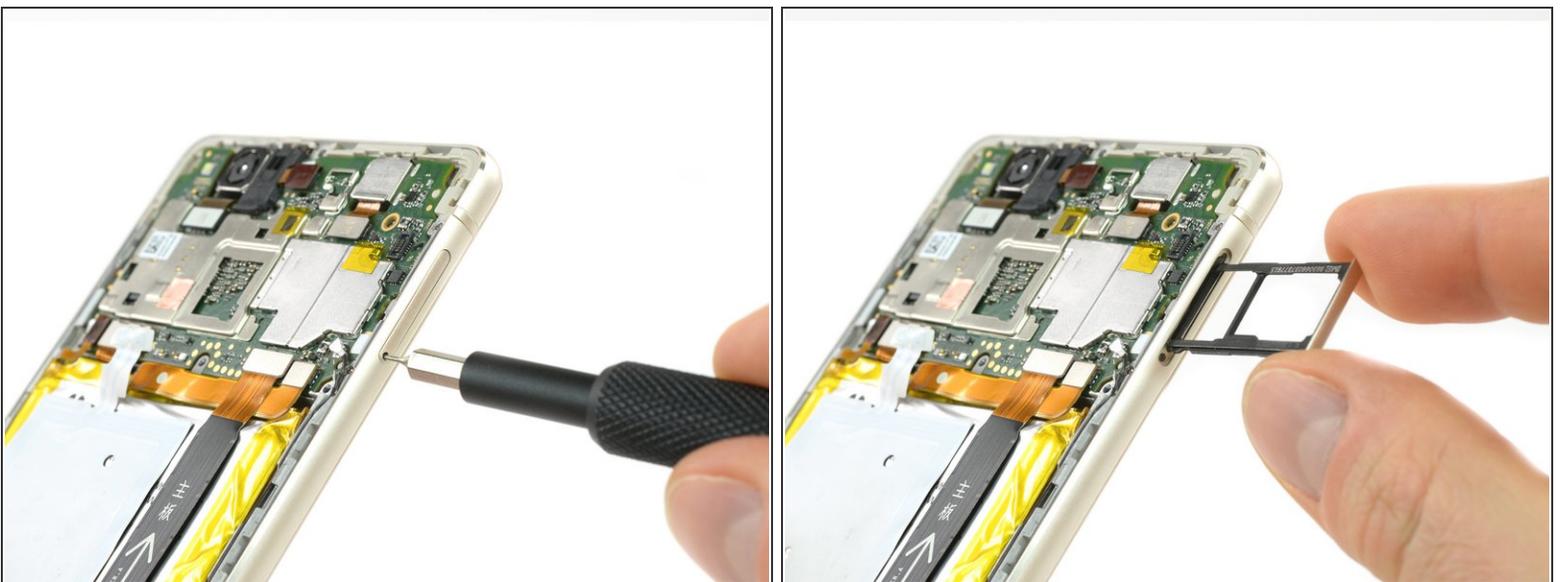


- Remove the SIM card tray.

Step 7



- Disconnect the motherboard flex, the battery flex and the antenna cable.

Step 8

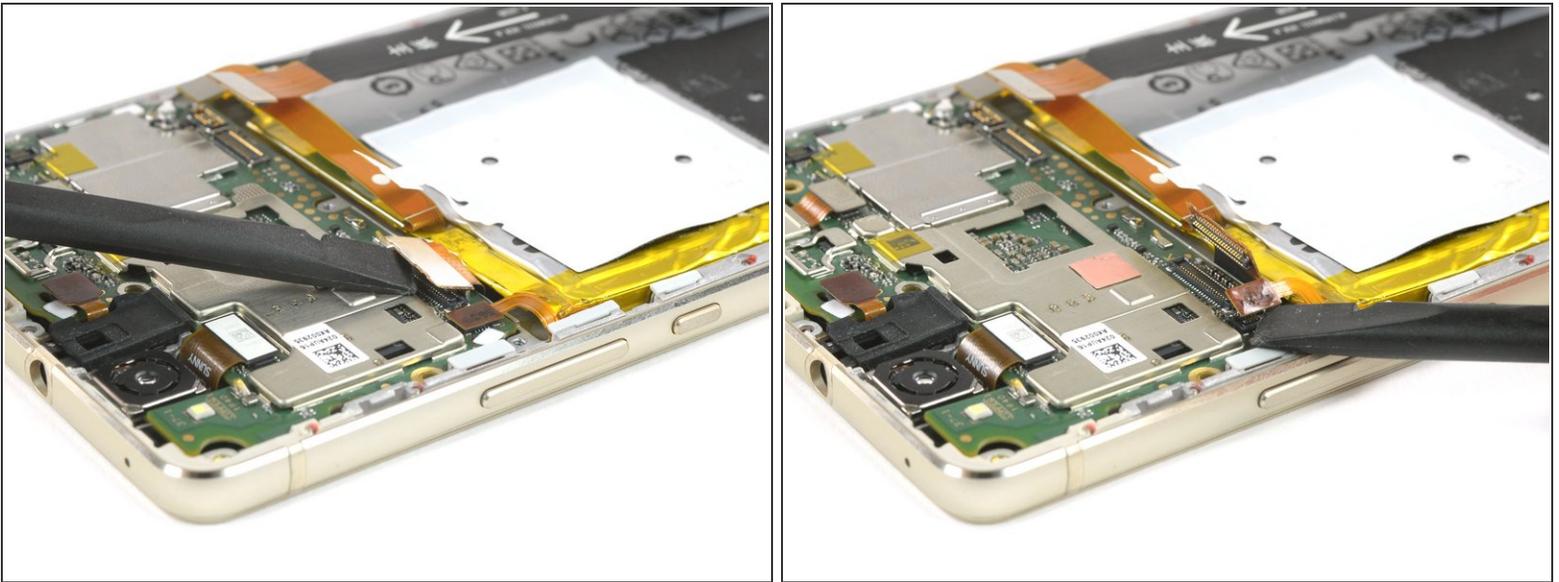

- Disconnect the display flex and the power and volume button cable.

Step 9



- Unplug the rear camera and the headphone jack.

Step 10




- Take the camera and the headphone jack out of their recesses.

Step 11



- Use a spudger to lift the motherboard carefully.
- Remove the motherboard assembly.
- ☑ On the back of the motherboard there is a thermal pad (pink rubber-like gob) for heat dissipation. If you are about to replace the display assembly, and the thermal pad broke or is too dried out, you might want to [replace it with a new one](#).

Step 12 — Front Camera

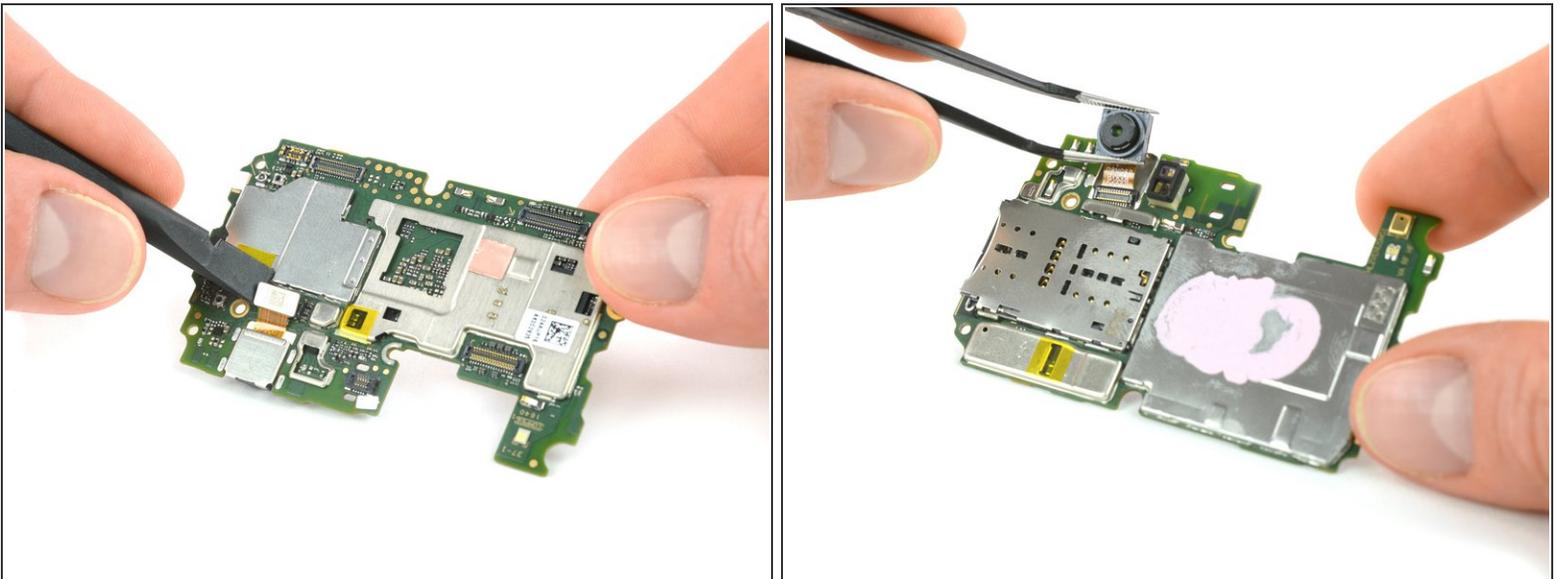

- Disconnect the front camera flex from the motherboard.
- Flip the motherboard over and thread the flex cable through the opening and take the camera away.

To reassemble your device, follow these instructions in reverse order.