



Sony Cyber-shot DSC-P100 LCD Screen Replacement

This guide shows how you can easily replace the...

Written By: Katie McCraw



INTRODUCTION

This guide shows how you can easily replace the LCD screen to make a quick and easy replacement.

TOOLS:


- [Heavy-Duty Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Casing



- Remove the four screws from the casing.

Step 2

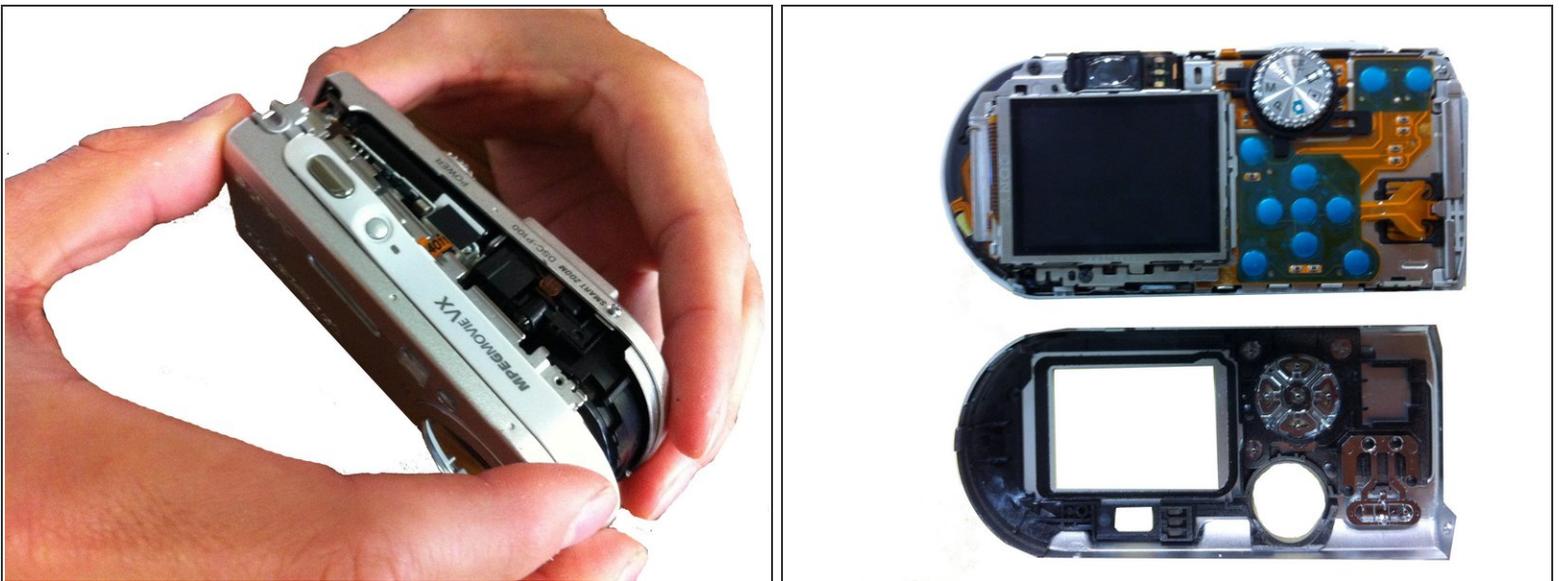



- Carefully pull the back casing away from the camera.

Step 3 — LCD Screen




- Using a pry tool, gently pry the top right corner of the LCD screen. Pry the screen until the four tabs release it from its current position.

Step 4

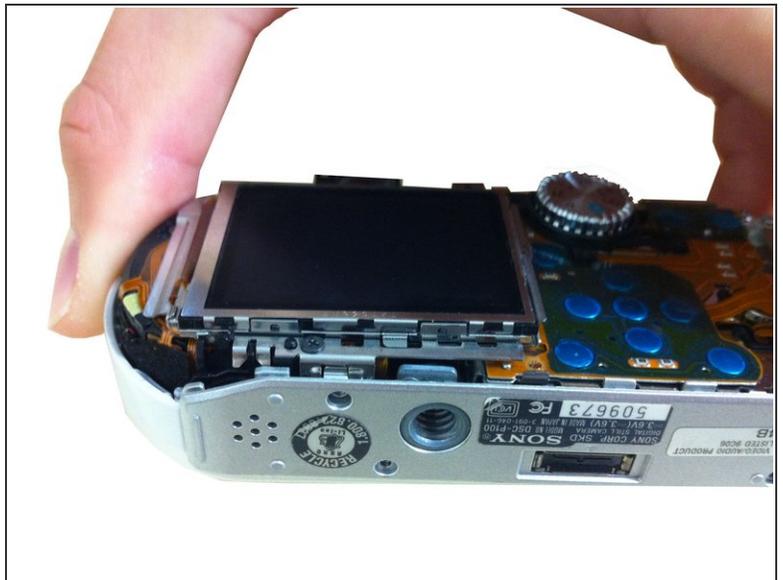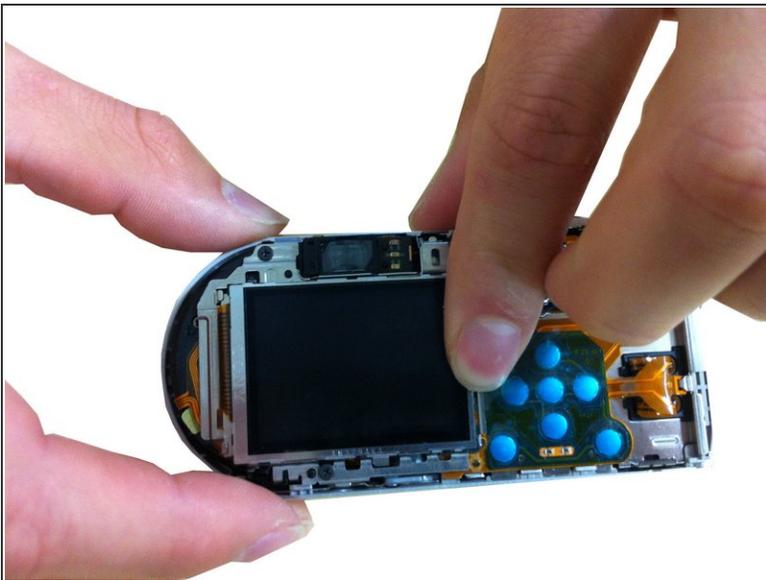

- Push the metal tab on the right side of the screen until the plate underneath the LCD screen is released.

Step 5

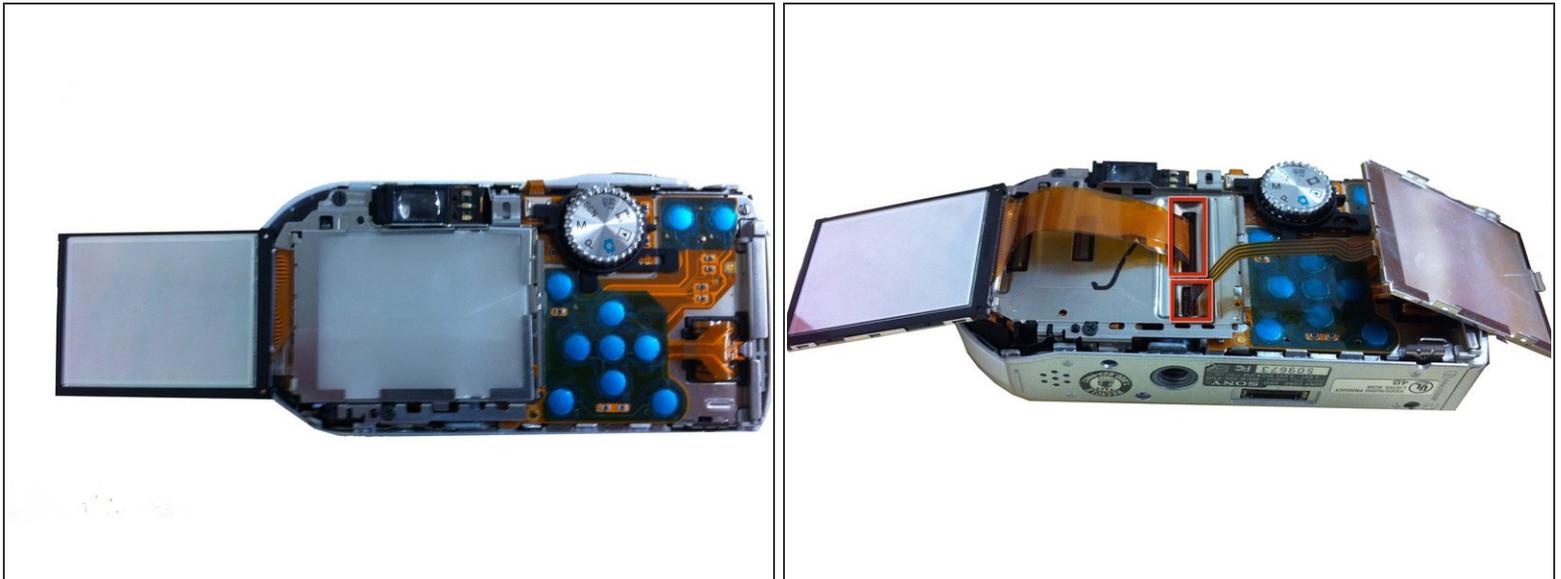

- Unfold the LCD screen and the plate underneath.
- Now visible are the ribbon cables holding the screen and plate in place.

Step 6



- Remove the LCD screen plate by gently pulling upward on the ribbon cable until the screen is removed from the camera.

To reassemble your device, follow these instructions in reverse order.