



Bose SoundTouch Portable Speaker Battery Replacement

Replace speaker battery on your Bose SoundTouch Portable.

Written By: Chelsea Martin



INTRODUCTION

A simple tutorial on replacing the unit's battery.



TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Speaker Battery



- Remove the two T-10 machine screws at the bottom of the device.

Step 2



- Turn the device around.
- From the top, lightly push down the back cover to release it.
- Lift the bottom of the cover and pull it up.

Step 3



- Remove the two T-10 machine screws, then pull the battery straight out.

To reassemble your device, follow these instructions in reverse order.